



www.regulus.eu



COMPENSATOR FOR HEAT PUMPS

Installation and Operation Manual
COMPENSATOR FOR HEAT PUMP HEAT EXCHANGER PROTECTION

EN


COMPENSATOR FOR HEAT PUMPS

COMPENSATOR FOR HEAT PUMPS

Compensator **code 16757** is designed to protect a plate heat exchanger of a heat pump condenser from being torn by frost. Avoid stretching the compensator so that any deformities are easily visible. If you have a suspicion that the heat pump could have frozen (e.g. after a long power outage during freezing outdoor temperatures), check the compensator. **If a deformity occurs, replace the compensator with a new one.**

Install the compensator following Fig. 1 and apply insulation following Fig. 2.

1. Compensator installation

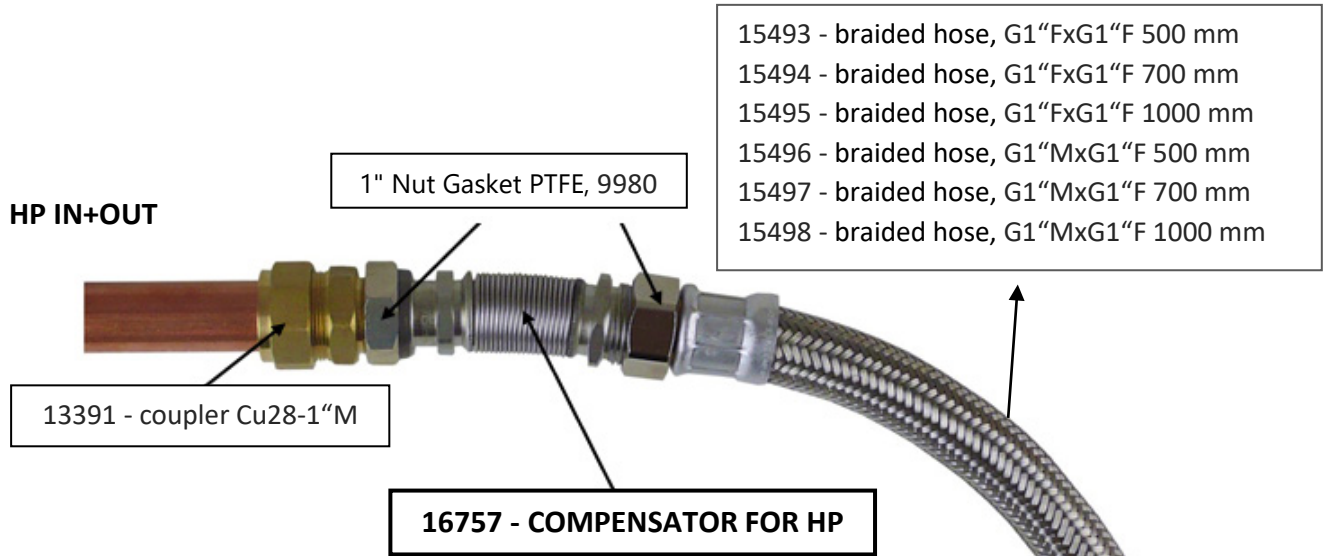

2. Insulation

