



www.regulus.eu



CSE2 MIX F W6 1F

Installation and Operation Manual
CSE2 MIX F W6 1F PUMP STATION

EN

CSE2 MIX F W6 1F

Contents

1.	INTRODUCTION	3
2.	PUMP STATION DESCRIPTION AND DATA	3
3.	PUMP STATION COMPONENTS	4
3.1.	Wilo-Para 25/6 PUMP	5
3.2.	MIXING VALVE W. ACTUATOR	10
3.3.	CHECK VALVE	10
3.4.	FILTER WITH MAGNET	10
3.5.	BALL VALVES	10
4.	PUMP STATION CONNECTION EXAMPLES	12
5.	PUMP STATION INSTALLATION	14
6.	TEMPERATURE SENSOR INSTALLATION	15
7.	OPTIONAL ACCESSORIES	17
	APPENDIX – ACTUATOR ADJUSTMENT	21


1. INTRODUCTION

CSE2 MIX F W6 1F twin-line pump station is designed for mixed heating circuits. It provides flow through the heating system, mixes to the outlet temperature using a motorized mixing valve (controlled by an external controller). The pump station includes a filter with magnet, so it is also suitable for older steel pipe systems. It can be easily mounted on a wall or on a manifold for multiple heating circuits.


2. PUMP STATION DESCRIPTION AND DATA

Main Features	
Description	The twin-line pump station consists of: <ul style="list-style-type: none"> ● Wilo Para pump ● 2 ball valves w. sensor sheath ● check valve ● filter with strainer&magnet ● LK 840 mixing valve w. actuator ● thermometers, insulation
Working fluid	water, antifreeze heat-transfer fluid for heating systems
Installation	vertically on a wall or manifold (125 mm pitch)
Connections	4 x G 1" F
Code	18313

Data for CSE2 MIX F W6 1F Pump Station	
Fluid working temperature	5 - 95 °C
Max. working pressure	10 bar
Min. working pressure	0.5 bar
Ambient temperature	5 - 40 °C
Max. relative humidity	80% non condensing
Pump power supply	1 ~ 230 V, 50 - 60 Hz
Pump station max. power input	46 W
Mixing valve Kvs	6.3 m³/h
Max. pressure difference	5 m H ₂ O (at mixing valve inlets)
Leak rate	< 1% Kvs at 5 mH ₂ O pressure difference (at mixing valve inlets)
Mixing valve power supply	230 V, 50 Hz; Mixing valve power supply
Valve shift time	120 s
Insulation material	EPP RG 60 g/l
Overall dimensions	360 x 181 x 245 mm
Total weight	6.7 kg
Connections	4 x G 1" F

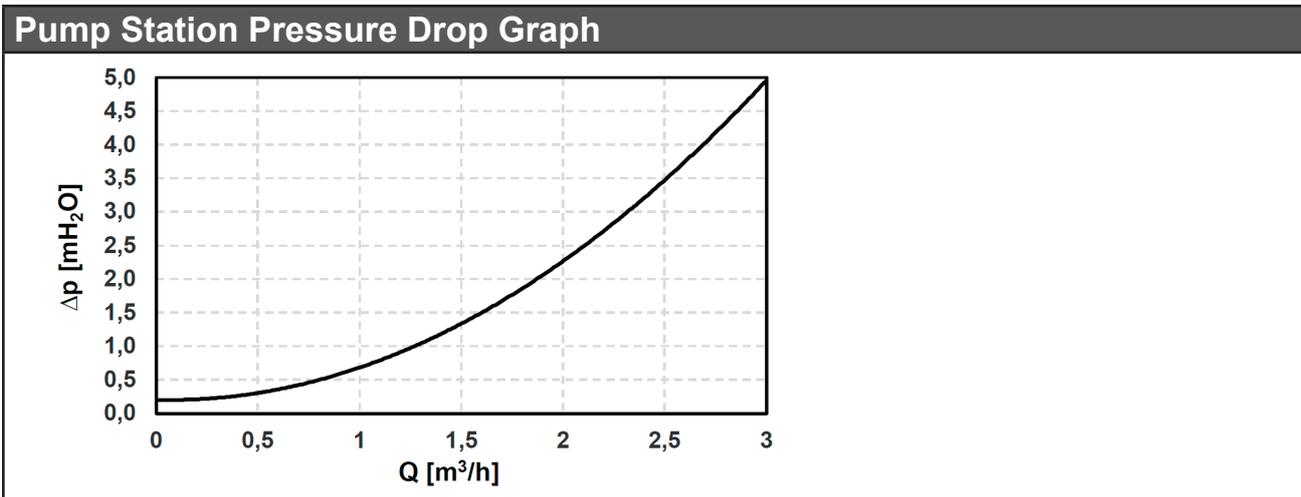

3. PUMP STATION COMPONENTS

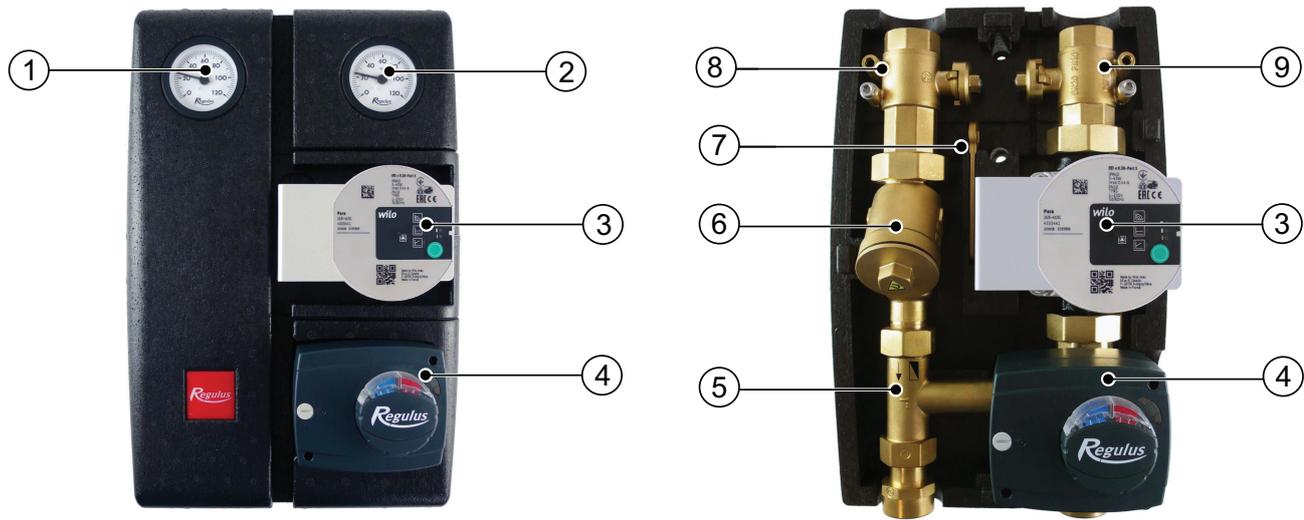


- 1 – Thermometer at the heating circuit return
- 2 – Thermometer at the heating circuit flow
- 3 – Wilo-Para 25/6 circulation pump
- 4 – Mixing valve w. actuator
- 5 – T-piece w. check valve
- 6 – Filter with magnet
- 7 – Lever for ball valves
- 8 – Ball valve w. sheath for temperature sensor (heating circuit return)
- 9 – Ball valve w. sheath for temperature sensor (heating circuit flow)

3.1. Wilo-Para 25/8 SC PUMP

Wilo Para 25/6 SC circulation pump is a wet-running circulation pump permitting to set speed control to $\Delta p-v$, $\Delta p-c$ or $n=\text{constant}$. The operating status and possible faults of the pump are displayed by means of LEDs directly on the pump display. It is used exclusively for the circulation of liquids in hot water heating systems. Operating the pump in other systems or in systems lacking water, containing air bubbles or not pressurized can lead to its rapid destruction.

Wilo Para 25/6 SC Pump Data	
Power supply	230 V, 50 Hz, from an external controller
Power input (min./max)	3 / 43 W
Current (min./max)	0.04 – 0.44 A
Max. speed	4300 rpm
Speed control	frequency converter
Energy Efficiency Index (EEI)	≤ 0.21 by EN 16297/3
IP rating	IPX4D
Motor protection	integrated

Operating Parameters	
Fluid working temperature	0 - 100°C at 58 °C ambient temperature
Max. static pressure	10 bar
Max. head	6.7 m

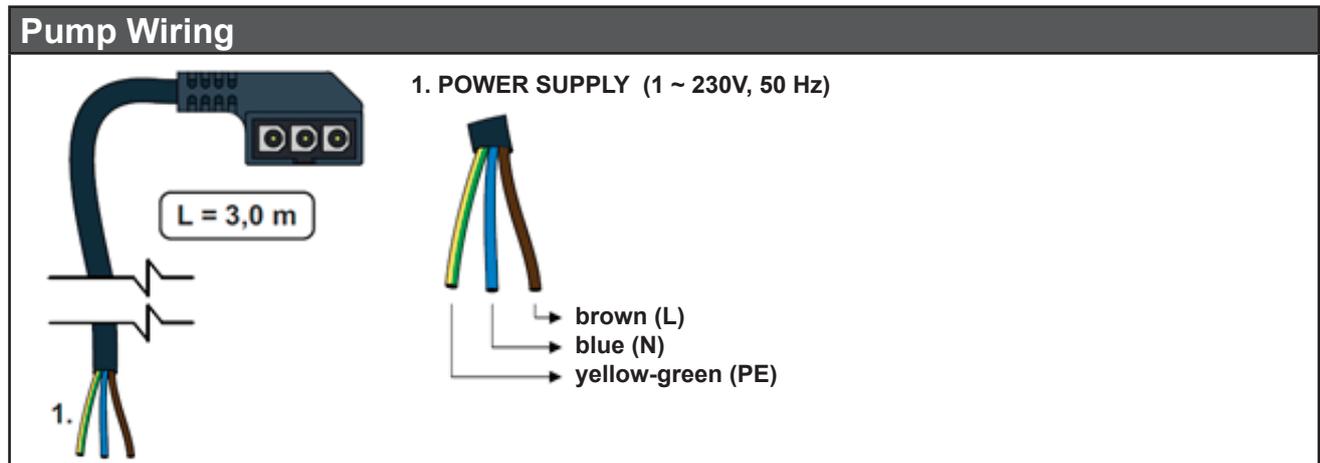

LED indication	state description and possible fault reasons	
	green is lit	1 - pump is running in trouble-free operation
	red is lit	1 - rotor is blocked 2 - electric motor winding defect
	flashing red	1 - power supply lower/higher than 230 V 2 - electric short circuit in pump 3 - pump overheated
	flashing red and green	1 - unforced fluid circulation through the pump 2 - pump speed lower than desired 3 - air in pump

TROUBLESHOOTING, RESTART, FACTORY SETTINGS

If air is present in the pump:

Activate the pump venting function by pressing and holding the operating button for 3 sec. The upper and lower rows of LEDs will flash in 1sec interval, see Fig.

Pump venting takes 10 minutes, after that the pump returns to current mode. In order to cancel pump venting, press and hold the operating button for 3 sec.




Operating button locking/unlocking

To lock the operating button, press it for 8 seconds.

The selected setting then starts flashing and cannot be changed.

To unlock, hold down the operating button again for 8 seconds and the LEDs will stop flashing.

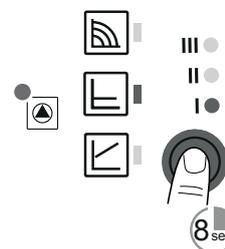

Manual restart

If the pump has been inactive for a long time or is blocked, activate the manual restart by holding the operating button for 5 seconds. The LEDs flash sequentially clockwise. The manual restart takes max. 10 minutes before the pump returns to normal operation. To cancel the manual restart, hold down the operating button for 5 seconds.

If the pump does not get unblocked, contact a qualified technician.




Factory settings

To return to the factory settings, press and hold the operating button for at least 4 seconds (all LEDs flash for 1 second) and turn off the pump by unplugging. When switched on again, the pump will run at the factory settings.

PUMP CONTROL

Constant speed operating mode and pump performance curve III are preset as factory settings for the PARA SC pump. After switching on, the pump runs at the factory setting or at the last setting. The settings can be changed using the operating button, see below.

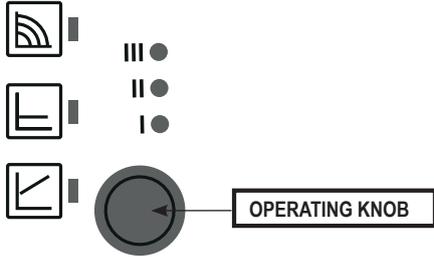

Briefly press the control button to:

select the pump operating mode: constant speed, Δp -v or Δp -c and the pump performance curve (I,II,III).


Press and hold the operating button for the specified time to activate:

- Pump venting function - hold the control button for 3 seconds.
- Manual restart - hold the operating button for 5 seconds.
- Locking/unlocking the operating button - hold the button for 8 seconds.
- Factory setting - hold the control button for at least 4 seconds and switch off the pump by disconnecting it from the mains.

SETTING THE PUMP SPEED CONTROL MANNER

Briefly press the operating button for 1 second to select the pump speed control manner and pump performance curve. LEDs show pump settings (operating mode Δp -v / Δp -c / n=const and the respective performance curve).

	LED indicators	Operating mode	Performance curve
1		constant speed	II
2		constant speed	I
3		Δp -v variable	III
4		Δp -v variable	II
5		Δp -v variable	I
6		Δp -c constant	III
7		Δp -c constant	II
8		Δp -c constant	I
9		constant speed	III

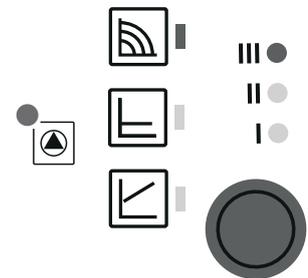

PUMP SPEED CONTROL

The following speed control can be selected:



- Variable differential pressure
- Constant differential pressure
- Constant speed

$\Delta p-v$
 $\Delta p-c$
 $n=const.$





Variable differential pressure ($\Delta p-v$)

This profile is suitable for use with two-line radiator heating systems to reduce the noise caused by the flow of liquid through thermostatic valves. If the flow in the pipe network decreases, the pump reduces the head in half. This saves electrical energy by adapting the head to the pumping capacity requirement and lower flow velocities.

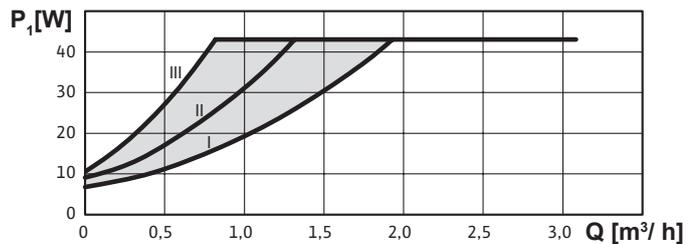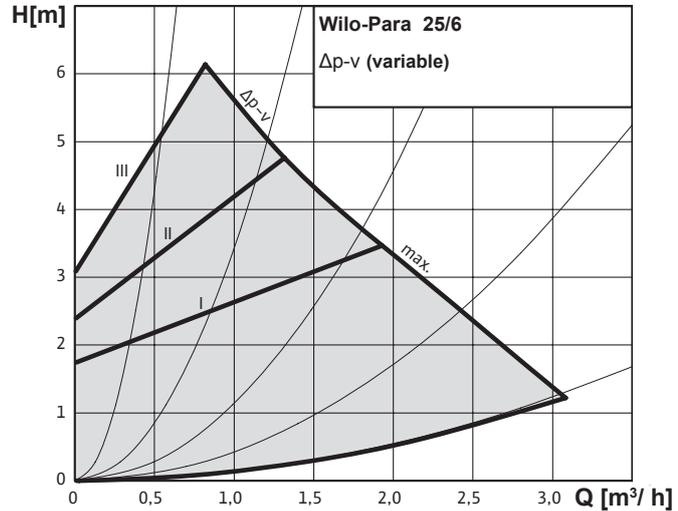

Constant differential pressure ($\Delta p-c$)



This profile is suitable for use in underfloor heating or for piping of bigger diameters. It is also suitable for all applications without variable characteristics (e.g. pumps for HW storage tank heating) and for single-line heating systems with radiators. The pump maintains a constant set delivery head regardless of pumping capacity.

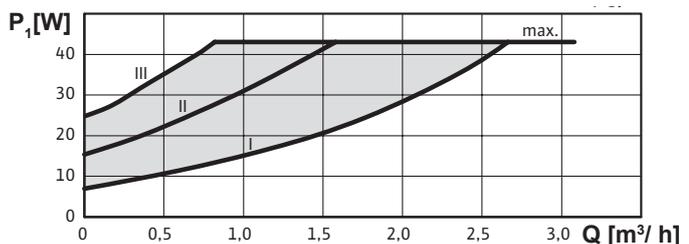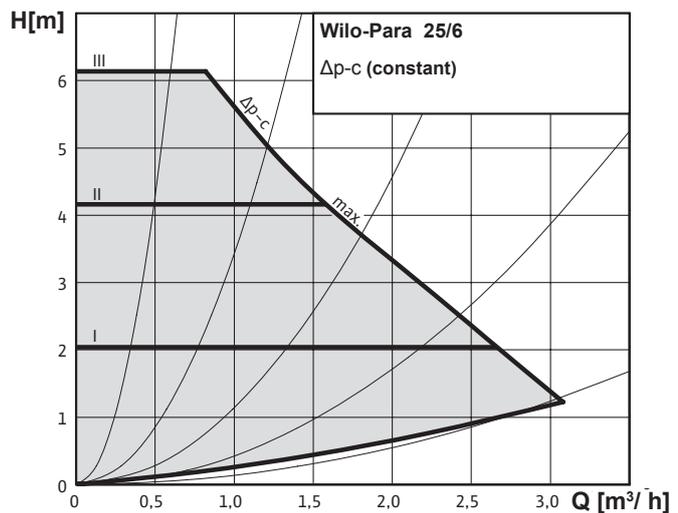



Constant speed (n=const.)


This profile is suitable for use in constant resistance systems that require constant pumping capacity. The pump runs uncontrolled in three preset constant speed stages.

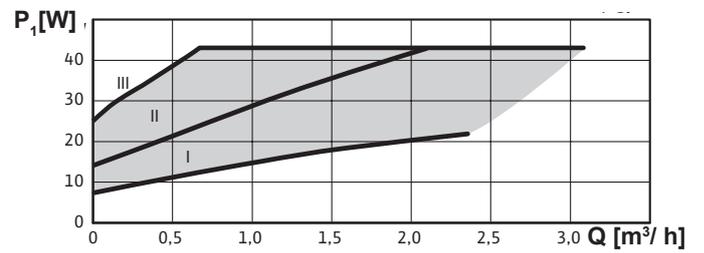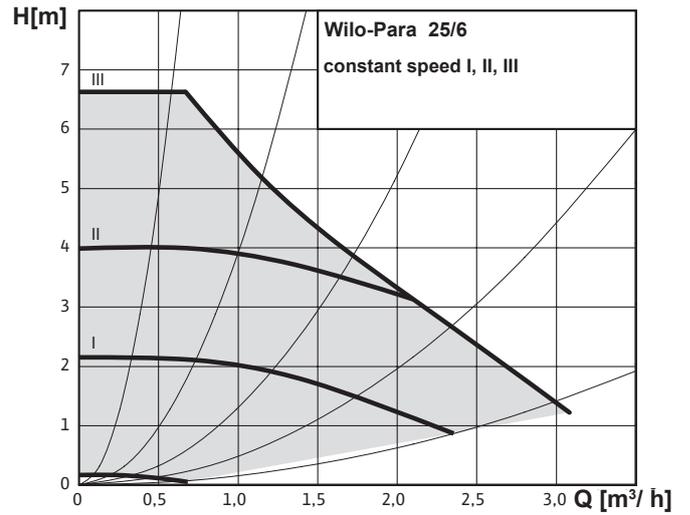

3.2. MIXING VALVE W. ACTUATOR

The LK 840 mixing valve is equipped with a 3-point control actuator. The current valve member position is obvious from the position of the line in the sightglass of the control knob. The slide switch on the actuator housing can be used to switch between motorized and manual control. When the manual control is set, the actuator is controlled by turning the knob.

ACTUATOR ELECTRICAL WIRING

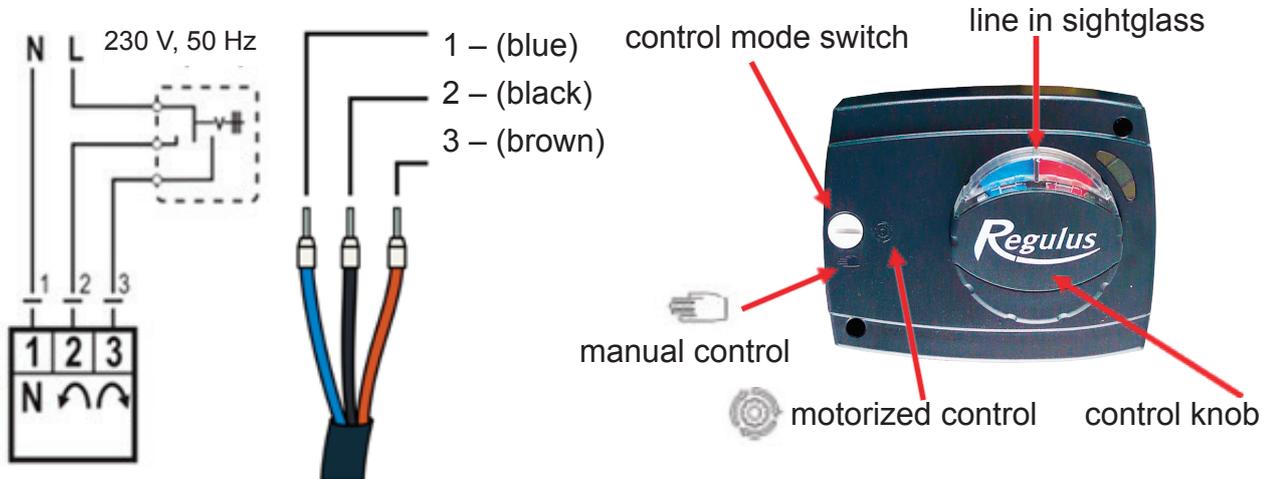

The actuator is factory set to motorized control and ready for operation. Should it be inevitable to remove it or replace, please follow the instructions in the appendix.

3.3. CHECK VALVE

The check valve downstream of the filter prevents natural circulation in the heating circuit.

3.4. FILTER WITH MAGNET

The filter located in the return line of the pump station is designed to collect particles from heating water. It consists of a brass housing, removable stainless-steel strainer collecting coarse dirt, and a brass lid with a magnet that attracts magnetic particles.


The filter needs to be checked regularly, and cleaned when needed. Turn off the circulation pump, close the ball valve upstream of the filter. Water inlet downstream of the magnet is closed by the check valve. Unscrew the filter lid, remove the stainless steel strainer and flush thoroughly. Wipe the impurities on the magnet and re-assemble the filter by inserting the strainer, screwing in and tightening the lid.

3.5. BALL VALVES

Ball valves are intended to isolate the pump station from the heating circuit. Then it is not necessary to drain the heating circuit for servicing (incl. cleaning the filter). In order to have a more solid hydraulic section of the pump station, they are fixed to the rear mounting plate.


The ball valves are controlled by a lever that is placed inside the pump station insulation. The valve is closed or opened by turning the lever by 90°. The state of the valve is indicated by the groove on the control hexagon of the valve. The ball valve can be accessed only after the front section of the insulation is removed. As a result, unintentional closure of the system by an unauthorized person is not possible.

OPEN

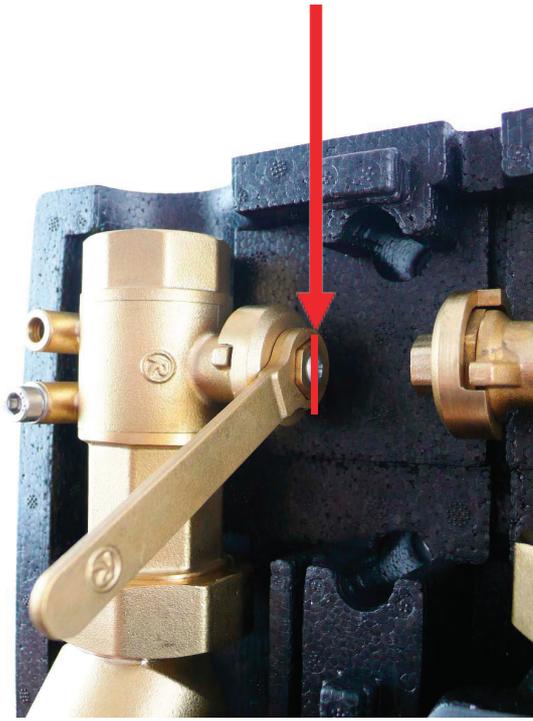


groove in the flow direction

CLOSED

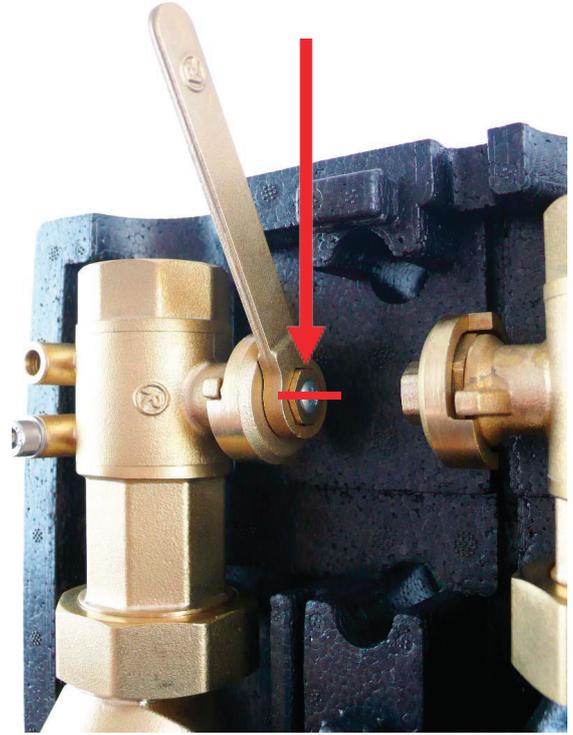


groove perpendicular to the flow direction

4. PUMP STATION CONNECTION EXAMPLES

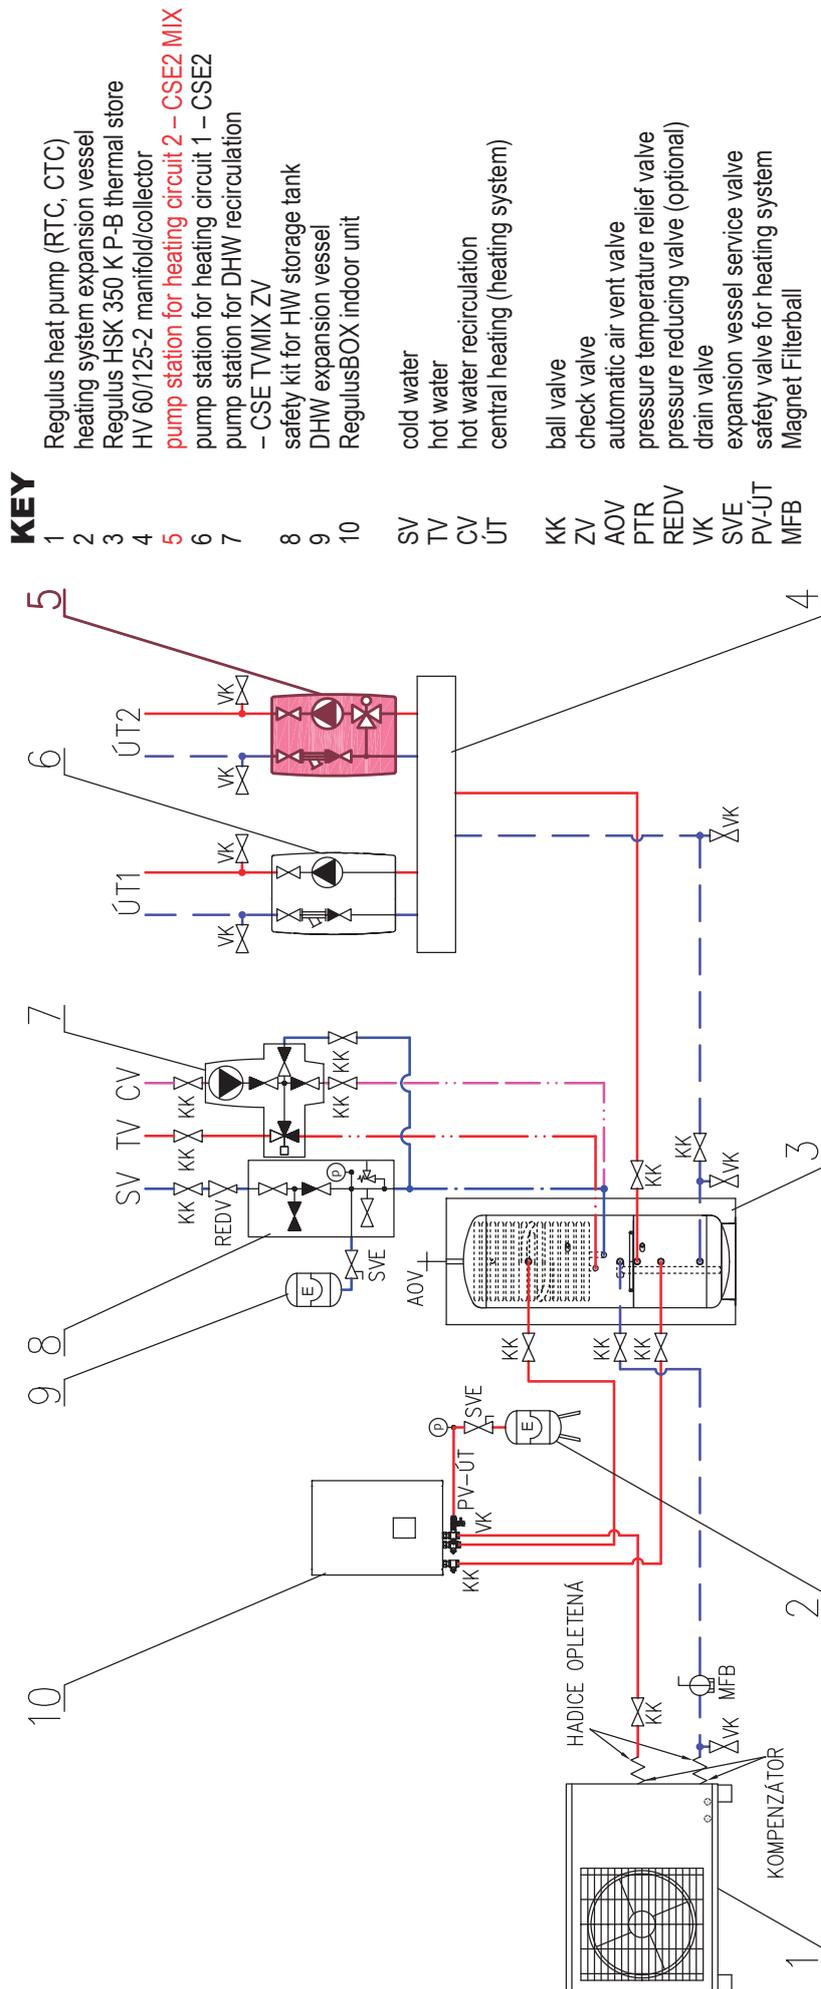


KEY

- 1 HV 60/125-2 manifold/collector
 - 2 hydraulic pressure balancer
 - 3 heating system expansion vessel
 - 4 hot water storage tank (e.g. NBC 170 HP)
 - 5 DHW expansion vessel
 - 6 safety kit for HW storage tank
 - 7 pump station for DHW recirculation – CSE TV ZV
 - 8 boiler (natural gas, electric...)
 - 9 **pump station for heating circuit 2 – CSE2 MIX**
 - 10 pump station for heating circuit 1 – CSE2
-
- SV cold water
 - TV hot water
 - CV hot water recirculation
 - ÚT central heating (heating system)
 - KK ball valve
 - ZV check valve
 - AOV automatic air vent valve
 - PTR pressure temperature relief valve
 - REDV pressure reducing valve (optional)
 - VK drain valve
 - SVE expansion vessel service valve
 - PV-ÚT safety valve for heating system
 - MFB Magnet Filterball

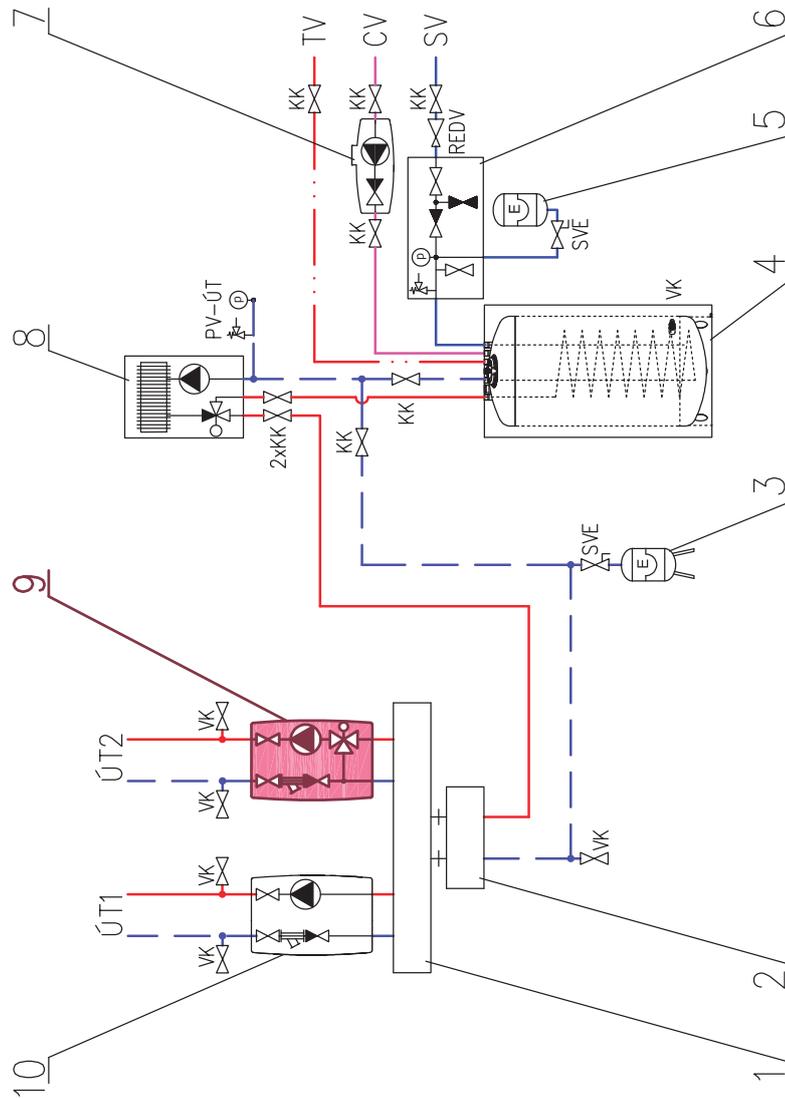

5. PUMP STATION INSTALLATION

The pump station is designed to be mounted on a wall or a manifold with 125 mm connection pitch. In the rear section of the insulation there are two mounting holes for fixing the metal plate to the wall. Mounting holes pitch is 80 mm.

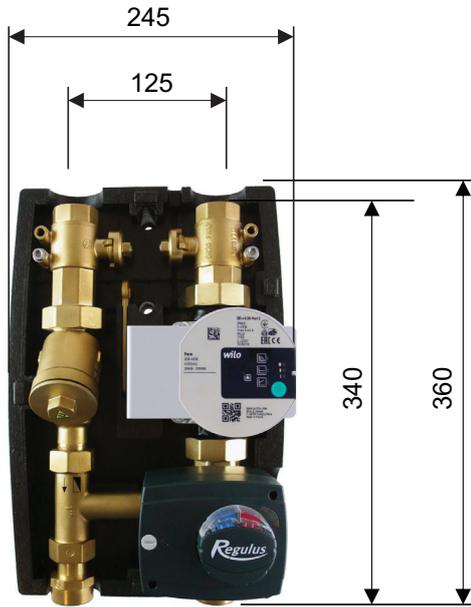

Installation dimensions are shown in the figure below.

The package includes a mounting kit that is used to fix the pump station to the intended place. The mounting kit includes:

- Screw 5x50, round head 2 pcs
- 6.4 stainless steel washer, DIN 9021/A2 2 pcs
- Wall plug 8mm TX 2 pcs



Permissible and prohibited positions of the pump station

Permissible positions

Conditionally permissible positions



(may be used when a filter is replaced by the filter replacement section, code 19017)

Prohibited positions




6. TEMPERATURE SENSOR INSTALLATION

The ball valve housings are equipped with a sheath for the temperature sensor, where the sensor can be inserted and secured by a fixing screw against being pulled out. In the top and bottom section of the insulation there are passages to run the cables through, then it is necessary to cut the appropriate part of the passage lock from the front part of the insulation with a knife, so that the exiting cables are firmly wrapped around by the lock.
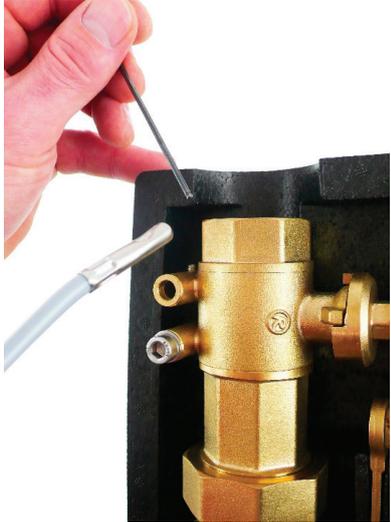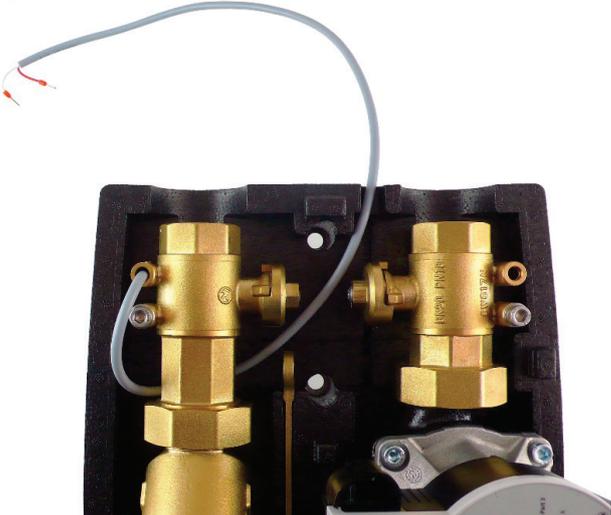
<p>1.</p> <p>Temperature sensor placement</p>	
<p>2.</p> <p>Securing the temperature sensor with the screw</p>	
<p>3.</p> <p>Running the sensor cable through the recess in the insulation</p>	

4.
Trimming the cable passage lock

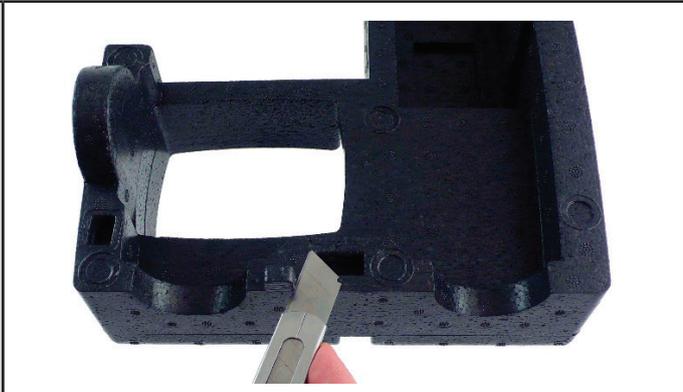

5.
Installed sensors



7. OPTIONAL ACCESSORIES

The following optional accessories are available for the pump station:

A – Filter replacement section for CSE2 Code 19017



Loosen the union nut above and under the filter.



Remove the filter and mount the filter replacement section (code 19017) in its place.



**B – Ball Valve w. drain valve, 1" Fu/F
Code 17415
and Union 1" Fu/M incl. gasket
Code 15695**




Remove both the connecting fittings.



Install the union 15695 in their place, then attach the ball valve w. drain valve (17415) to the union.



C – Union, 1" Fu/M, extended, with check valve, incl. gasket
 (for return line of CSE2 pump stations)
Code 18653
 and **Union, 1" Fu/M, extended, incl. gasket**
 (for flow line of CSE2 pump stations)
Code 18797

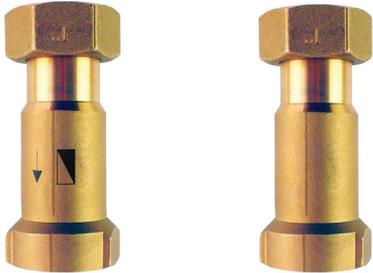

Remove both the connecting fittings.



Install the extended union with check valve (18653) to the return line.



Install the extended union (18797) to the flow line.



**D – Union to connect CSE2 to 5/4” manifold - 1“x5/4“ Fu/F
Code 17920**



Remove both the connecting fittings.




Replace them with the union 17920 intended for connection to a manifold.




APPENDIX – ACTUATOR ADJUSTMENT


- The actuator is set and ready for operation from the production
- The instructions apply only if the actuator had to be removed e.g. to be replaced

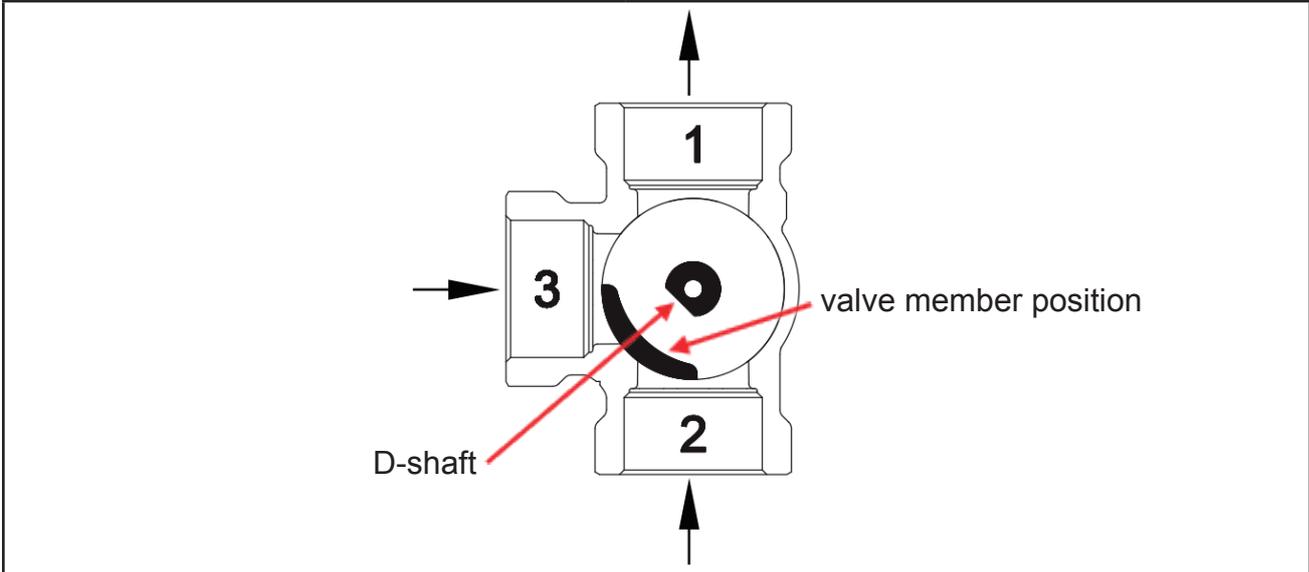


1.
When fitting the actuator, turn the D-shaft in such a manner that the valve member is between inlets 2 and 3 at an angle of 45°.

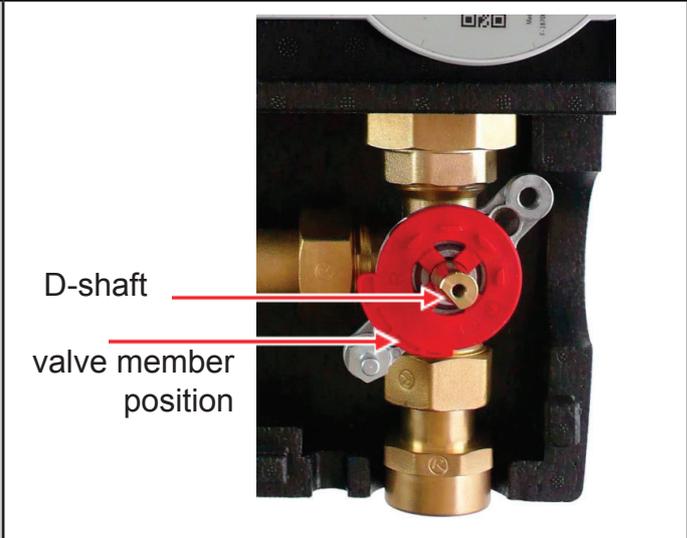

2.
Fit the plastic adapter on the shaft. The flat edge of the shaft and the arrow on the plastic adapter are located on the same side as the valve member.

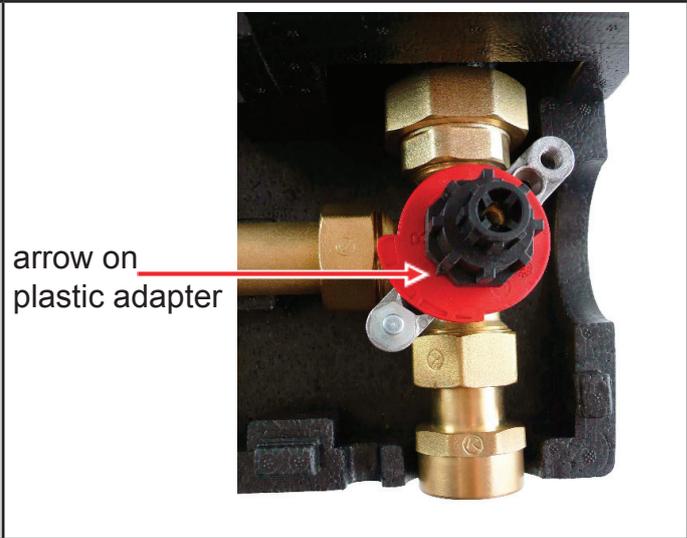

3.
Prior to fitting the actuator on the plastic adapter, switch it to manual control, set the control knob exactly to the middle of its movement range.

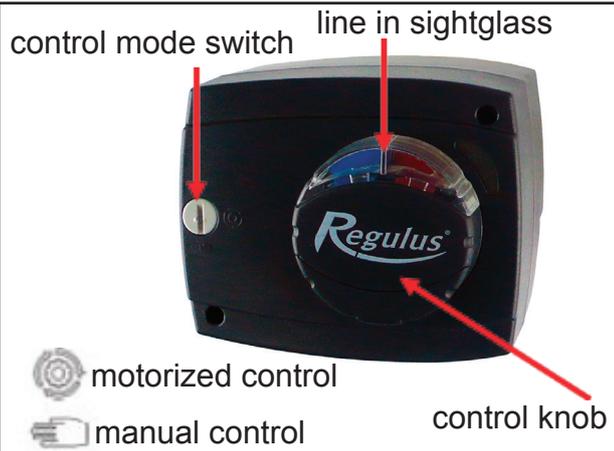

4.
Fit the actuator onto the plastic adapter. Check its turning: the control knob shall be able to turn freely both to left and right by 45° (when turned to the right by 45° the path 3 is closed, and when turned to the left by 45° the path 2 is closed). Having performed the check, tighten the fastening screw and switch back to motorized control.



5.
The actuator shall be installed in the same manner as in the figure.



