

Regulus

www.regulus.eu



SENTINEL KINETIC ADVANCE

Installation and Commissioning Instructions
SENTINEL KINETIC ADVANCE S, SX

EN

SENTINEL KINETIC ADVANCE



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE COMMENCING INSTALLATION.

1. Do not install this product in areas where the following may be present or occur:
 - Excessive oil or a grease laden atmosphere.
 - Corrosive or flammable gases, liquids or vapours.
 - Subject to direct water spray from hoses.
 - Ambient temperatures higher than 40 °C and lower than -20 °C.
 - Possible obstructions that may hinder access to or removal of the unit.
2. All wiring must be in accordance with the current wiring regulations. Installation should be inspected and tested by a suitably qualified person after completion.
3. Ensure the mains supply (voltage, frequency and phase) complies with the rating label.
4. The unit should be provided with a local double pole fused spur fitted with a 3A fuse having a contact separation of at least 3mm. These units must be earthed.
5. Precautions must be taken to avoid the back-flow of gases into the building from the open flue of gas or other fuel-burning appliances.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Young children should be supervised to ensure that they do not play with the appliance.

Installation Rules

1. The installer is responsible for the installation and electrical connection of the sentinel system on site. It is the responsibility of the installer to ensure that the equipment is safely and securely installed and left only when mechanically and electrically safe.
2. All regulations and requirements must be strictly followed to prevent hazards to life and property, both during and after installation, and during any subsequent servicing and maintenance.
3. The unit's condensate drain must be connected to the building's wastewater drainage system.
4. Certain applications may require the installation of sound attenuation to achieve the sound levels required.
5. The unit must not be connected directly to a tumble dryer.
6. The supply and exhaust valves must be fully opened prior to commissioning.
7. The intake air must be drawn from the exterior of the property.
8. The unit should be allowed to stabilise during commissioning for a minimum period of 5 minutes when changing between boost and normal speeds.
9. Ensure that the unit's external grilles (openings) are at least 1000mm apart. The exhaust grille should be located at least 600mm away from any flue outlet. The inlet grille should be located at least 2000mm away from any flue outlet.
10. This product and associated duct installation should be carried out in accordance with local rules.

Disposal

IMPORTANT INFORMATION ON PROPER DISPOSAL OF E-WASTE AS REQUIRED BY THE EC DIRECTIVE 2002/96/EC (WEEE)

Do not dispose of this product as unsorted municipal waste. Please dispose of this product by returning it to the point of sale or to your local municipal collection point for recycling.

Respecting these rules will help to preserve, protect and improve the quality of the environment, protect human health and utilize natural resources prudently and rationally.

The crossed out wheeled bin with marking bar, printed either in the Manual or on the product itself, identifies that the product must be disposed of at a recycling collection site.



WEEE Registration Number: 02771/07-ECZ

Contents

Warnings and Safety Information	2
Installation Guidance	3
About this document	4
Contents	4
Technical Data	5
Product Description	5
Product Dimensions	6
Technical Specification	7
Flow Rate settings	8
Summer Bypass Mode	9
Accessories	10
Installation	11
Overview	11
Wall Mounting the Unit	12
Floor Mounting the Unit	13
Floor Mounting the Unit (Alternate Method)	14
Vertical Discharge Condensate Installation	15
Attach the Ducting	16
Electrical Installation	17
Connect Switches and Sensors	18
Connect the Power Supply	20
Commissioning	21
Powering up the Unit	21
Overview	21
Control Unit Touch Screen Display	21
Modifying Settings	22
Commissioning Screens Summary	23
Modifying Commissioning Settings	25
Operation and Monitoring	34
Control Unit Screens Summary	34
User controls	36
Settings and Performance	37
Commissioning the Unit via USB	41
Default settings	42
Control via WiFi	43
Maintenance	45
Filter Maintenance	45
Periodic Maintenance	46
Spares	47
Troubleshooting	48
Diagnosing a Problem	48
Product fiche	51

Product Description

The Vent-Axia **Sentinel Kinetic Advance** models S & SX Mechanical Ventilation/Heat Recovery (MVHR) is a heat recovery unit designed for the energy efficient ventilation of houses and similar dwellings.

The unit is designed for continuous 24 hour exhaust ventilation of stale moist air from bathrooms, toilets, utility rooms and kitchens. As the stale air is extracted, a heat exchanger within the unit transfers up to 93% of the waste air's room temperature, into the supply air entering the bedrooms and lounge. This design concept provides significant energy recovery on household heat costs, coupled with the optimum comfort conditions.

In addition, a Kinetic Advance SX unit maintains a constant airflow independent of change in system pressure.

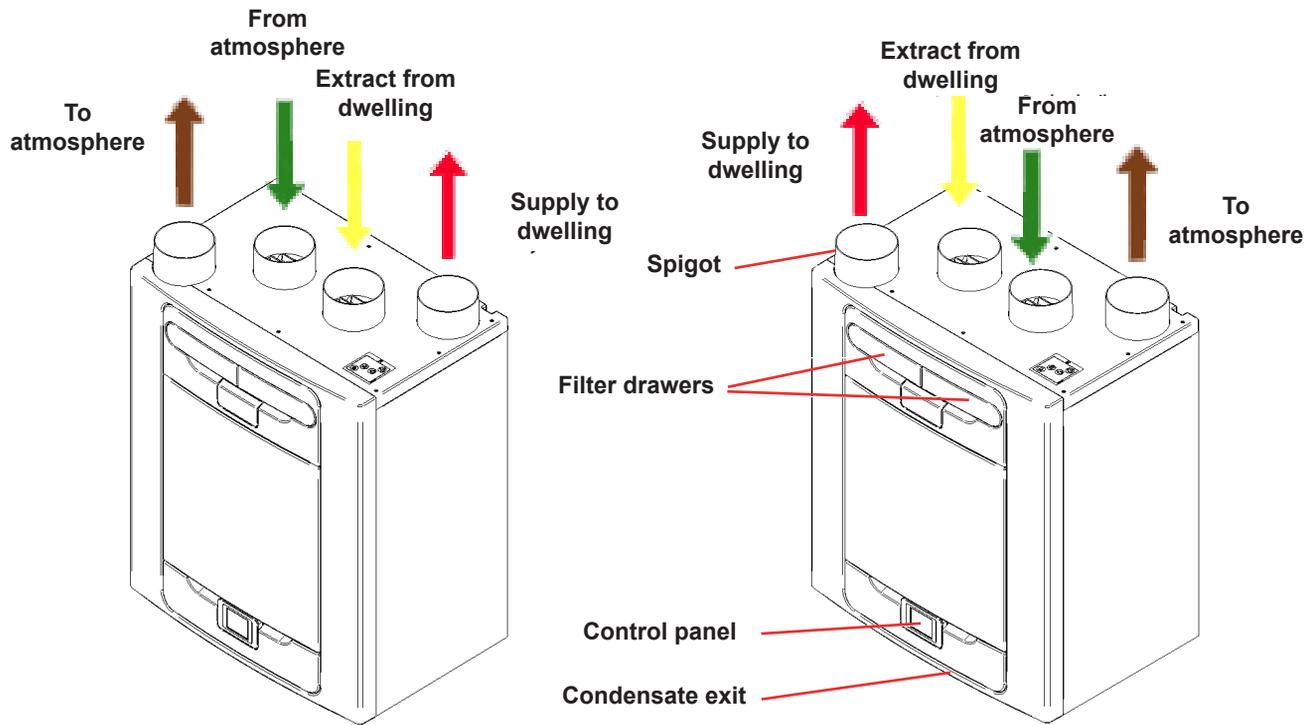


Fig. 1: Sentinel Kinetic Advance with Left Hand and Right Hand spigot configuration

Models
405215
405216

Sentinel Kinetic Advance S
Sentinel Kinetic Advance SX

Product Dimensions

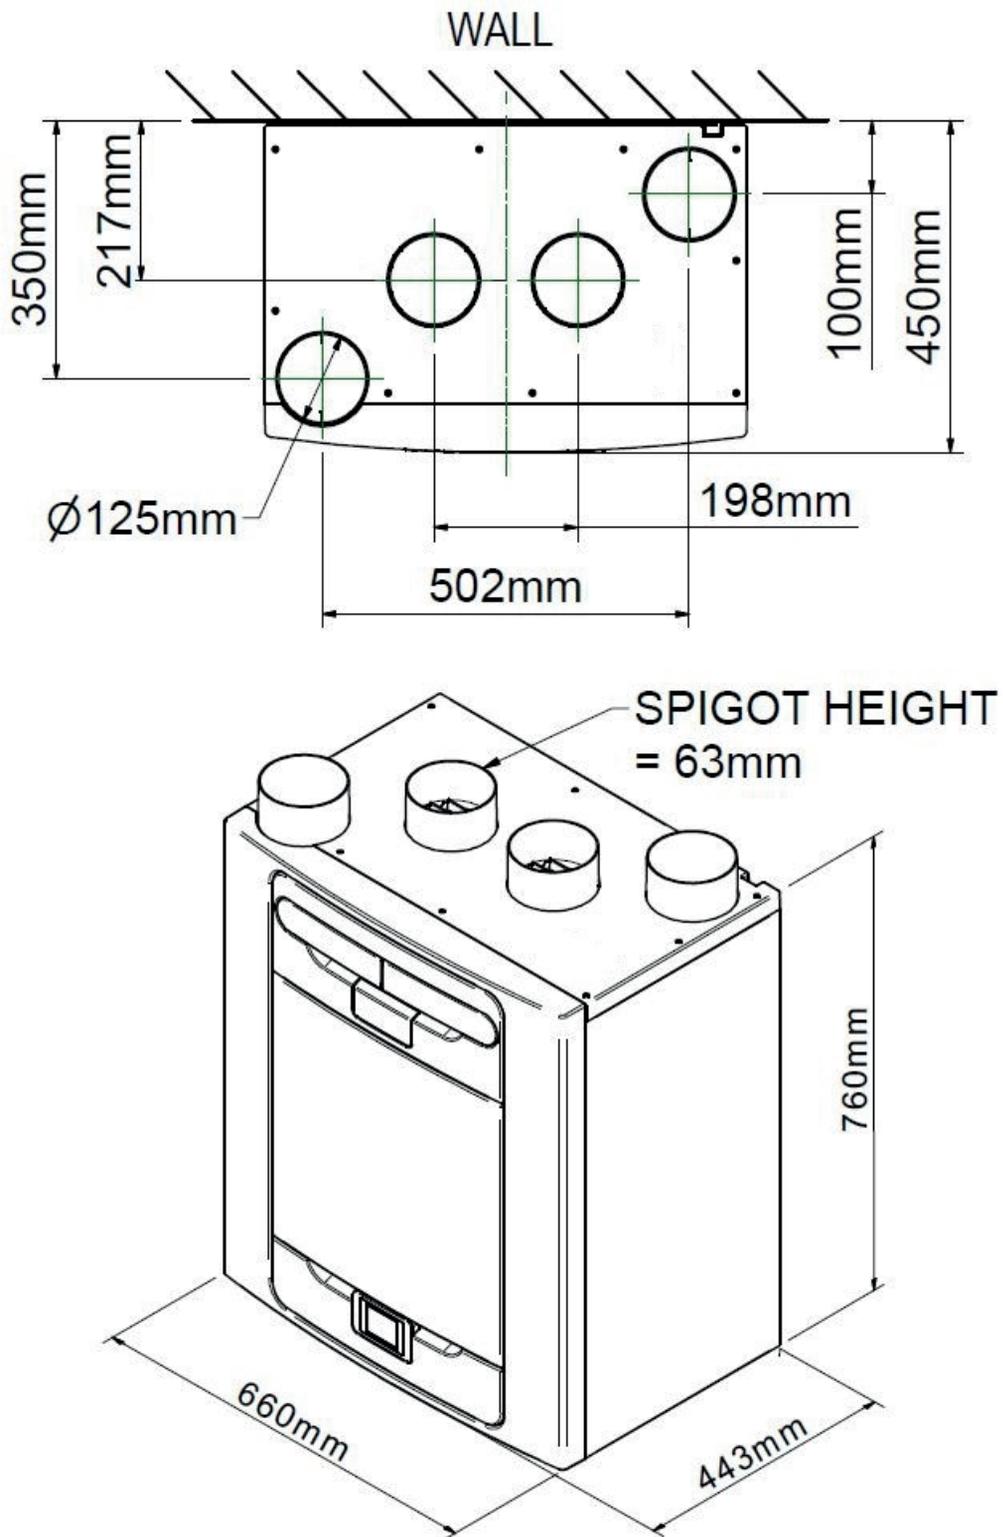


Figure 2: Sentinel Kinetic Advance Dimensions

Remove front cover (see page 17) to view Rating label.
(Label is positioned to the right of the controller).

Technical Specification

Performance	Sentinel Kinetic Advance S		Sentinel Kinetic Advance SX	
Airflow	Low	default 20%	Low	default 20 l/s (72 m ³ /h)
	Normal	default 30%	Normal	default 30 l/s (108 m ³ /h)
	Boost	default 50%	Boost	default 50 l/s (180 m ³ /h)
	Purge	default 100%	Purge	default 98 l/s (353 m ³ /h) at 150 Pa
	Maximum	FID, 115 l/s (414 m ³ /h)	Maximum	default 98 l/s (353 m ³ /h) at 150 Pa
Power				
AC Voltage Input	220-240 V AC (single phase)			
AC Frequency Input	50 Hz nominal			
Supply Fuse	code 9532			
Product Fuse	2 A (located on main PCB)			
Rated Power	max. 190 W			
Physical				
Height (excl. spigots)	760 mm			
Width	660 mm			
Depth	443 mm			
Weight	Unboxed S/SX: 27 kg Boxed S/SX: 32 kg			
Spigot diameter	125 mm			
Condensate pipe diameter	22 mm or 32 mm			
Environmental				
IP Rating	IPX2			
Operating Temperature	-20 °C to +45 °C			
Air Intake Temperature	-20 °C to +45 °C			
Operating Humidity	0-95% RH			
Storage Temperature	-20°C to +45°C			
Storage Humidity	0-95% RH			
Software Version	See: Settings/Performance / Diagnostics / Display Version			

Flow Rate settings

The Sentinel Kinetic Advance has four (4) user defined speeds in addition to the non-adjustable Maximum speed.

User defined speeds can be assigned a Mode name from the list below. (some options may not be available in your region)

- Low
- Normal (Unit default operating mode)
- Boost
- Purge
- Holiday
- Night time
- Party
- Unoccupied
- Over pressure
- Fireplace

Note: The flow rate for each mode is set independently and not defined by the mode name.

When setting up Over Pressure or Fireplace Mode, the supply rate must be set higher than extract rate. This is to provide a positive internal pressure in the dwelling to assist with the initial expulsion of combustion products from the fireplace via the flue.

Fireplace mode does not prevent under-pressure

Mechanical Ventilation with Heat Recovery (MVHR) systems are not designed to provide combustion air.

NOTE: It is the responsibility of the open-flued appliance installer to ensure conformance with the current local building regulations for fuel burning appliances.

Summer Bypass Mode

The Sentinel Kinetic Advance includes a Summer Bypass (SBP) feature to bypass the heat exchanger to provide cooling when the desired Indoor Temperature is above the ambient temperature.

Note that the volume of air provided by a ventilation system is a fraction of that required for space heating or space cooling and will not in itself be sufficient to cool a room. It will however, provide a contribution.

Modes of operation

Bypass Mode	Operation
Off	Bypass feature is disabled
Normal	The unit will run on Normal Mode, unless cancelled
Evening Fresh	The unit will run on the user selected Mode for 5-hours before reverting to Normal, unless cancelled
Night Time Fresh *	The unit will run at the user selected Mode, unless cancelled

Bypass mode will operate when both the Indoor and Outdoor temperature thresholds are exceeded, and the outdoor temperature is below the indoor temperature.

Indoor Temp: This is the maximum desired indoor temperature. Above the set indoor temperature the summer bypass will operate.

Indoor temp should be set, 2-3 °C higher than the central heating thermostat to prevent the bypass operating in winter, and 2-3 °C lower than any air conditioning thermostat if fitted.

Outdoor Temp: This is the minimum allowed outdoor air temperature. The air temperature must be above this value for the Bypass to operate, use this value to prevent the bypass operating in winter.

The suggested Outdoor Temp, is 14 °C, set as appropriate for your region.

Bypass mode will be cancelled when either:

- The internal air temperature drops below the Indoor Temp threshold, or
- The external air temperature drops below the Outdoor Temp threshold

Note: Pressing the Boost button during Evening Fresh and Night Time fresh operation will revert the unit to Normal bypass mode.

It is recommended that the user selected mode chosen for Evening Fresh and Night Time Fresh is higher than Normal flow rate to reduce the indoor temperature more rapidly.

* Night Time Fresh Mode is intended for use through the night when cooling is a higher priority than any increase of noise. Note, that the air noise in your system is influenced by flowrate, ducting design, layout and the size and type of vents used in the rooms. If improvements are required please contact your installer.

Accessories

Some accessories may be included as standard equipment depending on the version.

- **16608 WIFI module (controller accessory)**

The WIFI module is a plug & play accessory that fits next to the Control module. This offers the user instant access to various functions and features for direct monitoring and control of the unit using a smart phone or tablet via the Vent-Axia mobile application.

- **16610 Extension Module (PCB accessory)**

The optional Input Switch Accessory offers four volt-free pairs of switch terminals to allow e.g. boosting from manual switches or a full range of Vent-Axia controllers e.g. humidistats, PIRs and timers.

- **16611 Switched Live (PCB accessory)**

The optional Switched Live (LS) expansion accessory offers two extra switched live inputs (LS2 and LS3) for boosting via light switches (220-240V AC) or Normal/Boost switch. This connection has the advantage of Delay and Overrun features.

Delay enables the prevention of boost airflow between 1-20 minutes.

Over-run enables boost airflow to continue after the light switch has been turned off between 1-30 minutes.

- **16607 Analogue Input (PCB accessory)**

The Analogue Input has two terminals with 0-10V inputs to allow proportional 0–10V control by sophisticated controllers such as CO2 sensors and proportional humidistats.

- **16609 Wired Remote Docking Kit**

The Controller Docking Kit has been designed to allow the Controller module to be removed from the MVHR & mounted remotely to either a single or double gang flush mount back-box of 25mm depth (min). The kit is supplied with a 15m lead and control panel cover.

Before installation of the unit

We advise installers to fix all mains and sensor wiring along with any internal accessories prior to fixing the unit in position, leaving approximately 500mm tails to allow for internal routing.

Inspect the Unit

When taking delivery of the unit, check the items delivered against the enclosed delivery note. Inspect the unit for damage in transit. Each box contains a Kinetic Advance Heat Recovery unit, a wall bracket and accessory pack containing miscellaneous fixings and product documentation.

Unit Installation

Installation should be carried out by a suitably qualified and competent person.


If the unit is wall mounted, the wall should have sufficient strength to support the unit

The unit may also be floor mounted, either directly to the floor or using standard kitchen cabinet feet (not supplied). Ensure that the unit is mounted upright.

Do not use this unit as a support for any other equipment.

Service Void

Clearance must be left around the unit to allow for cleaning and servicing, the dimensions below are the minimum requirements. The condensate drain trap used will dictate the necessary clearance below the unit which may be larger than the minimums.

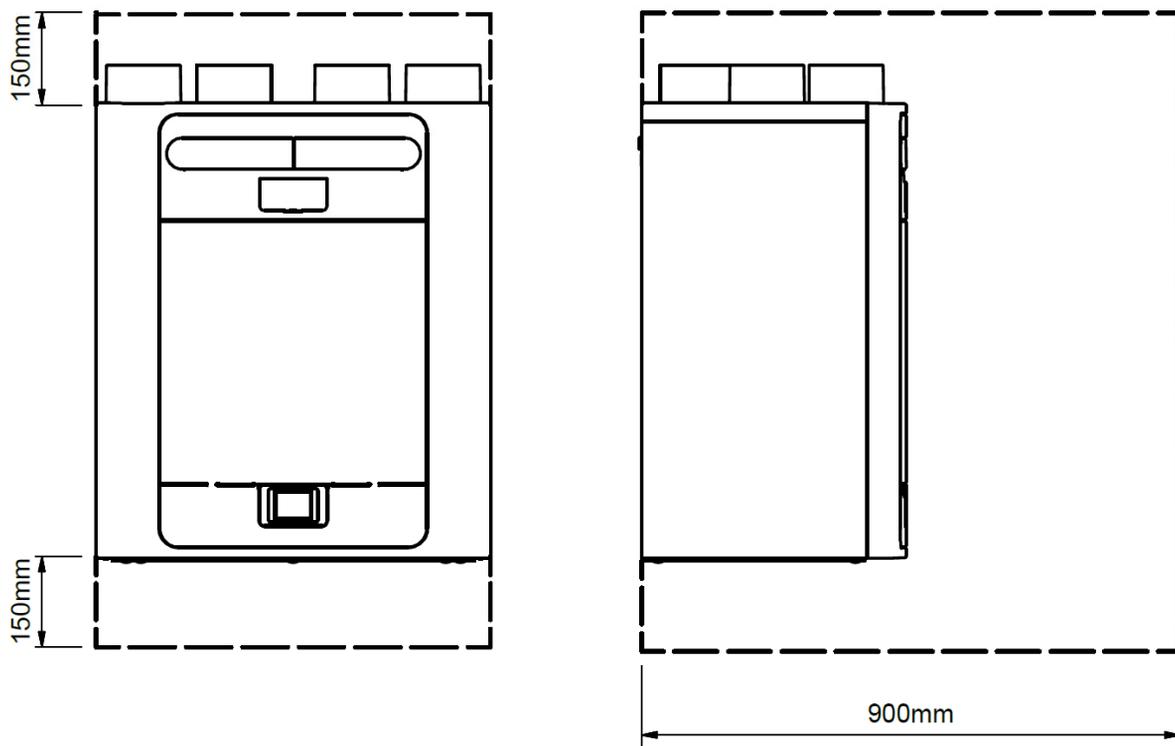


Select Unit Configuration


The unit is configurable as either Left or Right Handed (Default), see page 5 for the spigot configuration. Use the left hand condensate drain for the Left Hand configuration, the right hand drain for the Right Hand configuration.

Wall Mounting the Unit


Step 1: Mark the wall bracket position using the dimensions shown. Note the position of the top of the unit in relation to the wall bracket. Ensure the bracket position is horizontal.

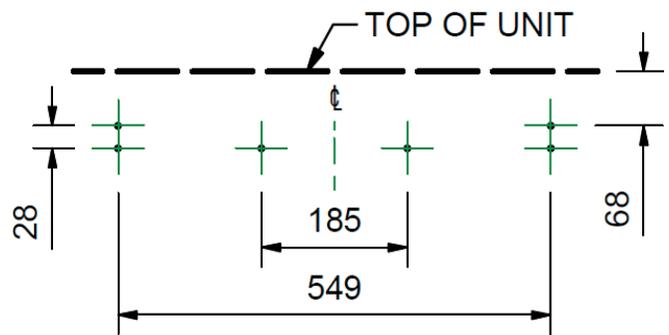


Step 2: Attach the wall bracket to the wall using appropriate fixings.

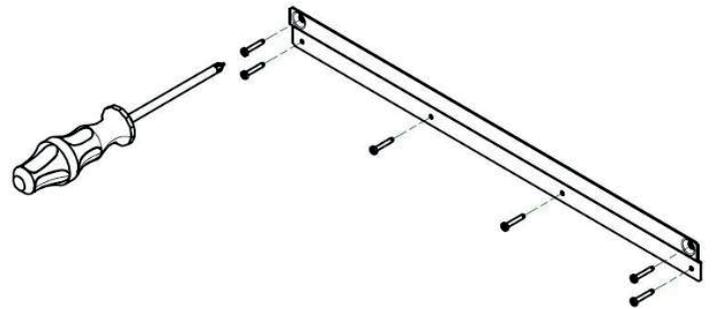

Step 3: Lift the unit and locate the two hooks on the rear onto the wall bracket.


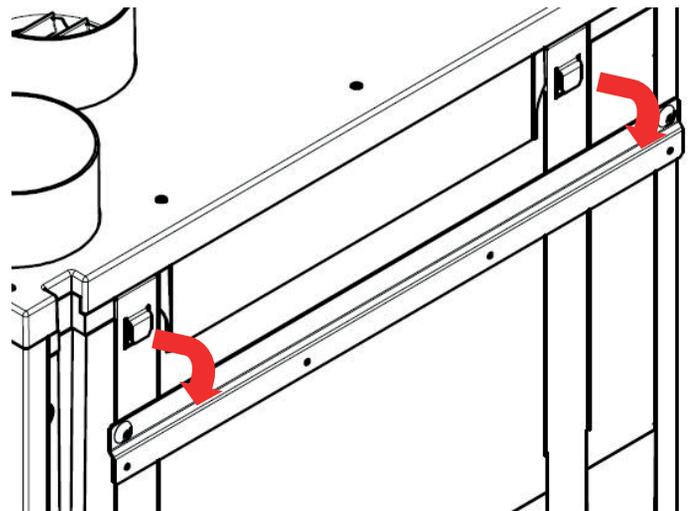


Step 4: Use the two adjusters at the bottom of the unit to ensure the base of the unit is horizontal in both axis. Lock the adjusters in the correct position using the two M6 nuts.

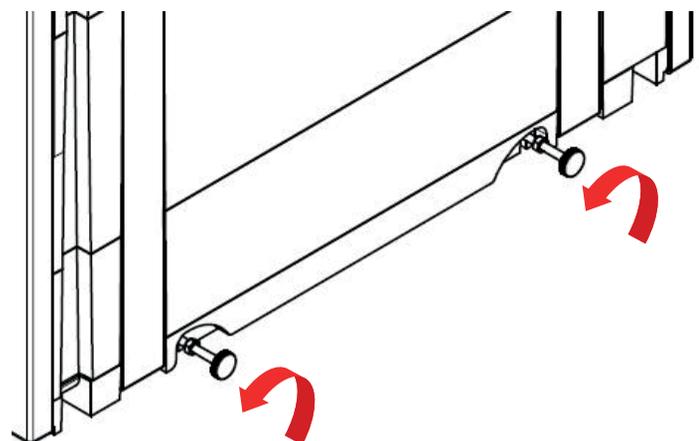

Floor Mounting the Unit

Step 1: The unit has four 12mm deep fixing holes on the underside suitable for 6mm diam. screws. Pre drill a board using the dimensions shown, and cut 2 x 105mm minimum diameter holes for the condensate drain access.

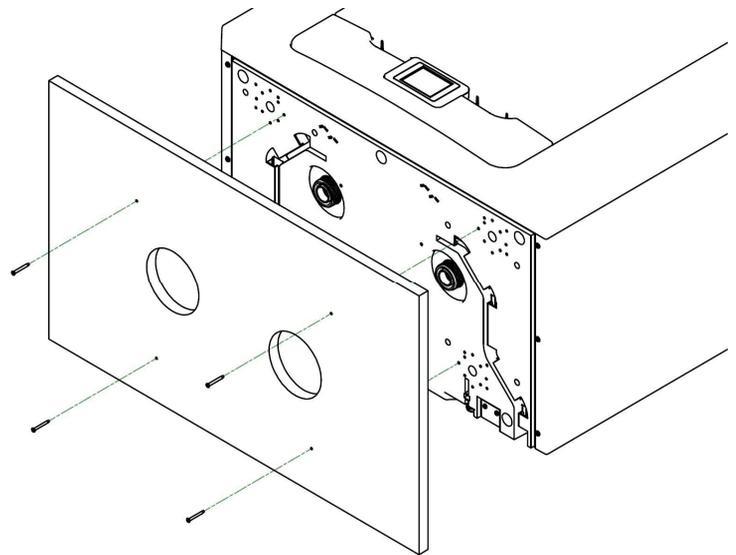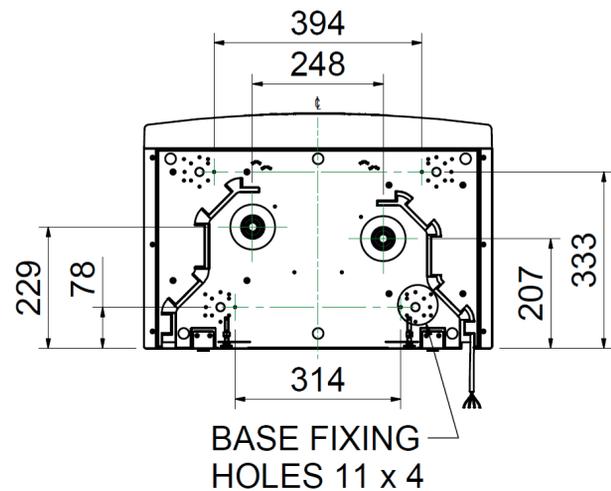


The manufacturer recommends that where possible, the wall bracket is used in conjunction with any floor mount solution to prevent the unit from tipping.

Step 2: Mark the wall bracket position using the dimensions shown. Note the position of the top of the unit in relation to the wall bracket. Ensure the bracket position is parallel to the floor.


Step 3: Attach the wall bracket to the wall or batten using appropriate fixings. (As shown on page 12)

Step 4: Lift the unit and locate the two hooks on the rear onto the wall bracket prior to fixing the unit to the floor. (As shown on page 12)

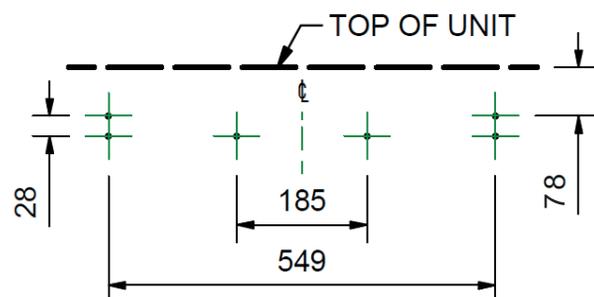


Floor Mounting the Unit (Alternate Method)


Step 1: The unit has four 12mm deep fixing holes on the underside suitable for 6mm diam. screws. The holes are configured to allow fitment of most standard kitchen foot types (not supplied).

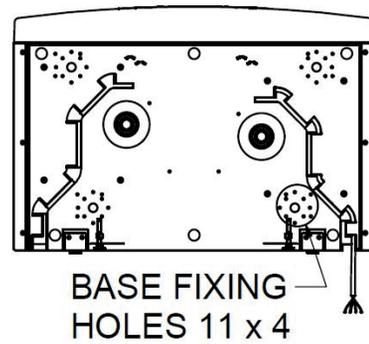

Step 2: Mount your chosen foot type to the underside of the unit using appropriate fixings.

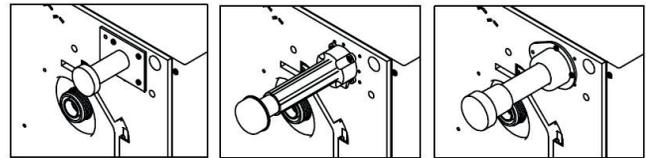

Step 3: Adjust your chosen foot type to ensure the base of the unit is horizontal in both axis.

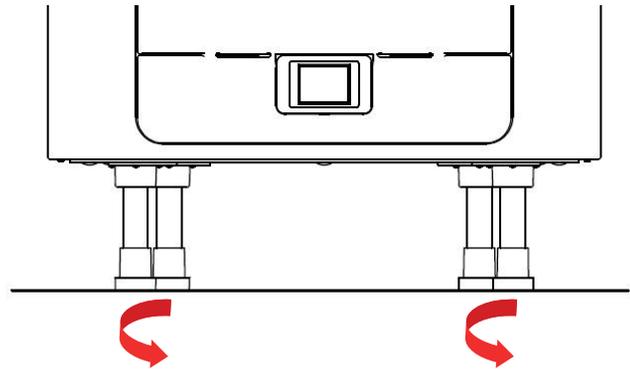


The manufacturer recommends that where possible, the wall bracket is used in conjunction with any floor mount solution to prevent the unit from tipping.

Step 4: Mark the wall bracket position using the dimensions shown. Note the position of the top of unit in relation to the wall bracket. Ensure the bracket position is parallel to the floor.

Step 5: Attach the wall bracket to the wall or batten using appropriate fixings. (As shown on page 12).

Step 6: Lift the unit and locate the two hooks on the rear onto the wall bracket prior to fixing the unit to the floor. (As shown on page 12).

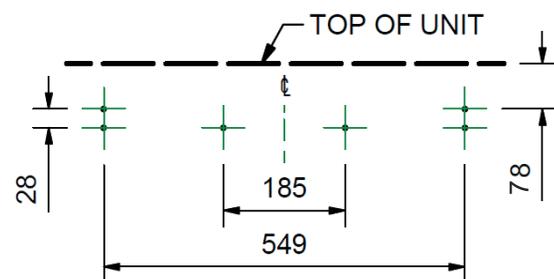

the

Vertical Discharge Condensate Installation

Note

The Kinetic Advance condensate outlet is compatible with standard 22 mm plastic push-fit fittings and 32mm plastic waste pipe fittings.

A water trap with a seal depth of at least 60mm or a HepVo valve must be fitted between the unit and the rest of the waste system.


Wastepipes must have a 3 degree minimum angle to allow the water to drain away from the unit naturally.

In areas where freezing weather conditions occur, outlet pipes must be insulated to avoid blockage by ice, which may cause damage to the unit and surroundings.

This installation guide is for a Right Hand configured unit as specified on page 5. If the unit is configured as Left Hand, then the condensate drain should be installed on the left with the blanking cap on the right.


22mm waste pipe

Step 1: Solvent weld a small piece of 22mm plastic waste pipe to the (RH) condensate outlet.

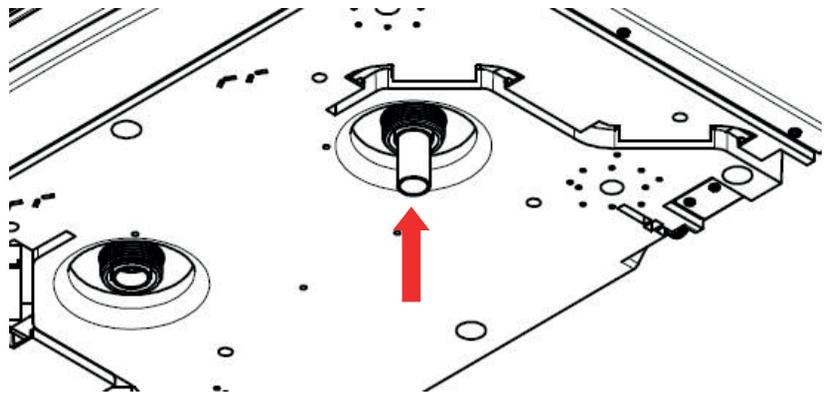


Step 2: Attach the appropriate pipe fittings for your installation. Always use a demountable coupler close to the unit.

Fit the drain cap supplied with the unit to the opposite (LH) condensate outlet. Ensure the sealing gasket is fitted inside the blanking cap.

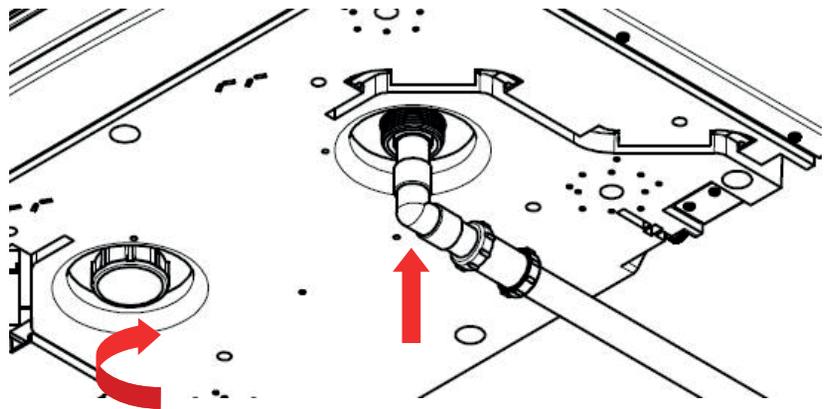


32mm waste pipe

Step 1: Attach the appropriate pipe fittings for your installation to the (RH) condensate outlet. Fit the drain cap supplied with the unit to the opposite (LH) condensate outlet. Ensure the sealing gasket is fitted inside the blanking cap.

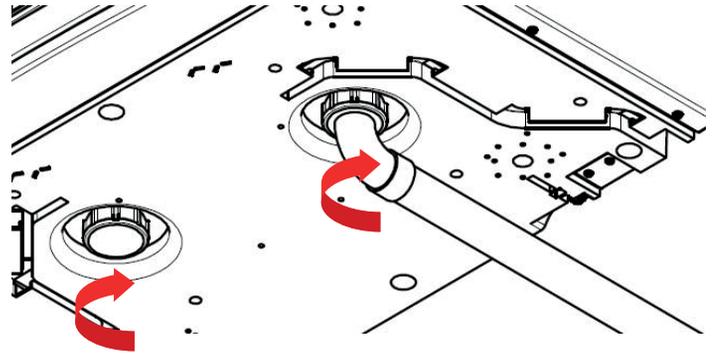

Attach the Ducting


1. Always use a short piece of insulated flexible duct maximum 150 mm long, extended to its full length when connecting to ductwork.
2. Securely connect the ducting to the spigots using worm-drive clips or suitable plastic ties.
3. Insulate any ducting passing through an unheated space to prevent any heat losses or surface condensation.

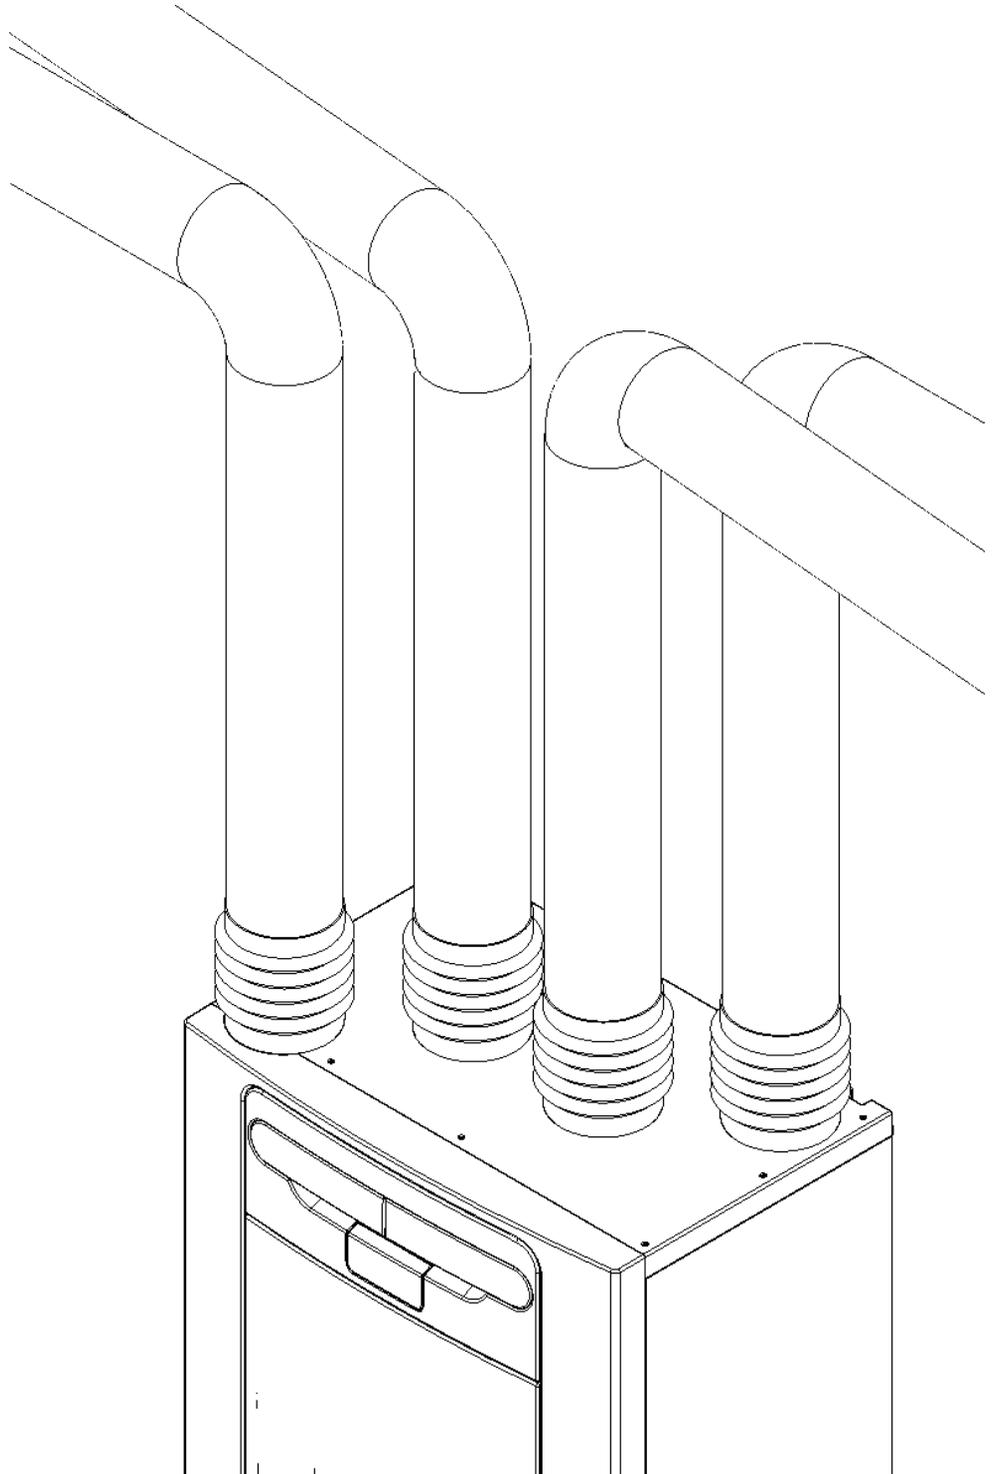


Electrical Installation

Ensure the electrical supply and controls are isolated before removing access covers!

Step 1: Remove the outer cover by pressing the tabs either side of the control module and lifting the cover outwards from the bottom edge.

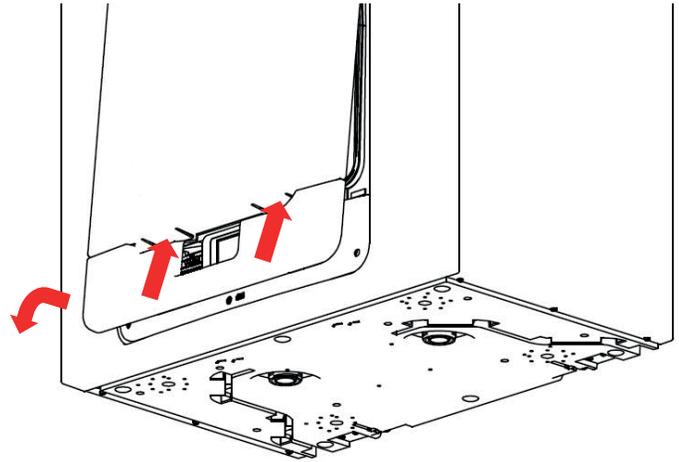


Step 2: Remove the control module by sliding it upwards and away from the unit.

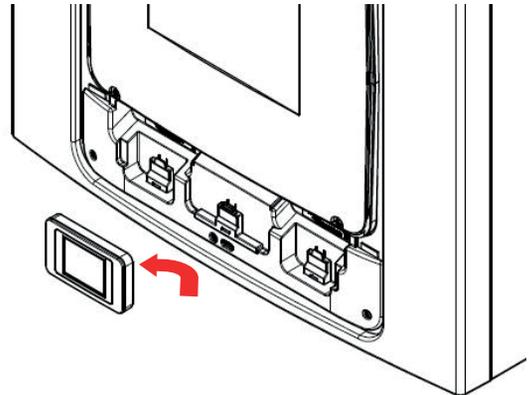

Step 3: Remove the two screws on either side of the access panel. Lift the panel outwards from the bottom edge to remove.


Note: The access panel is tethered on the left hand side.

Note: All printed circuit boards are ESD sensitive. Always ensure the correct ESD protection is used (e.g. conductive wrist straps and anti-static mats).

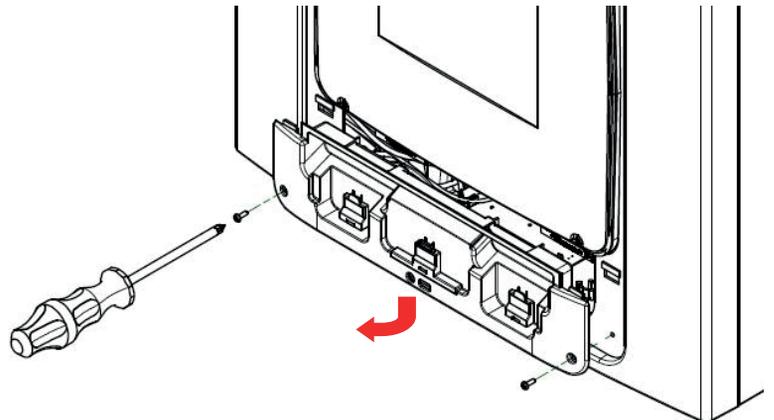

Step 4: Push the locking tab away from the printed circuit board and slide it outwards to access the terminals.

Note: The printed circuit board will relock after 60mm.

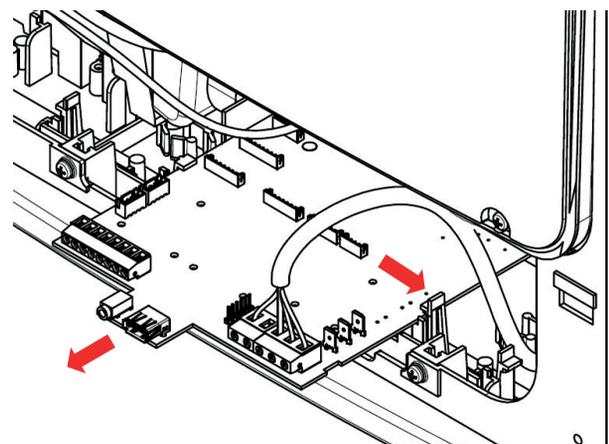

Connect Switches and Sensors

The unit can be switched to boost by applying 240V to the LS input.

Note: Alternative switches and inputs can be achieved by adding optional input accessories to the printed circuit board. See Accessories on page 10 for further details.

For good EMC engineering practice, any sensor, switched live or Volt free cables should not be installed within 50 mm of other cable or on the same metal cable tray as other cables.

Connect any switches or sensors required to control the unit by connecting to the terminal connectors at the bottom of the control unit as shown on Page 19 and in Table 1.

When fitting external controls, all cables should be routed through the two cable channels on the underside of the unit shown below.


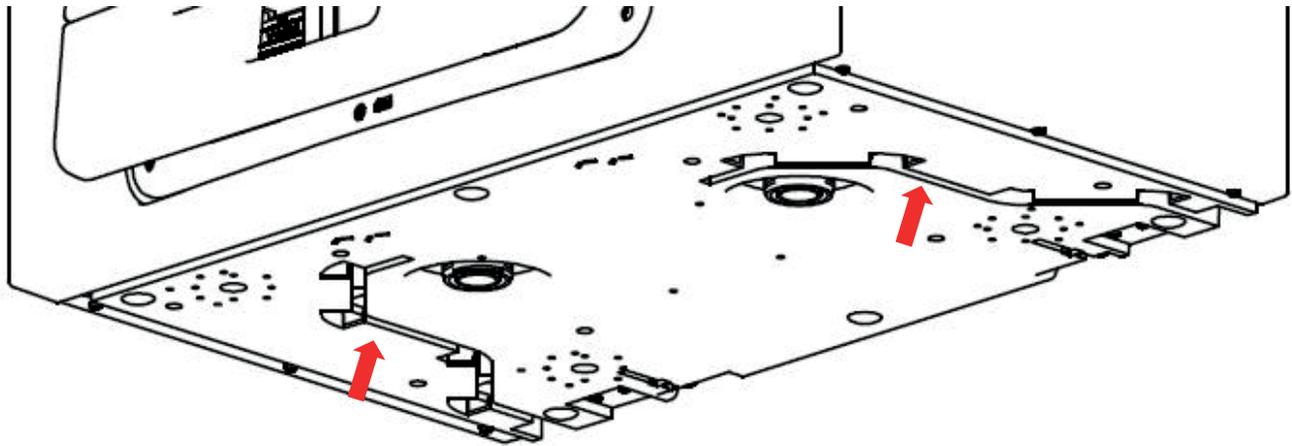


Figure 4: Sentinel Kinetic Advance cable channels

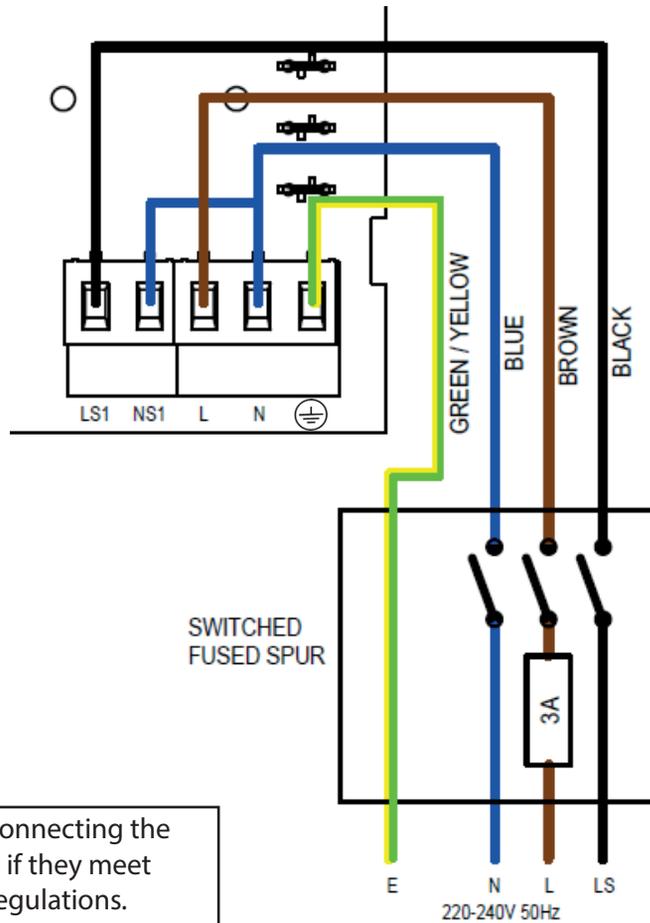

Other means of connecting the unit may be used if they meet the local wiring regulations.
SEE NOTES ON PAGE 20

Terminal No.	Name	Description (Control Mode 01)
REMOTE	Remote	Terminals for connecting a remote external to the unit
SWI	Switch 1	Volt-free contact for sensor input between + and - terminals
LED	Red Light Emitting Diode Output	A 5 V LED driving signal output between the + and – terminals that enables remote indication of a unit fault.
DIAG	Diagnostic	Diagnostic port
USB	USB	Commissioning port
LS1	Switched Live	220-240 V AC, 50 Hz input
NS1	Switched Neutral	220-240 V AC, 50 Hz input
L	Mains Live	220-240 V AC, 50 Hz input
N	Mains Neutral	220-240 V AC, 50 Hz input
⊕ EARTH	Mains Earth	Earth connector

Table 1: Terminal Connections

Connect the Power Supply



WARNINGS

1. MAINS SUPPLY VOLTAGES (220-240 V AC) ARE PRESENT IN THIS EQUIPMENT, WHICH MAY CAUSE DEATH OR SERIOUS INJURY BY ELECTRIC SHOCK. ONLY A SUITABLY QUALIFIED PERSON SHOULD CONNECT THE POWER SUPPLY TO THIS UNIT.
2. THIS UNIT MUST BE CORRECTLY EARTHED.

This unit is designed for operation from a single-phase alternating current source (220-240 VAC).

A 1.5m cable is connected internally to the unit for connection to an isolator switch.

To connect the power supply:

Ensure the local AC power supply is switched off.

One end of the power cable supplied is already connected to the unit in the manner shown above.

Connect the other end of the cable via a 3A circuit breaker (code 9532).

Use cable clamps and clips to secure the cable, as appropriate.


Connecting a Boost (Light) Switch

A Switched Live (LS1) may be used to boost the airflow when a light is turned on, for instance in a bathroom or kitchen. If the LS1 core of the mains cable is not used it should be terminated in an appropriate manner.

If the unit and the LS1 connection are on the same circuit, the jumper should be left between N and NS1 as shown above.

Connecting a Boost (Light) Switch from a different circuit

If the supply used for the Switched Live (LS) is on a different circuit to the power connections, the connections LS1 and NS1 should both be connected to the same circuit. LS1 and NS1 are connected to the unit via a built in isolator and a separate isolating relay is not needed.

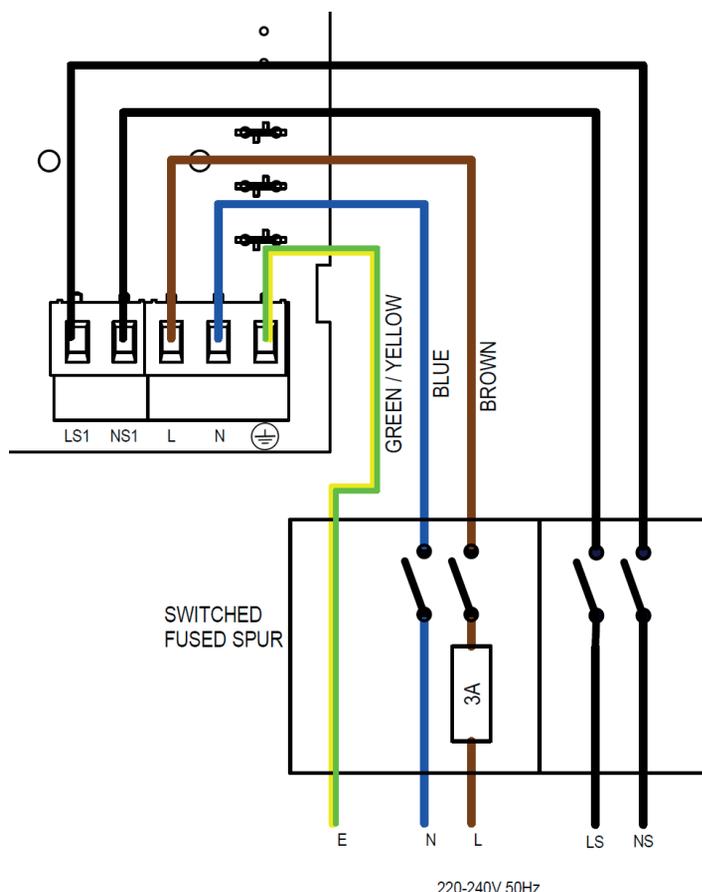

Powering up the Unit

Switching On

To switch the unit on:

1. Switch on the power at the mains supply isolator feeding the unit.
2. Following switch-on, the fan motors will start and the Control Unit will display a start-up screen, described on page 22.

N.B. If you are intending to carry out work or maintenance inside the unit, isolate the supply to the unit before removing any covers.

Switching Off

To switch the unit off:

1. Turn the power off at the mains supply isolator.


Overview

The instructions in this section are intended to provide configuration and operation information for setting up the equipment. In the event of problems, see Diagnosing a Problem on page 48.

Follow good practice when commissioning the unit. Ensure that the system is installed according to the system designers intent incorporating any acoustic ducting, that all joints are air tight, ducting is well supported, bends are avoided close to vents, and that the vent valves are fully open at the start of the commissioning process.

Control Unit Touch Screen Display

The Control Unit is located at the front of the Sentinel Kinetic Advance unit. The Control Unit provides the user interface for commissioning and monitoring purposes. The display is a resistive touchscreen with LED backlight, which will turn off to automatically after 5 minutes to minimise power consumption. To activate the backlight, touch the display.

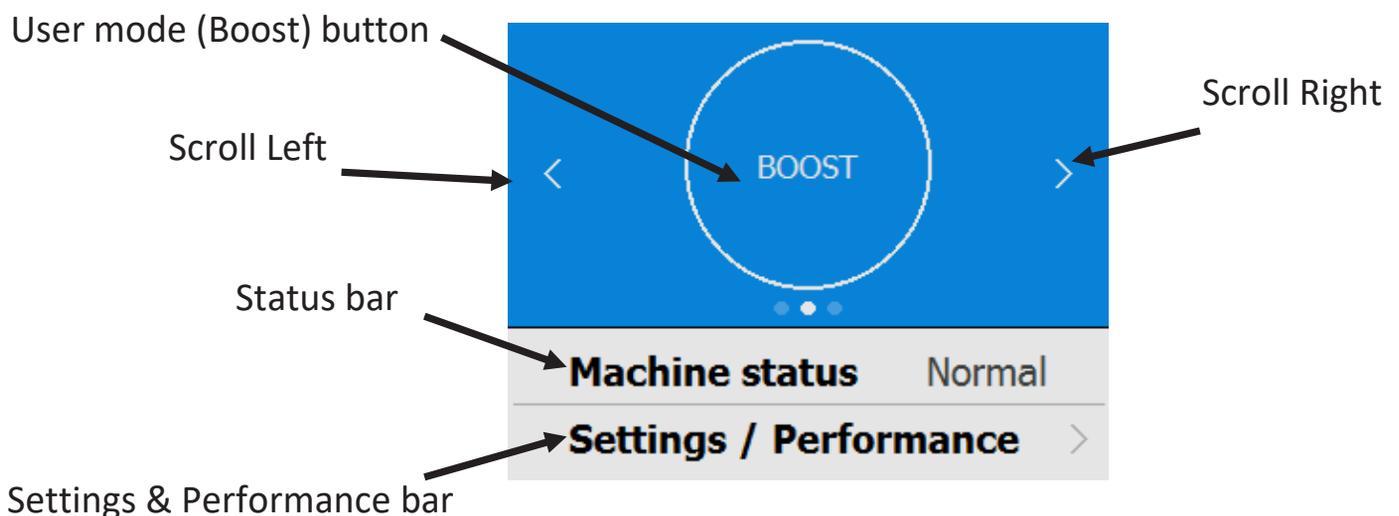

Navigate through the functions by pressing the      symbols, adjust settings using the   buttons. A  symbol indicates that there are further screens related to a menu option. Select the option on the touchscreen to access the related screens.


Modifying Settings

If settings need to be changed after the unit has been commissioned, access to the commissioning menu can be accessed by following the steps below.

Start up screen

Every time the unit is powered up, the start up screen appears as the software loads showing the display version.

A Quick Start sequence will appear when powering up the unit for the first time.

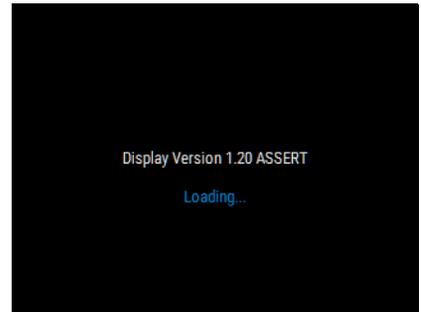


User Menu Home Screen


The user menu home screen consists of a User Mode (LOW, BOOST, PURGE) button, a Machine status bar, and a Settings / Performance bar.

The Machine status scrolls through Mode of operation, Summer bypass status and Frost protection status.

Press **'Settings / Performance'** to access the menus.

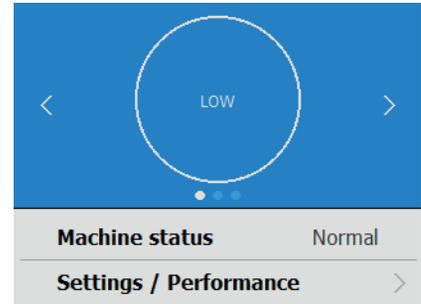


Scroll down to **'Commissioner menu'** using the   buttons at the bottom of the screen.

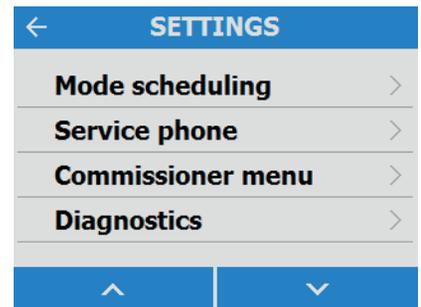


Enter the 4 digit lock code using the  /  buttons on the screen to access the commissioning menu. The default is 0000 and can be changed in the Modify Settings menu.

Press  to enter the commissioning menu

Press  to return the settings menu

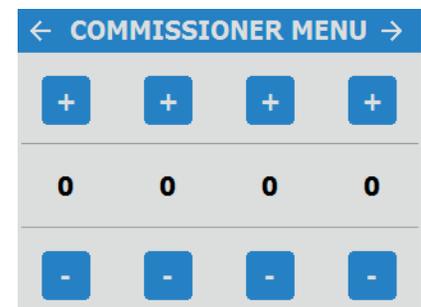



Press **'Modify settings'** to enter the commissioning screens.

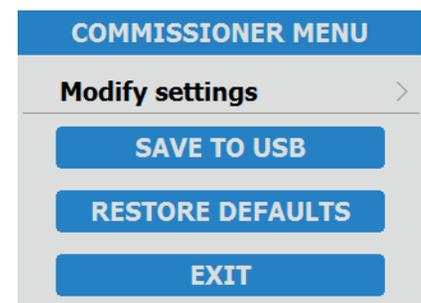

Commissioning Screens Summary

The following pages show all available settings within the commissioning menu. Please note that some settings may not be available, or may be in a different order, due to pre-configuration by your distributor. A Quick Start sequence will appear when powering up the unit for the first time.

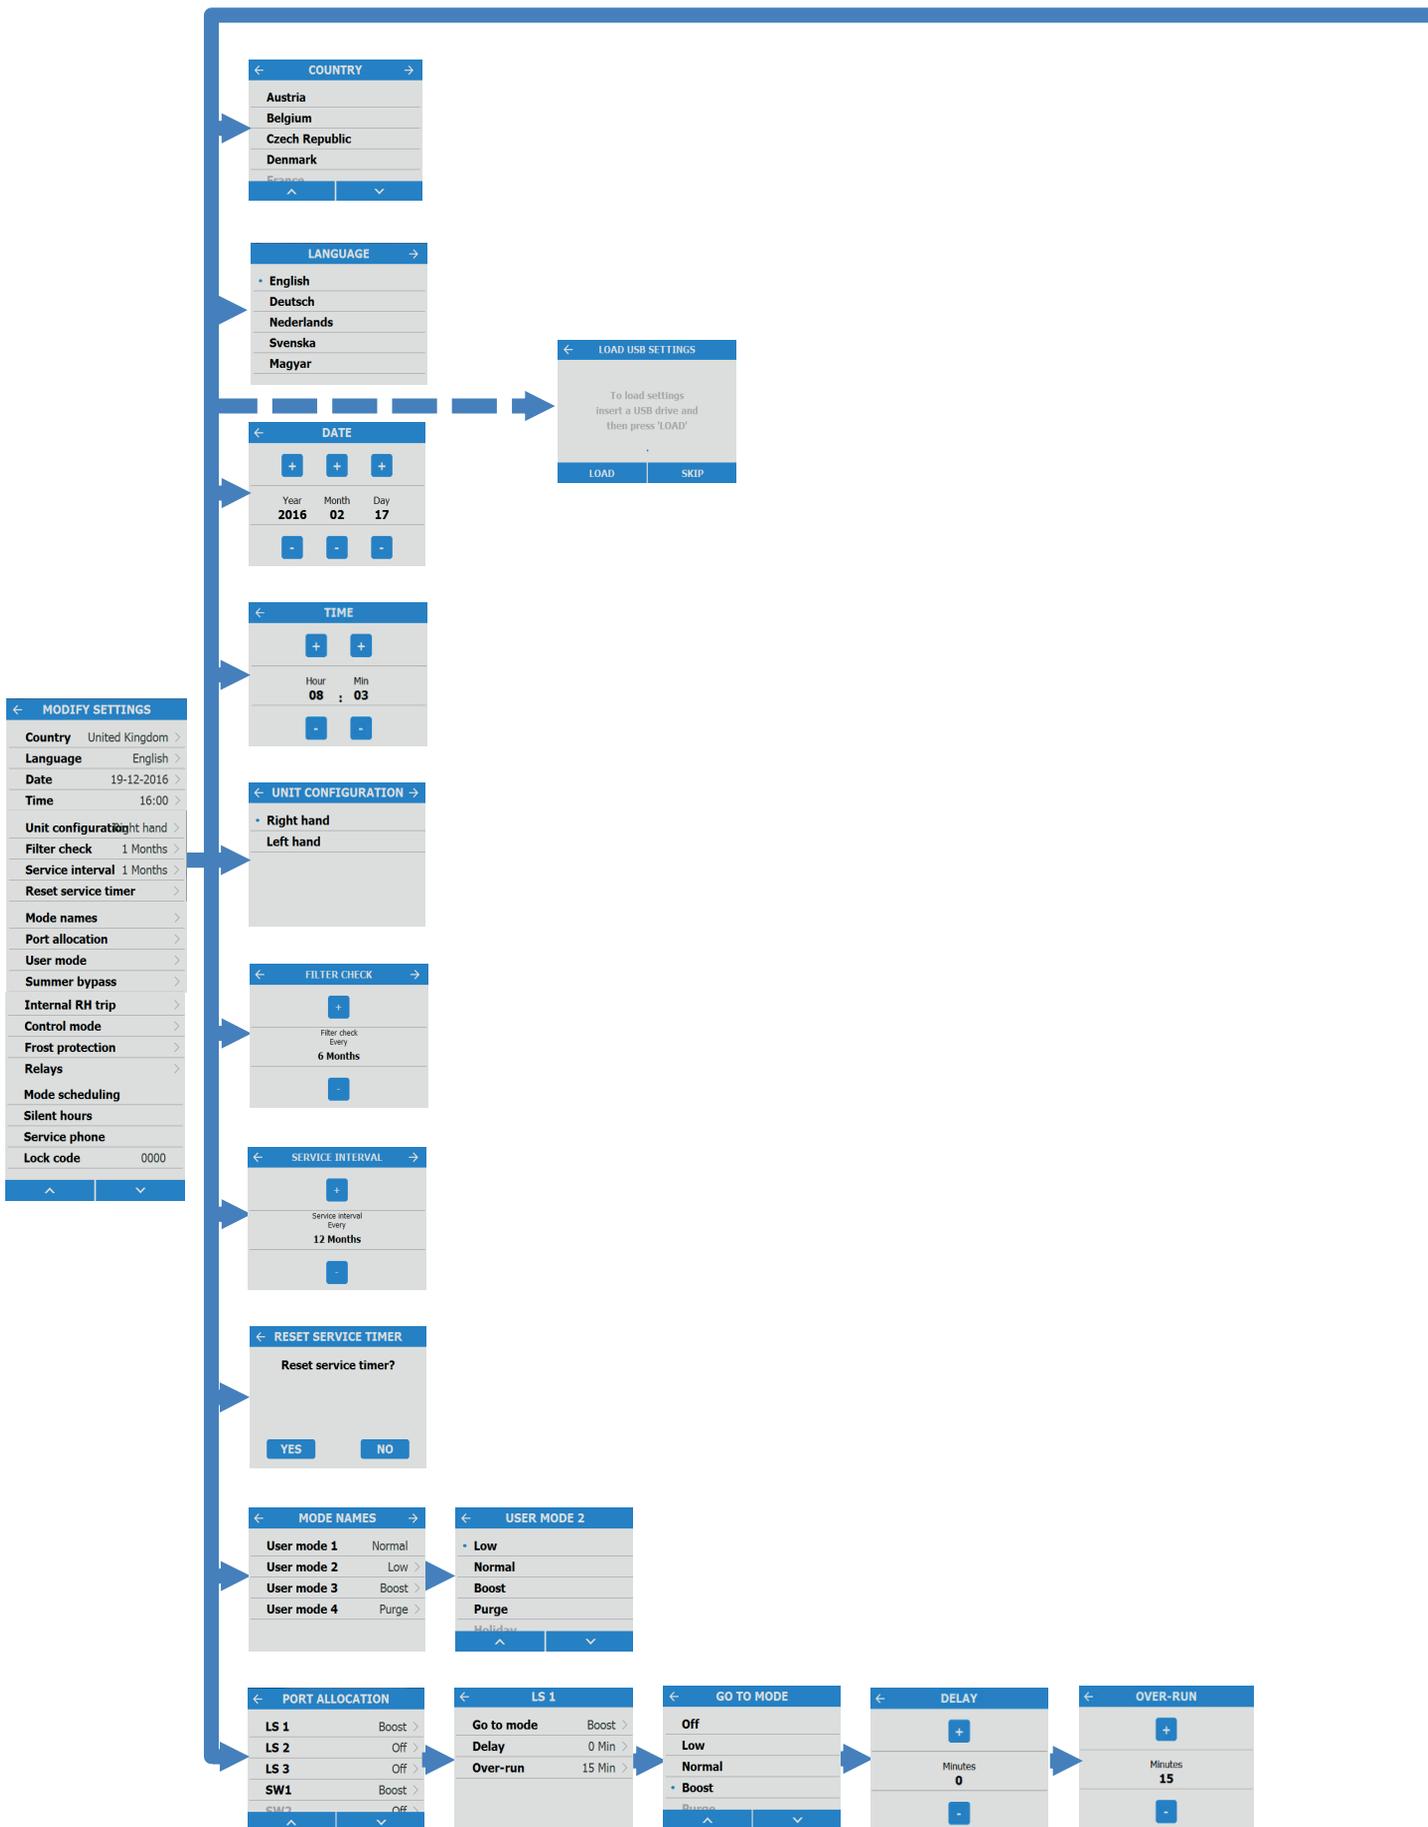


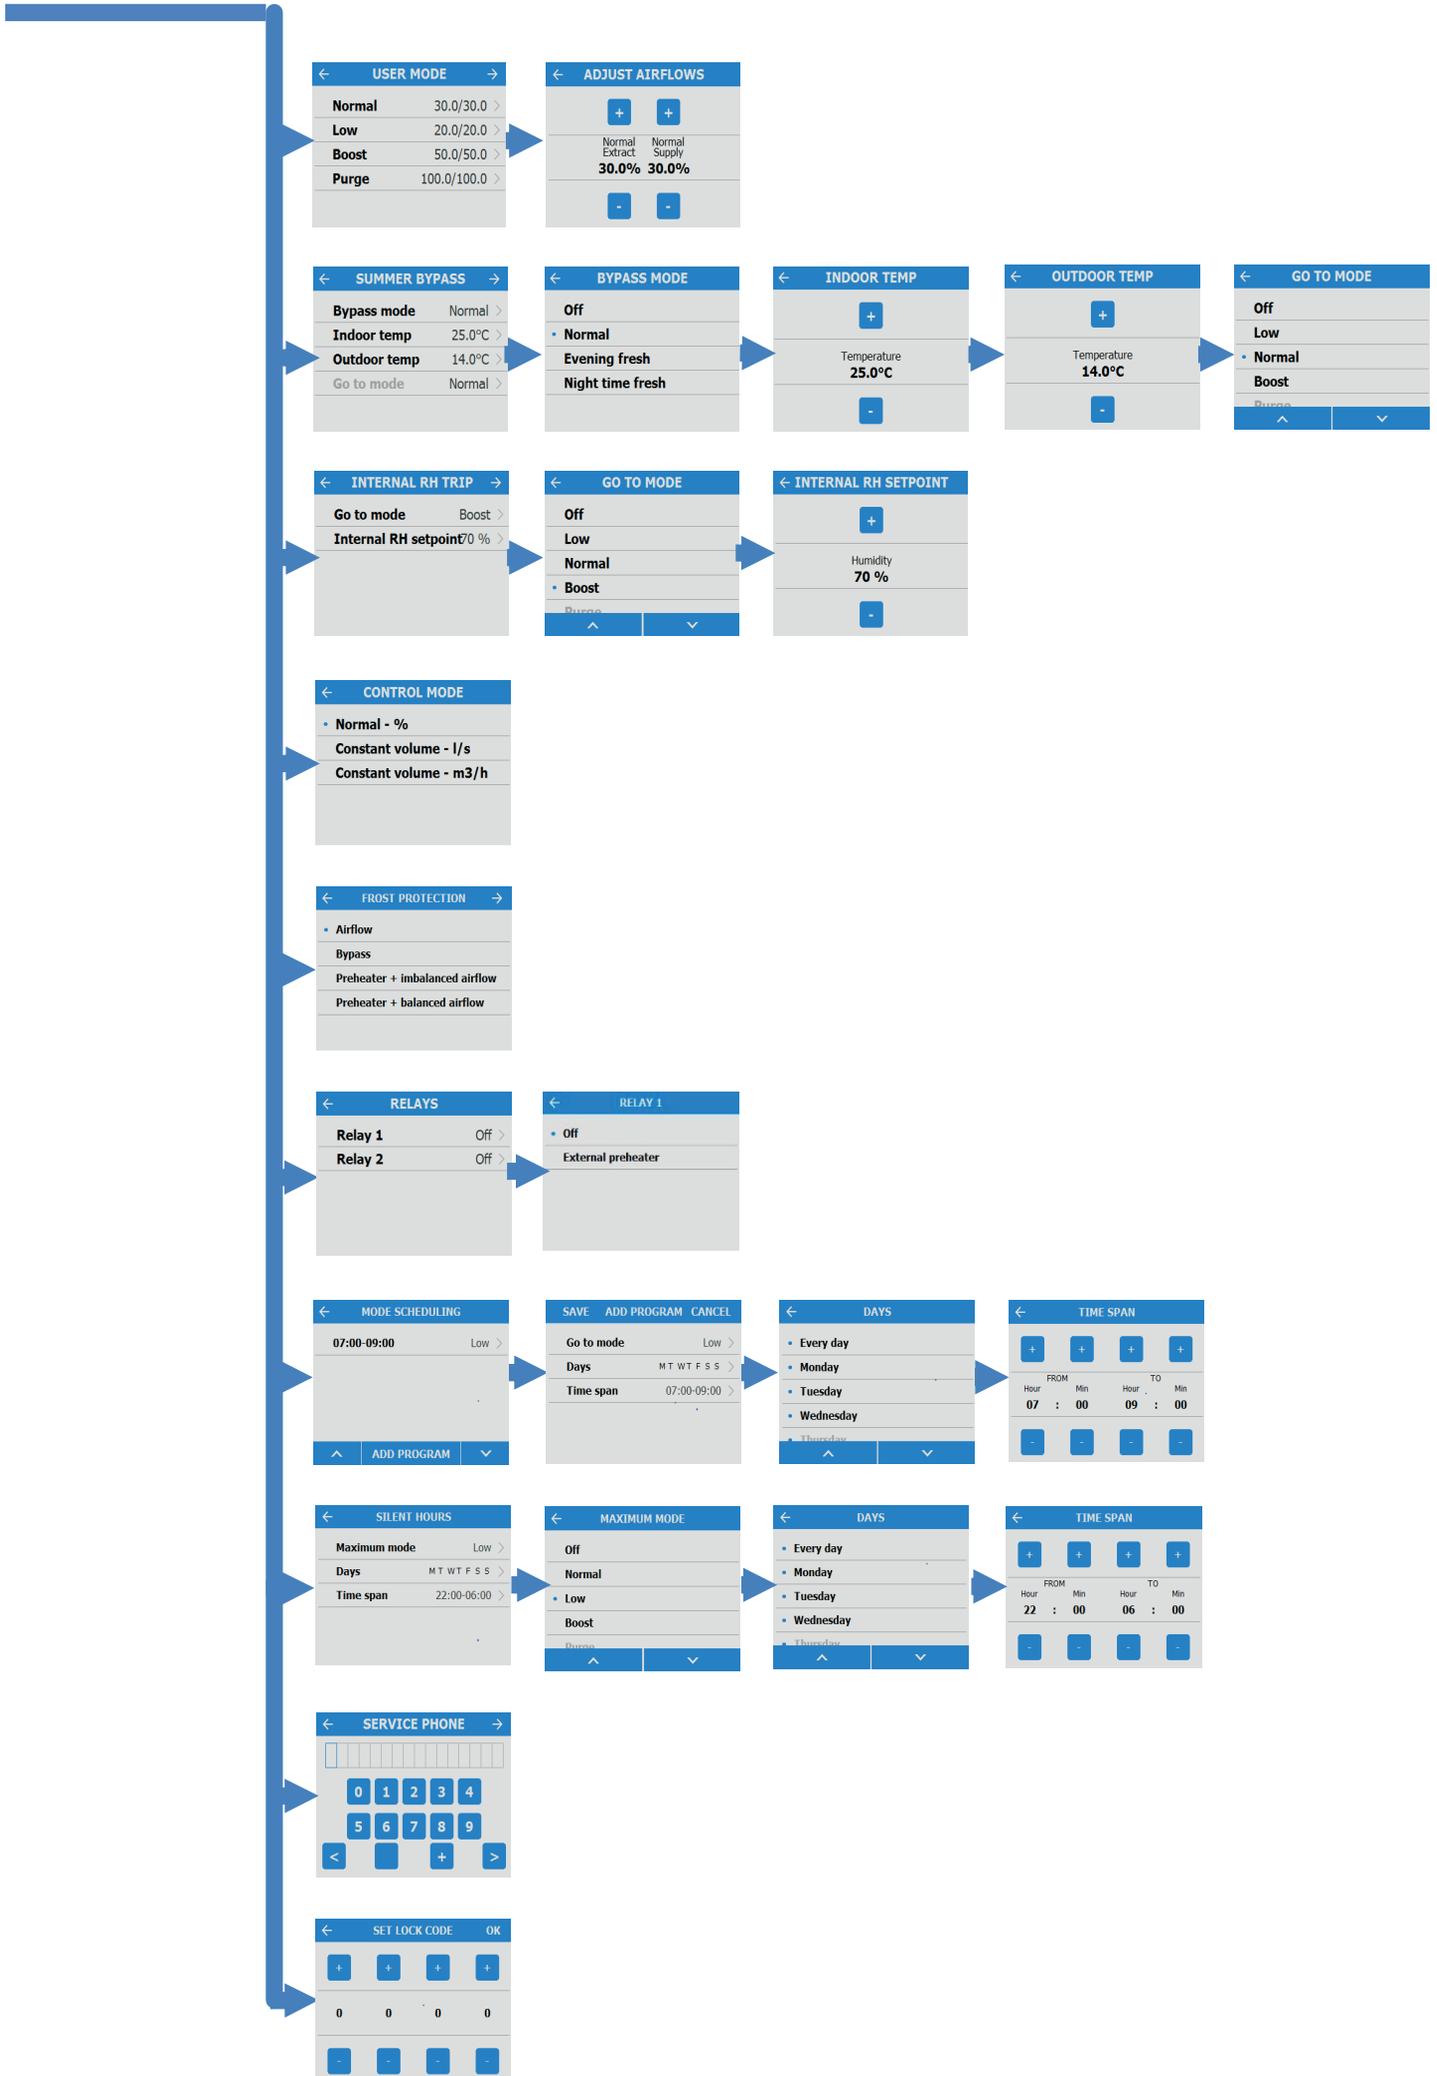

Modifying Commissioning Settings

Country

Select country – This will load any pre-determined national default parameters for all subsequent screens.

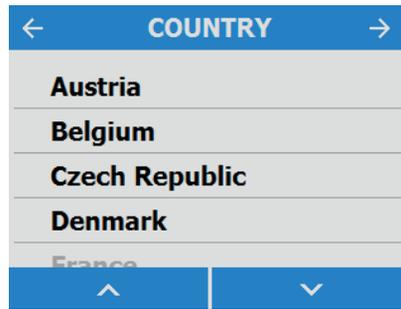

Language

Select language – The language choice does not affect the defaults setup by the country choice.




Load USB Settings

Settings can be automatically loaded to the unit via the USB port. Note: This option will only appear on the Quick Start sequence. Access to this screen can be obtained by using the Restore Defaults feature.



Date


The Date is pre-loaded as part of the factory defaults, but may be changed if required using the **+** / **-** buttons on the screen.

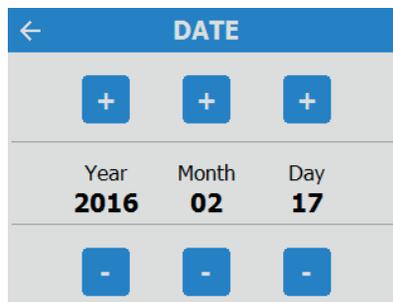

Time

The Time is pre-loaded as part of the factory defaults, but may be changed if required using the **+** / **-** buttons on the screen.


Note: The clock is 24 hour.

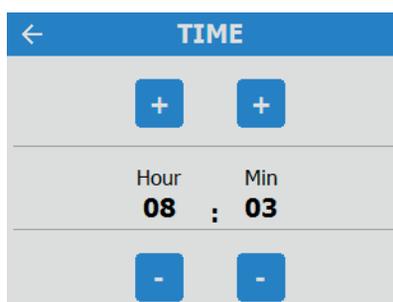

Unit configuration

Select the orientation of the unit depending on the configuration of the installation. Units with a preheater are preconfigured from the factory and cannot be changed.


See page 11 for a description of the unit handling.
Press ← to save and return to the commissioning menu.

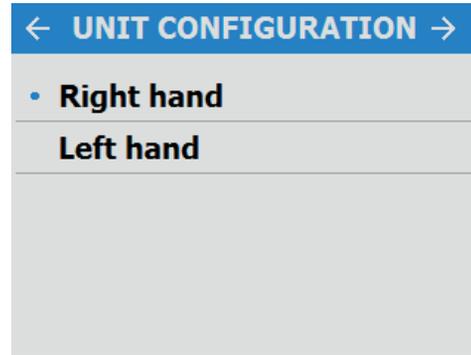

Filter Check


Select the time interval for checking the filters using the + / - buttons on the screen, between 1 month and 18 months.

Note: There is an automatic filter check notification 3 months after installation, irrespective of set intervals.

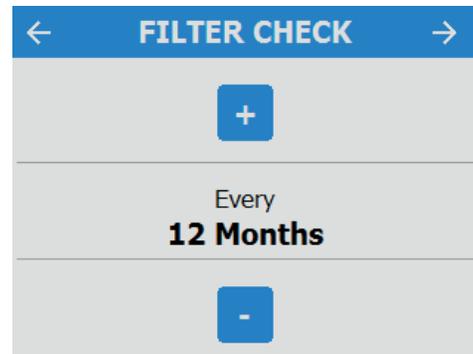

Service interval

Set the service frequency.

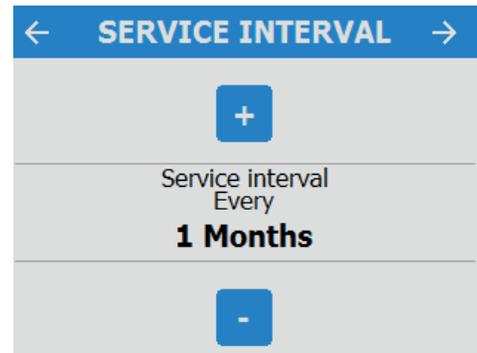

Reset Service Timer

After the unit has been serviced, use this option to reset the timer.



Mode Names

The names and speed for each mode can be changed if required.

Note: The user mode 1, Normal, is not editable.

Scroll through the settings using the  &  buttons and select the mode pre-set for each User mode.


Press  to save and return to the commissioning menu.

User Mode


Adjust the supply and extract airflows for each mode pre-set. Select each mode to adjust to the required flow rate.

Adjust the airflows using the  /  buttons.


Press  to save and return to the commissioning menu.

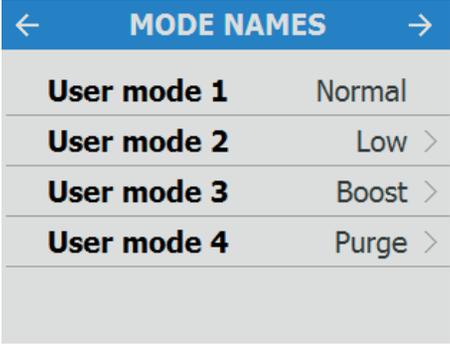


MODE NAMES	
User mode 1	Normal
User mode 2	Low >
User mode 3	Boost >
User mode 4	Purge >

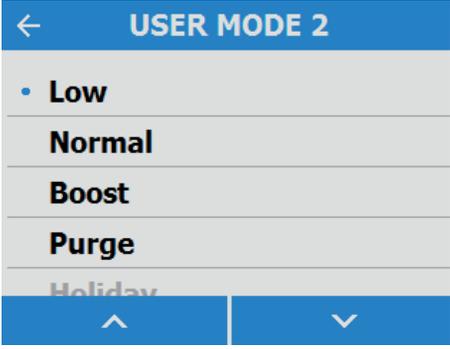

USER MODE 2	
• Low	
Normal	
Boost	
Purge	
Holiday	

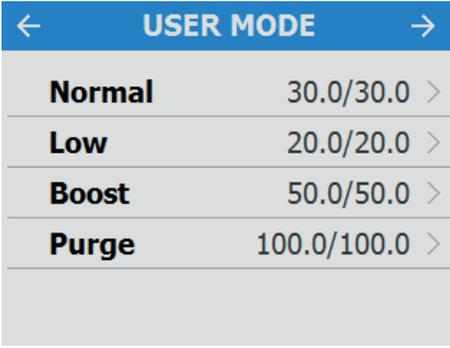

USER MODE	
Normal	30.0/30.0 >
Low	20.0/20.0 >
Boost	50.0/50.0 >
Purge	100.0/100.0 >

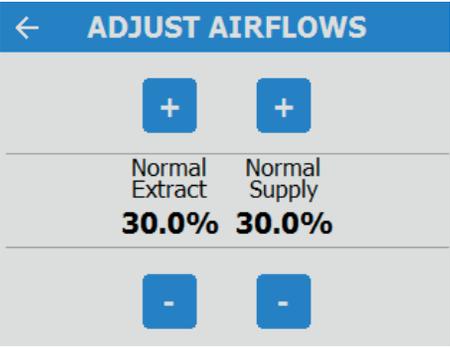

ADJUST AIRFLOWS	
	
Normal Extract	Normal Supply
30.0%	30.0%
	

Port Allocation

The unit will automatically detect the following inputs:

- wired to the lighting
- Current sensors
- Vent-wise sensors or momentary switch

Note: Number of available ports and port types may differ from image shown depending on unit specification.


Select the Port to view the Go To Mode (speed setting), Delay and Over-run parameters.

Select the parameters to edit them.


Scroll through the settings using the  &  buttons and select the Go To mode for each Port Allocation.

Adjust the time delay for each Port Allocation using the  /  buttons. Selectable range is 0-20.


Adjust the Over-Run for each Port Allocation using the  /  buttons. Selectable range is 0-30

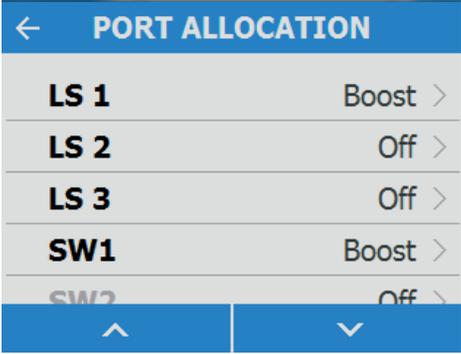


PORT ALLOCATION	
LS 1	Boost >
LS 2	Off >
LS 3	Off >
SW1	Boost >
SW2	Off >

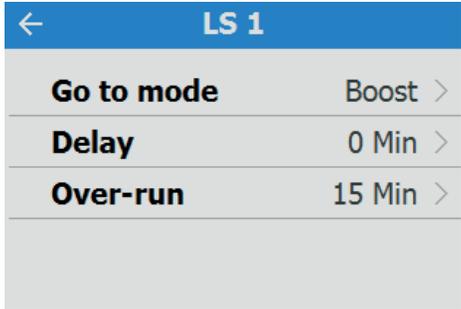


LS 1	
Go to mode	Boost >
Delay	0 Min >
Over-run	15 Min >

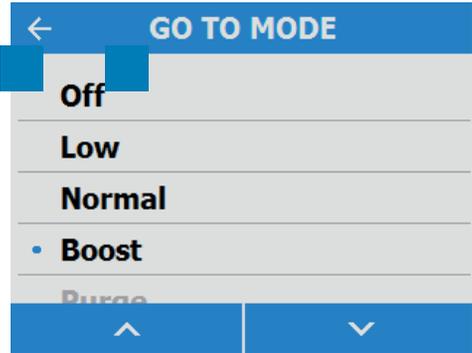

GO TO MODE	
Off	
Low	
Normal	
• Boost	
Surge	

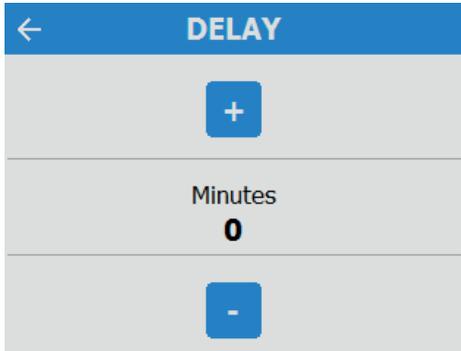

DELAY	
+	
Minutes	
0	
-	

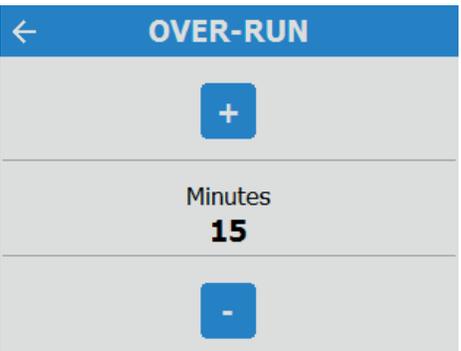

OVER-RUN	
+	
Minutes	
15	
-	

Summer Bypass

See page 9 for a full description of the Summer Bypass modes and functions.

SUMMER BYPASS	
Bypass mode	Normal >
Indoor temp	25.0°C >
Outdoor temp	14.0°C >
Go to mode	Normal >

Bypass Mode

Select the required bypass mode.

BYPASS MODE	
Off	
• Normal	
Evening fresh	
Night time fresh	

Indoor Temperature

The indoor temperature setting is the maximum desired room temperature. This should be set to 3 °C above the central heating temperature.

Change the indoor temperature using the  /  buttons on the screen.

INDOOR TEMP	
	
Temperature	25.0°C
	

Outdoor Temperature

The outdoor temperature is the minimum air temperature that the bypass will permit. This is to prevent cold draughts.

Change the indoor temperature using the  /  buttons on the screen.

OUTDOOR TEMP	
	
Temperature	14.0°C
	

Go to Mode

This is the mode the bypass will switch to when activated.

The suggested Mode for Evening fresh and Night time fresh setting is Boost.

Scroll through the settings using the  &  buttons and select the Go To mode.


Note: Number of available modes may differ from image shown depending on bypass setting and the modes set in the commissioning process.

GO TO MODE	
Off	
Low	
• Normal	
Boost	


Internal RH Trip

The integral humidity sensor increases airflow speed in proportion to relative humidity levels. The sensor also reacts to small but rapid increases in humidity, even if the normal trigger threshold is not reached. The night time relative humidity setback feature suppresses nuisance tripping as humidity gradually increases with falling temperature.

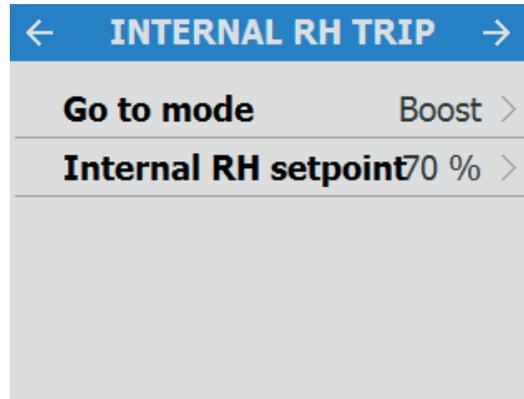

Go to Mode


Scroll through the settings using the  &  buttons and select the required Go To mode.

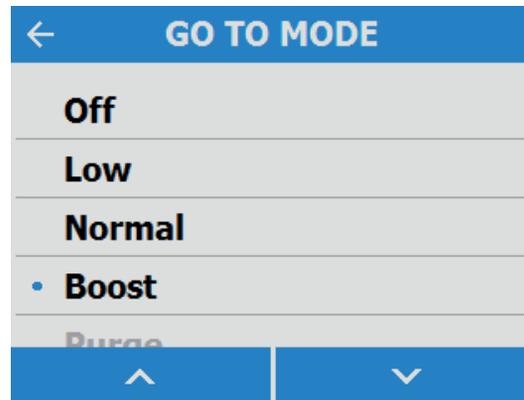

Internal RH Setpoint


Adjust the internal Relative Humidity using the  /  buttons. Selectable range is 60% - 90%.

Internal RH sensing can be switched off by selecting "OFF", this option is above 90%, or below 60%.

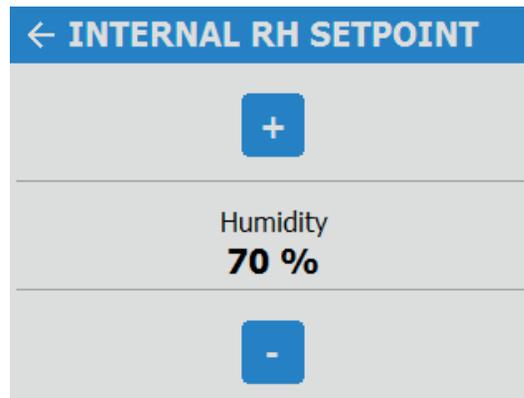

CONTROL MODE

Select whether the unit should operate in Normal or Constant Volume mode.

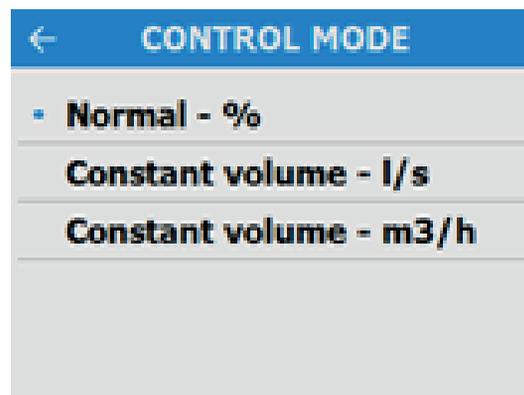

Frost Protection

Frost Protection is required to prevent condensate freezing in the heat exchanger at low temperatures. The process is fully automatic. The method used for frost protection will depend on the model and building it is installed in.

For buildings with a leak rate of 3m³/hr or less (at 50Pa), a balanced frost protection mode must be used. A balanced mode must also be used when a combustion device without a dedicated air supply is present.

Airflow (Imbalanced)


Airflow mode reduces the Intake flow and increases the Extract flow in varying proportions dependent on the incoming air temperature. The unit will continue to recover heat as low as -20 °C. At this point, the unit switches to 'Extract Only' mode.

Bypass (Balanced)

Bypass mode opens the Summer Bypass and stops recovering heat until the external temperature increases sufficiently.


Relays

Select whether the external preheater outputs are activated. These outputs are 230V 5A maximum each.

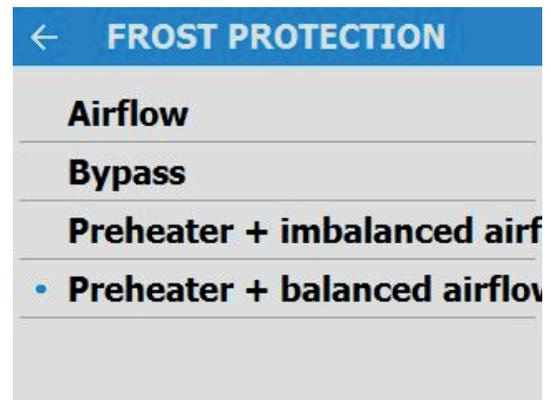


Mode Scheduling

Use a schedule to set a Mode (Airflow setting) for a fixed, repeated period. For example, set Boost Mode every morning between 7:00am and 8:00am while cooking breakfast.

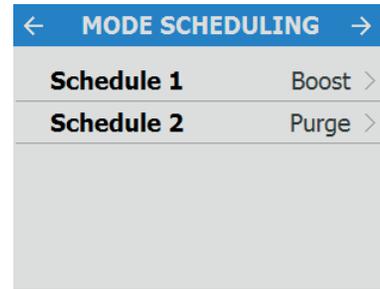


Schedule 1

Select the Schedule to view the settings.

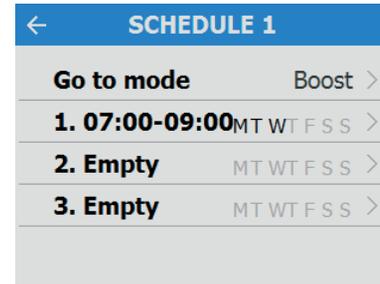


Go to Mode

Scroll through the settings using the  &  buttons and select the Go To mode for each Schedule.

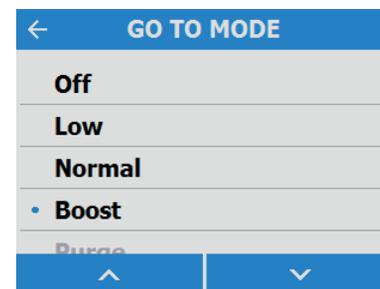


Days

Scroll through the days of the week using the  &  buttons and select each day to be included in the Schedule program.

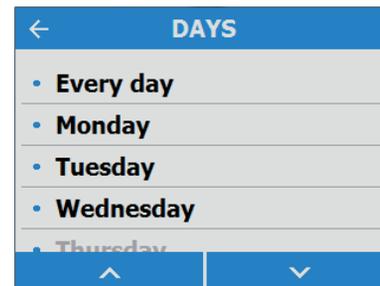

Time Span


Adjust the start and finish times for each day using the  /  buttons.

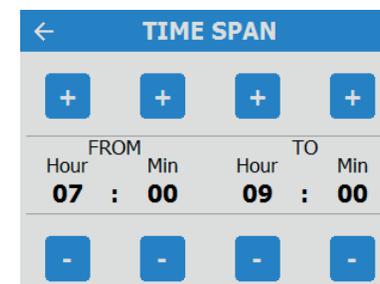

Silent Hours

Silent Hours mode is useful to impose a speed/flow restriction on the unit to minimise unwanted noise during the night.


If Silent hours are enabled, the unit will not speed up above the set Maximum Mode. Silent Hours can be set to reoccur on specific days and times.

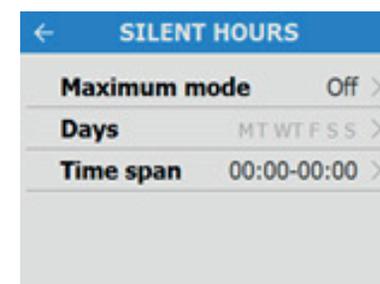

Service Phone

The Service Phone screen enables the installer to enter the telephone number that should be called for service in the event of a unit fault or for routine maintenance.


Enter the number using the buttons on the screen, Scroll through the number using the   buttons

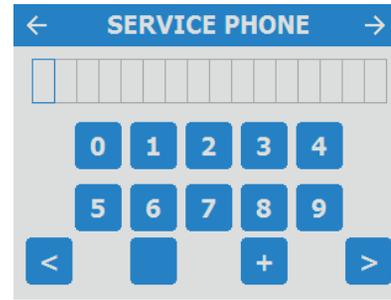

Set Lock Code

Set the lock code using the  /  buttons on the screen, press OK to save the code.

Note: Default code if not set at this point will be 0000.

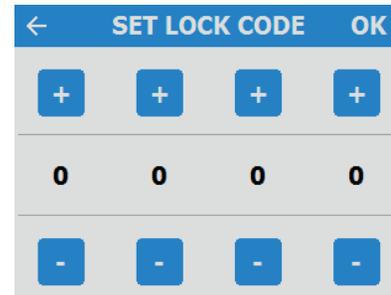

Commissioner Menu


Once the commissioning settings have been modified exit to the commissioning menu.

Settings are stored in a non-volatile memory and will be retained irrespective of mains supply breaks, however, the unit can also be restored back to factory defaults at this screen.

Press  to return to the User Menu Home screen.

To complete the setup process, press the  button.

If a USB device is present, the settings from the unit can be saved and used for the setup of similar units.

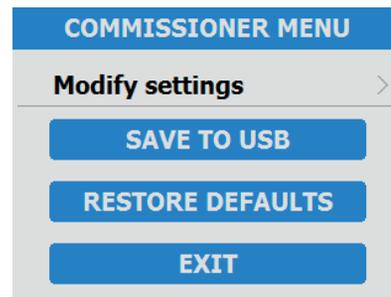


Restore Defaults

To return the unit back to factory settings press the Restore Defaults button. A confirmation screen will appear. Press  to confirm, or  to return to the Commissioning Home screen.

Once confirmed the following screen will appear, the restore process takes approximately 5 seconds.


Press  to stop the restore process during this time.

Once the system has restored back to factory default settings it will go back to the start up screens.

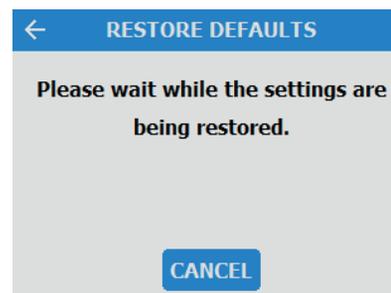

Control Unit Screens Summary

The following Control Unit screens are available for daily operation and monitoring of the unit.

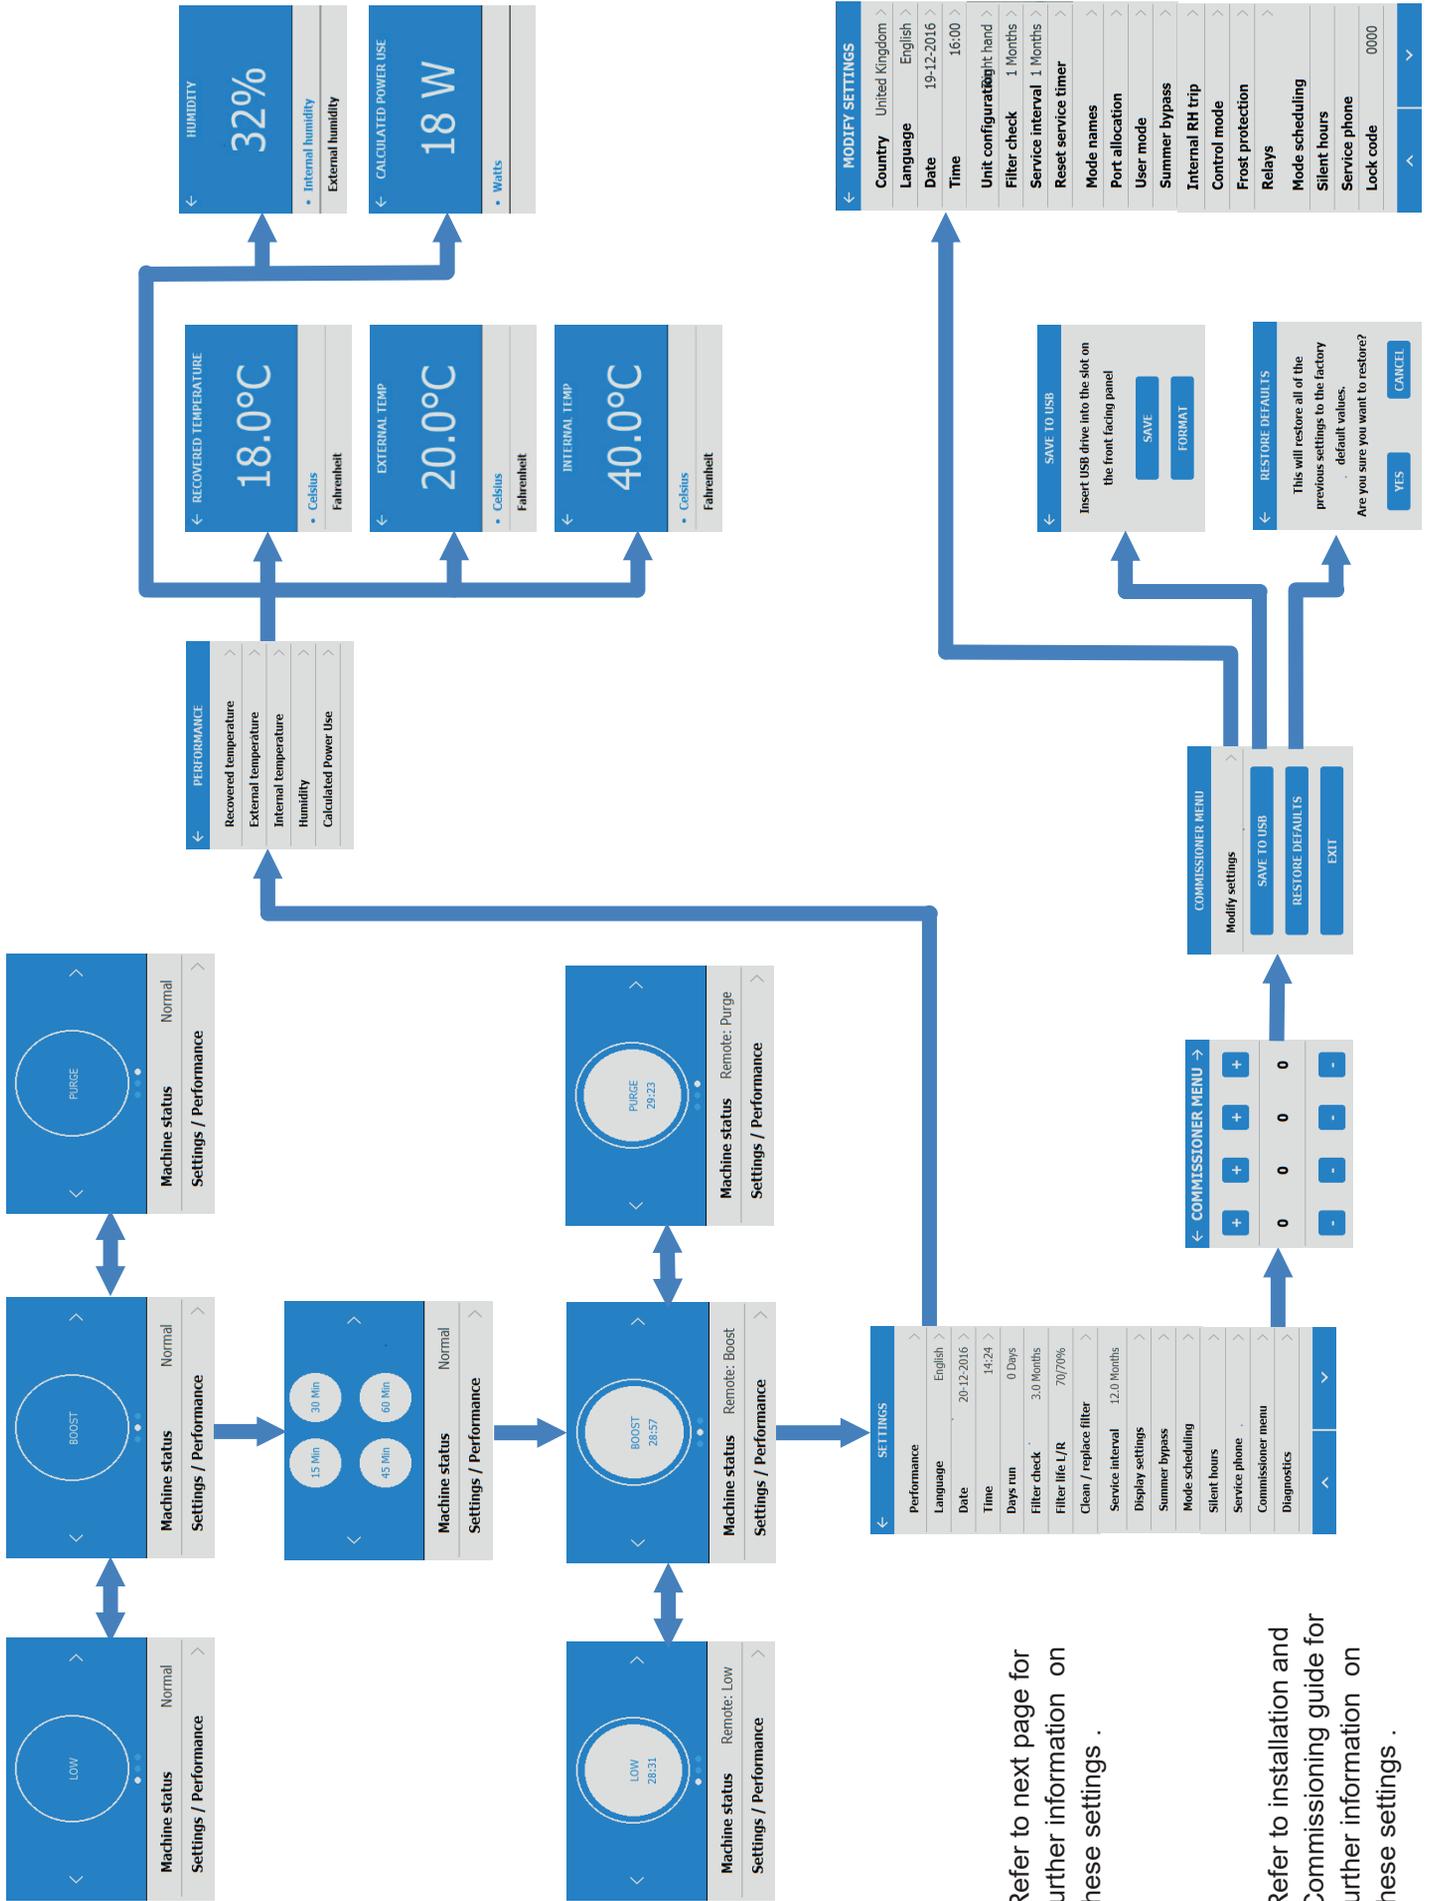


Refer to next page for further information on these settings .

Refer to installation and Commissioning guide for further information on these settings .

Control Unit Screens Summary

The following Control Unit screens are available in the Settings / Performance section.

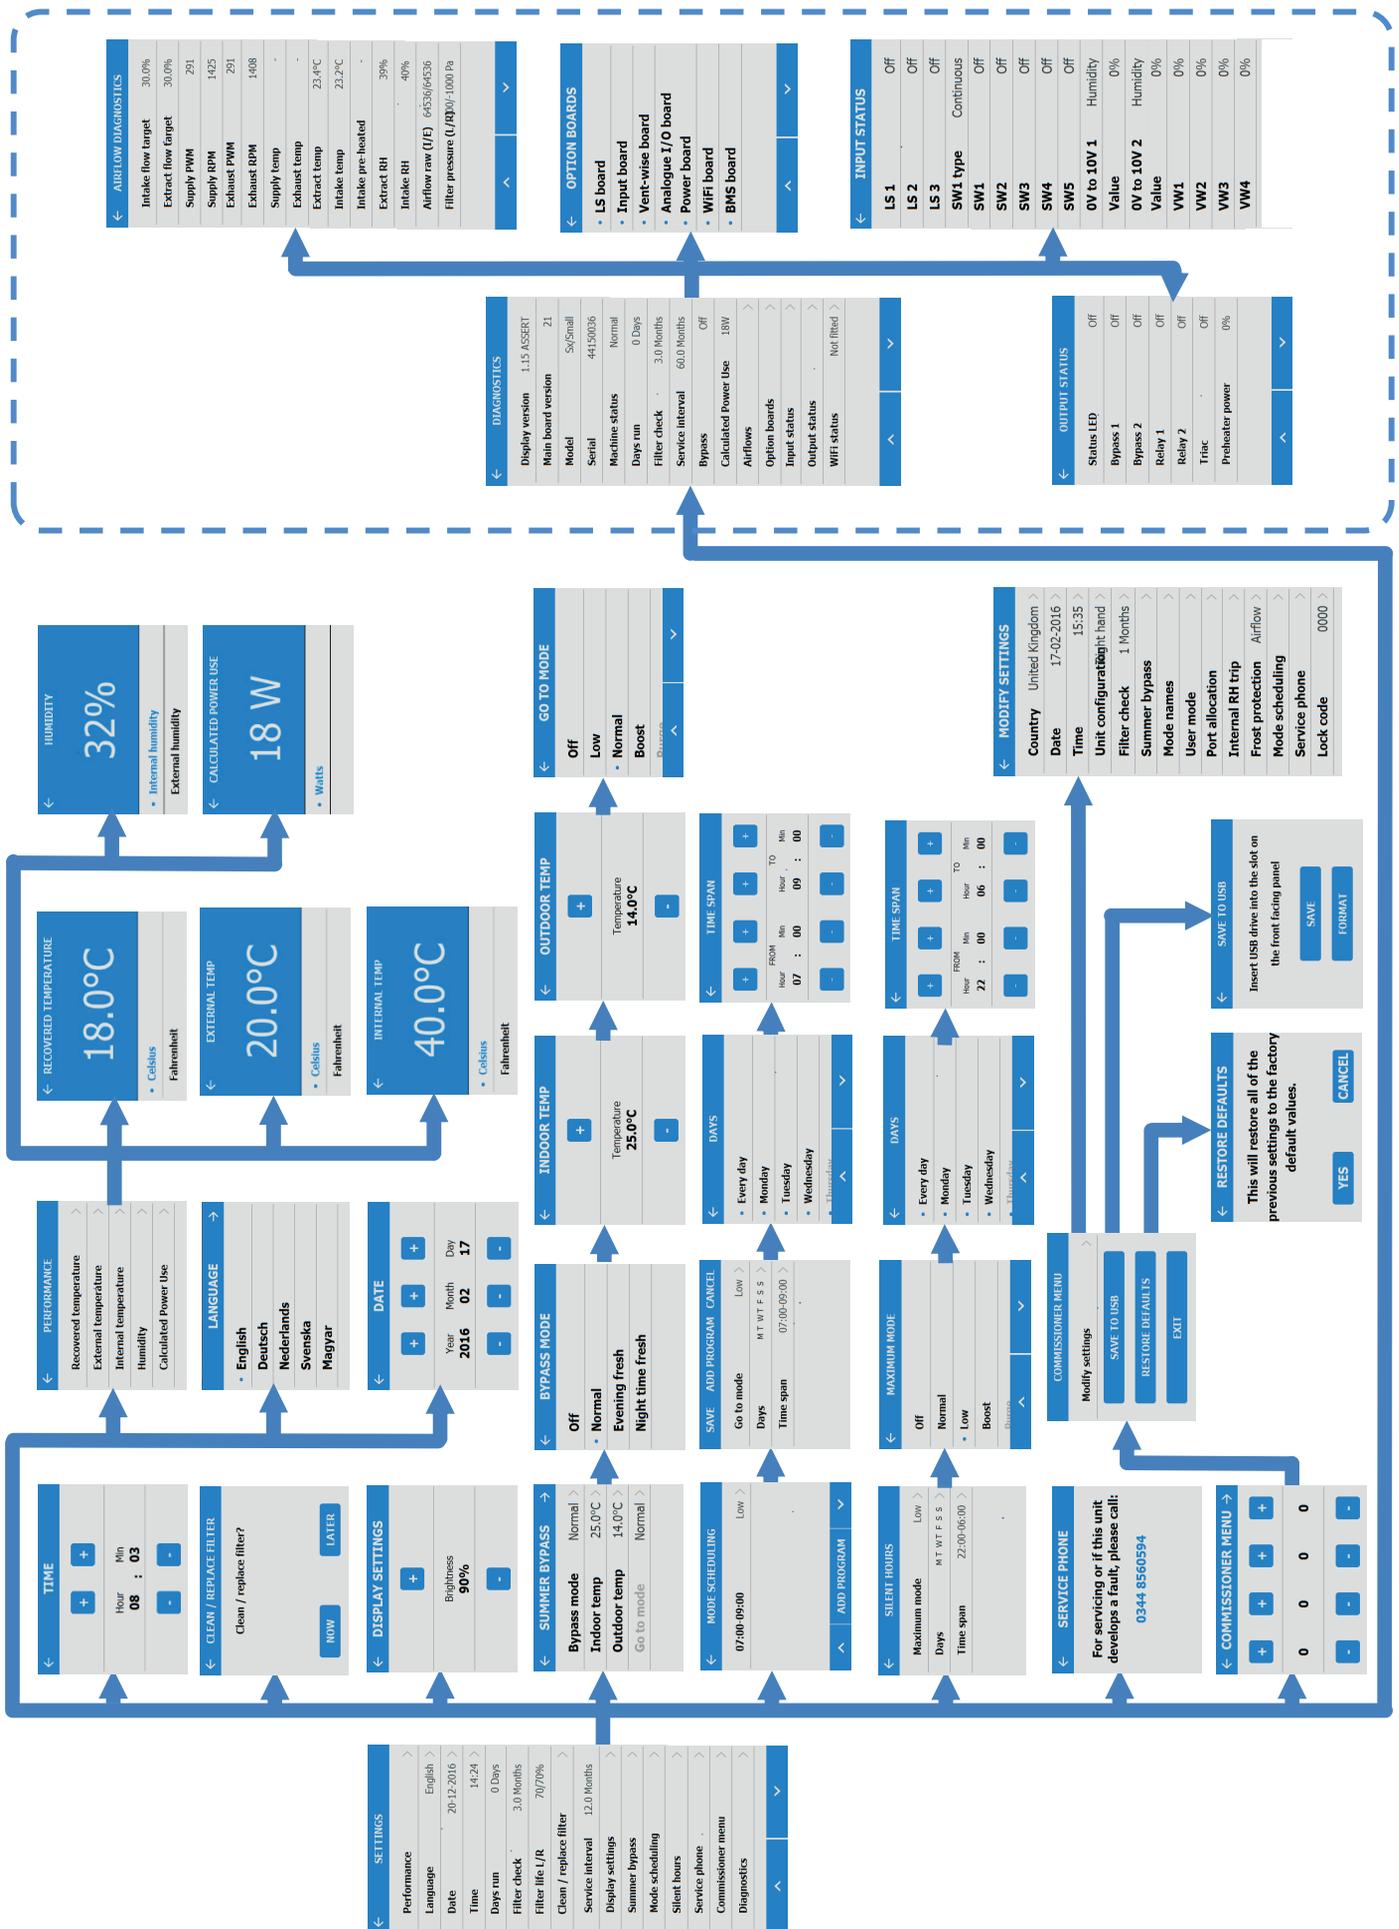


User controls

User Menu Home Screen

The user menu home screen, consists of a User Mode (BOOST) button, a Machine status bar, and a Settings / Performance bar.


The Machine status scrolls through Mode of operation, Summer bypass status and Frost protection status.

Press Settings / Performance to access these menus.

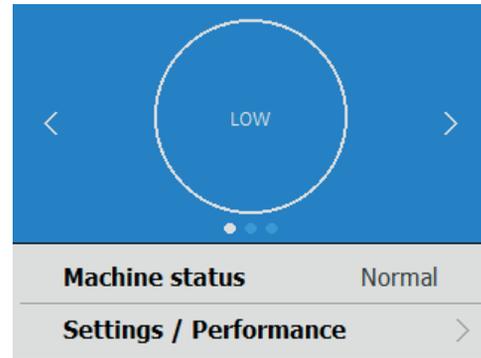


User Mode

Scroll through the pre-defined user modes (factory defaults are BOOST, LOW, and PURGE) using the   buttons either side of the User Mode button. Select the required function by pressing the centre button.

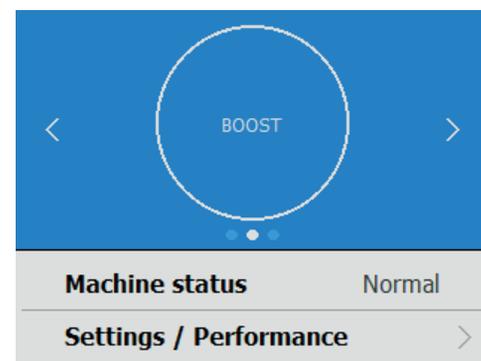


When a user mode is selected, select the duration by pressing the required button from the four options on the screen.

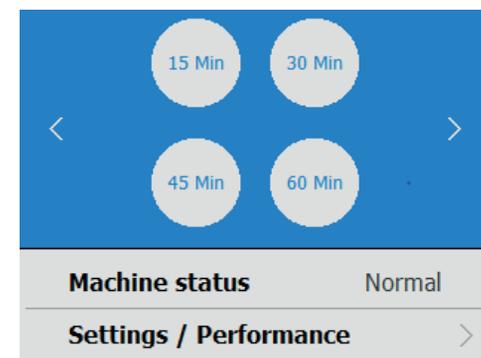

The button will appear white and the user mode will flash. A countdown clock will also appear showing the time remaining for the selected User Mode.

Pressing the User mode button again will cancel the User Mode and the unit will default back to Normal mode.

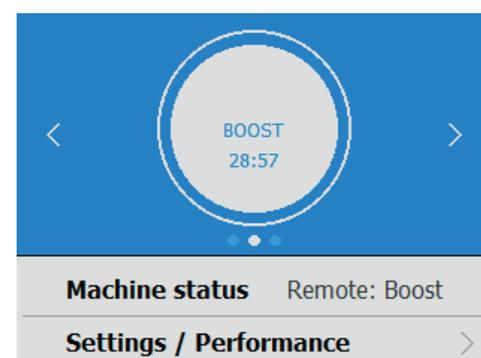


Settings and Performance

Settings

Scroll through the settings using the  &  , buttons and select using  where applicable to access Language, Date, Time, Reset filter, Display settings, Summer Bypass, Mode Scheduling, Service phone, Commissioner Menu & Diagnostics.

Days Run and Filter check are reported values and do not have editable parameters in this section.



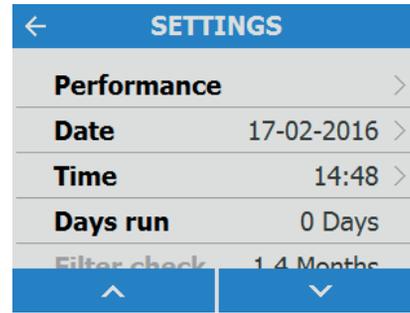


Performance

The performance menu shows key performance indicators such as recovered Temperature and Estimated power consumption.


Scroll through the list using the  &  buttons and select the required parameter.

Each performance temperature can be shown in Celsius or Fahrenheit by pressing the required temperature.

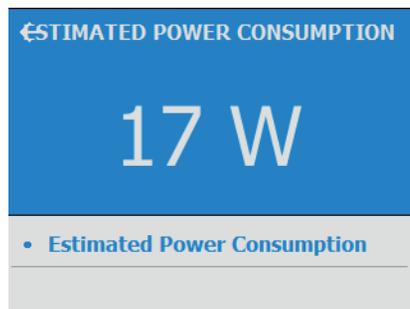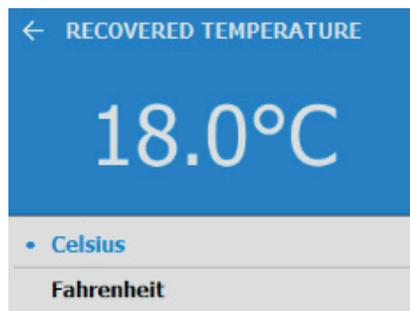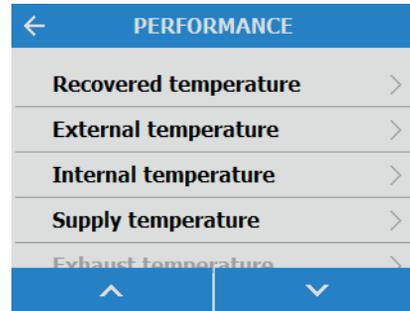

Date


Change the date using the  /  buttons on the screen.

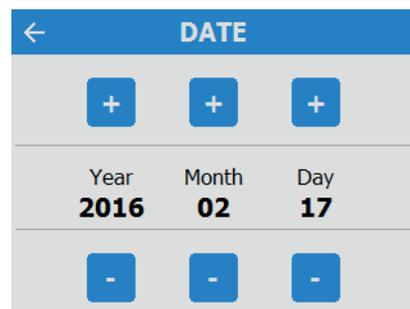

Time


Change the time using the **+** / **-** buttons on the screen

Note: The clock is 24 hour.

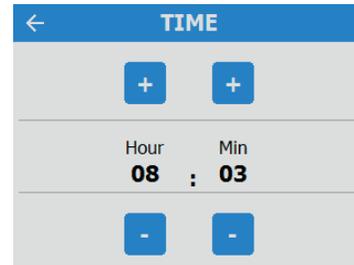


Clean/Replace Filter

After maintenance or replacement of the filters, the filter timer can be reset by pressing **YES**. Press **LATER** to return to the Settings Menu.

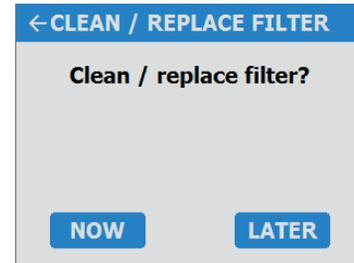


Display Settings

Change the brightness of the touch screen using the **+** / **-** buttons.

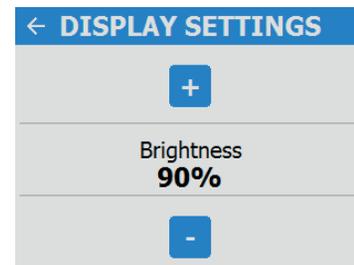


Summer Bypass

See page 9 for a full description of the Summer Bypass modes and functions.

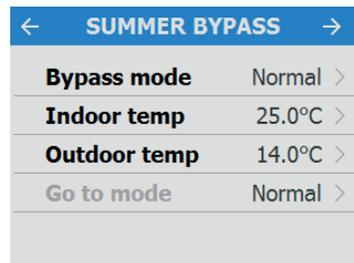


Select the required bypass mode.

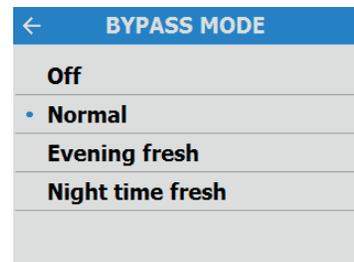


The indoor temperature setting is the maximum desired room temperature. This should be set to 3 °C above the central heating temperature.

Change the indoor temperature using the **+** / **-** buttons on the screen.

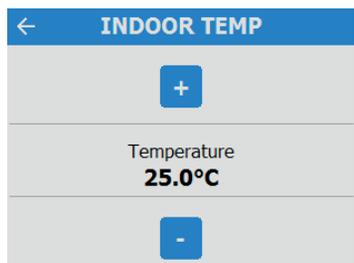

The outdoor temperature is the minimum air temperature that the bypass will permit. This is to prevent cold draughts.

Change the indoor temperature using the  /  buttons on the screen.

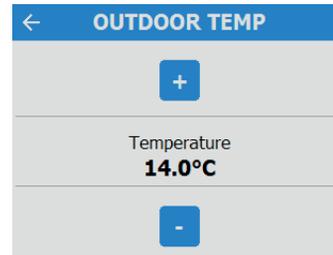


This is the mode the bypass will switch to when activated.

The suggested Mode for Evening fresh and Night time fresh setting is Boost.


Scroll through the settings using the  &  buttons and select the Go To mode.

Note: Number of available modes may differ from image shown depending on bypass setting and the modes set in the commissioning process.

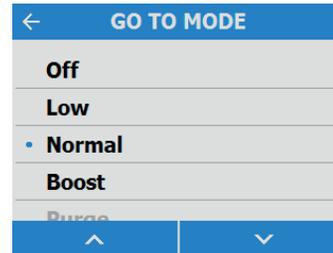


Mode Scheduling


Use a schedule to set a Mode (Airflow setting) for a fixed, repeated period. For example, set Boost Mode every morning between 7:00am and 8:00am while cooking breakfast.

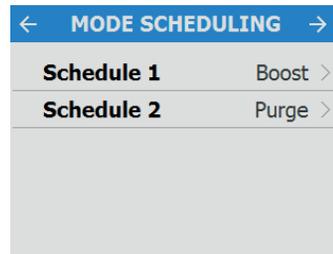


Select the Schedule to view the settings.

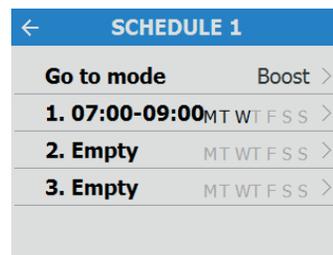


Scroll through the settings using the  &  buttons and select the Go To mode for each Schedule.

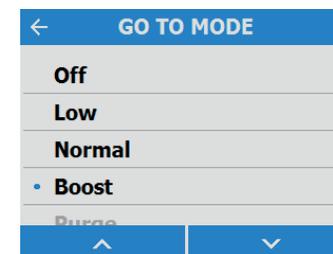

Scroll through the days of the week using the  &  buttons and select each day to be included in the Schedule program.

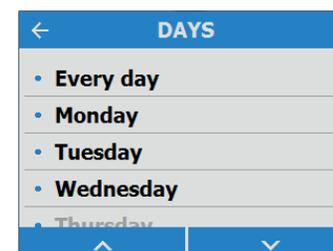


Adjust the start and finish times for each day using the **+** / **-** buttons.

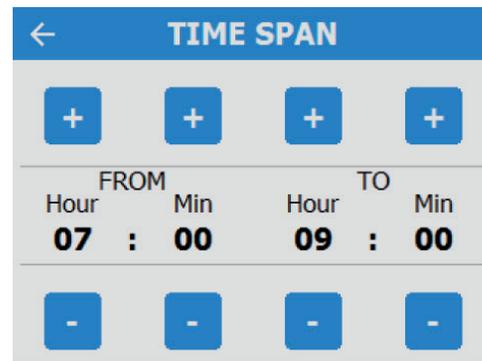

Silent Hours


Silent Hours mode is useful to impose a speed/flow restriction on the unit to minimise unwanted noise during the night.

If Silent hours are enabled, the unit will not speed up above the set Maximum Mode. Silent Hours can be set to reoccur on specific days and times.

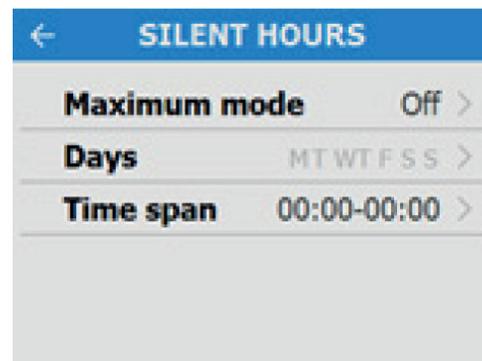

Service Phone


The service phone number can be entered by the installer and should be used if the unit displays a fault code, or to arrange routine servicing for the unit.

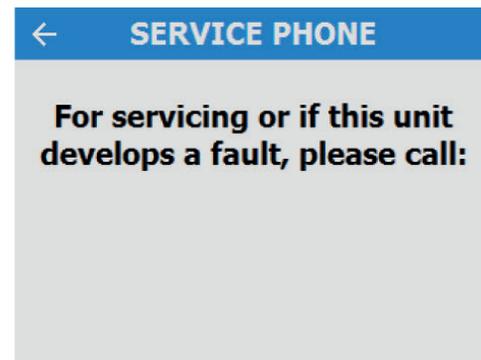

Commissioning Menu

Enter the lock code using the **+** / **-** buttons to access the Commissioner Menu.


Note: the lock code is set by the installer and settings beyond this point should only be accessed and modified by a qualified installer.

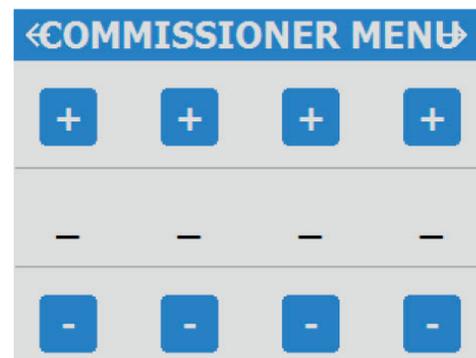

Diagnostics

Scroll through the Diagnostics list using the ▲ & ▼ buttons to access the following information. Machine Status, Days Run, Filter Check, Bypass, Energy Consumption, Air flows, Option boards. Input status, Output Status, WiFi Status, WiFi signal.

Note: Optional upgrades may be necessary to view all information.

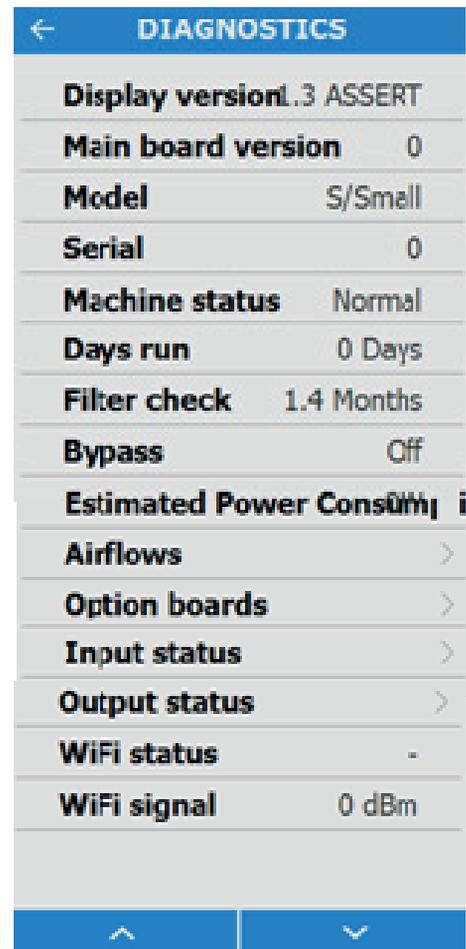

← DIAGNOSTICS	
Display version	L.3 ASSERT
Main board version	0
Model	S/Small
Serial	0
Machine status	Normal
Days run	0 Days
Filter check	1.4 Months
Bypass	Off
Estimated Power Consumption	0.00 kW
Airflows	>
Option boards	>
Input status	>
Output status	>
WiFi status	-
WiFi signal	0 dBm
▲ ▼	

Commissioning the Unit via USB

When carrying out commissioning on multiple similar installations, commissioned settings may be downloaded and saved onto a USB at the end of the setup routine (see page 34). They can then be uploaded onto subsequent units saving time on site. The option to upload the settings is available at the beginning of the commissioning quick start menu (see page 25).

No two systems are exactly the same and the settings and flow rates at each installation should be verified. The USB does not have to be blank however only the most recent file will be read.

Default settings

Parameters	Settings
Commissioning Screens	
Country	
Language	
Date	Automatic - Factory set
Time	Automatic GMT/BST - Factory set
Unit configuration	Right Hand
Filter Check	12 months
Summer Bypass	Normal
Mode Names	Normal, Boost, Low, Purge
User Mode	
Boost Supply/Extract	50%
Normal Supply/ Extract	30%
Low Supply/Extract	20%
Purge Supply/Extract	100%
Internal RH Mode	On
Internal RH Setpoint	70%
Control Mode	Normal
Frost Protection	Airflow Mode
Mode schedule 1	All days set to 0:00 (on), 00:00 (off) – inactive
Mode schedule 2	All days set to 0:00 (on), 00:00 (off) – inactive
Service Phone	Not Set
Set Lock code	0000
Indoor Temp	25 °C
Outdoor Temp	14 °C
Boost Over-run	Off
Boost Overrun set time	15
Boost Delay	Off
Boost Delay set time	00
LS1/LS2/LS3	User Mode 3 (Boost)
SW1/SW2/SW3/SW4/SW5	User Mode 3 (Boost)
Vent-Wise 1/2/3/4	User Mode 3 (Boost) Load Pot (60%) Time Pot (20 m)
Proportional 1/2	Humidity – Boost, Normal (60%) CO ₂ – Boost (2000 ppm), Normal (1000 ppm) Temperature – Boost (27 °C, Normal 17 °C)

Table 2 Default settings

Control via WiFi

The Kinetic Advance WiFi controller is a plug & play accessory that fits next to the control module. It allows the user instant access to commissioning, configuration, direct monitoring and control of the MVHR unit, using a smart phone or tablet with the Vent-Axia Connect app, available from the iTunes Store or on Google Play.



Device Compatibility

iOS

Requires iOS 8.0 or later. Compatible with iPhone, iPad, and iPod touch.

Android

The Vent-Axia Connect app is compatible with most Android devices equipped with Bluetooth 4.0 and running Android 4.3 (Jelly Bean) or later.

Follow the instructions in the App to connect with the WiFi unit.

UNDERSTANDING THE PRODUCT LABEL

AP SSID

The name of the wireless network hosted by the WiFi controller when it is not configured to communicate online

DEVICE ID:

The name the WiFi module identifies as when selecting a device to configure from the Vent-Axia Connect App

SECURITY KEY


The pass-phrase required to enable secure communications with WiFi controller, required when adding the device to the Vent-Axia Connect app

Reset Button

A reset button is hidden behind this area of the label

Status LED

A tri-colour LED is placed behind this area of the label, indicating the status of the WiFi controller

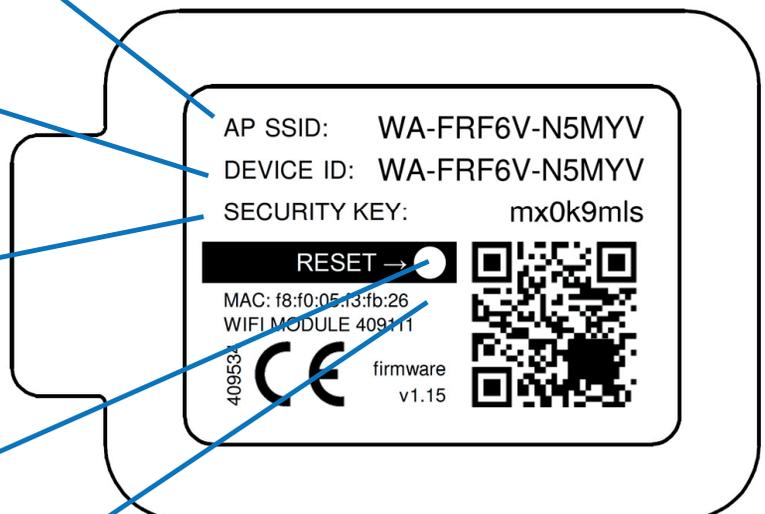

TROUBLESHOOTING

LED Status	Description	Actions
Solid blue	Initialising	None - normal operation
Slow blue flash	Connecting to a wireless network	
Solid green	Connected to a wireless network	
Fast green flash	Active communication with a connected network	
Solid yellow	WiFi controller is hosting a temporary network, without a device currently connected	Connect phone or tablet to the AP SSID (network name) indicated on the WiFi controller
Fast yellow flash	Active communication & weak signal	Move existing or introduce additional WiFi access point closer to Kinetic Advance
Slow red flash	WiFi error (e.g. cannot connect to network)	Configure WiFi controller in temporary access point mode (see previous page) and correct network settings
Fast red flash	Factory defaults reset confirm	See previous page regarding resetting the WiFi controller
Solid Light Blue	Bootloader mode <i>Should not appear in normal operation</i>	Isolate power to the Kinetic Advance, wait 30 seconds and re-power the MVHR. If this fault persists, contact Vent-Axia support for further assistance.
Solid Purple	Network controller update mode <i>Should not appear in normal operation</i>	
Solid Red	Communications fault between mainboard and WiFi controller	
Slow Flash - Red / Green	Internal fault on WiFi controller	

Resetting the WiFi Controller

A reset button is provided behind the label on the front of the WiFi Controller. It may be accessed by piercing the label with a small screwdriver in the position indicated on the label.

Short Press (< 5 seconds)

A press less than 5 seconds shall toggle the WiFi controller between 'Temporary AP' and 'WLAN' modes (if the unit is configured for WLAN access). Use this if the WiFi status indicates 'WiFi error' to correct network settings.

Long Press (≥ 5 seconds) - Reset to factory defaults

A press longer than 5 seconds shall put the WiFi controller into 'reset confirm' state, with a fast red LED flash. To confirm the intent to reset to factory defaults, press and hold the reset button for a further 5 seconds. The LED will change to solid red to confirm it is resetting and will reboot when the button is released.

SUPPORTED NETWORKS


The Kinetic Advance WiFi controller supports IEEE 802.11 b/g/n networks at 2.4GHz using the following network security:

- Open
- WEP
- WPA
- WPA2

Filter Maintenance


Heat recovery units require regular maintenance. The Sentinel Kinetic has been designed to facilitate access to enable maintenance to be carried out easily.

When the unit displays “Clean or replace filters”. This is a reminder to ensure that the filters are not so dirty that they are blocking the airflow or allowing dirt to pass through. The rate at which the filters become dirty will vary hugely depending on the environment and the activity within the property.

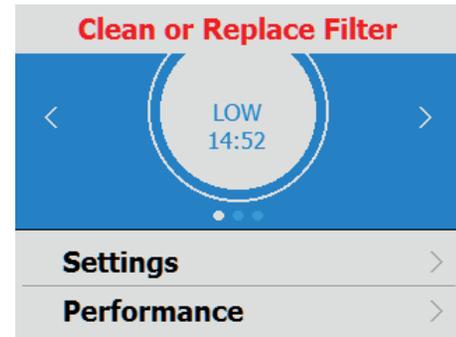

See page 47 for a list of spare filters.


1. Open the filter drawers by pressing the finger plate upwards and sliding the drawer out.

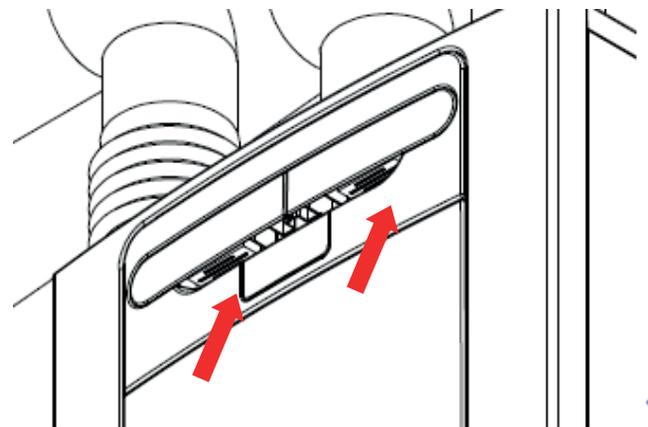


2. Lift each filter out and clean gently by tapping or carefully using a vacuum cleaner if necessary.

3. Replace the filters

4. Close the filter drawers, ensuring the latches have clicked back into the locked position.

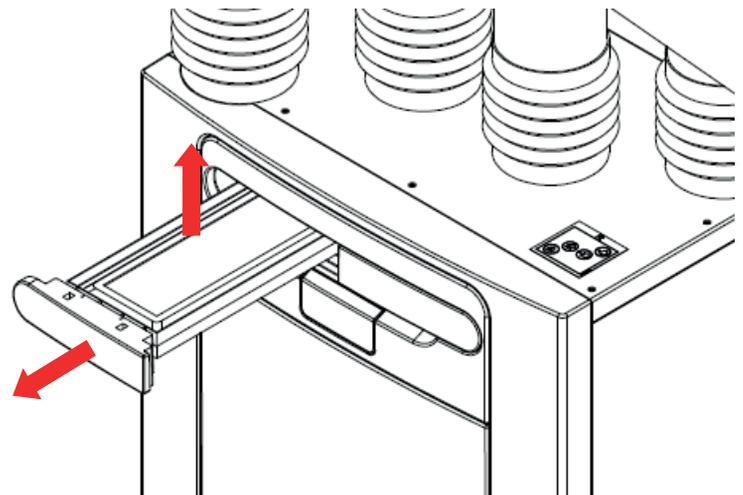

5. After maintenance of the filters, the filter timer can be reset by going to Settings/Performance, Clean/Replace filter.

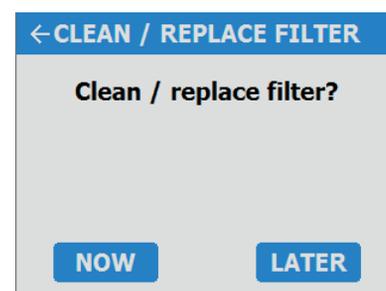



WARNING
THE FAN AND ANCILLARY CONTROL EQUIPMENT MUST BE ISOLATED FROM THE POWER SUPPLY DURING MAINTENANCE.

Fan Filters

Check fan filters as described on the previous page.

Heat Exchanger Cell

Step 1: Remove the outer cover by pressing the tabs either side of the control module and lifting the cover outwards from the bottom edge.

Step 2: Remove the inner door by undoing the 4 retaining screws.

Step 3: Slide the heat exchanger out from the unit.

Step 4: Wash the outer cover and heat exchanger in warm water using a mild detergent and dry thoroughly.

NOTE: Keep water away from all electrical components and wiring within the unit.

Motors




Inspect the motors for build-up of dust and dirt on the impeller blades, which could cause imbalance and increased noise levels. Vacuum or clean if necessary.

Condensate Drain

Check the condensate drain tube is secure and clear of debris. Clean if necessary. Ensure the trap is fully charged with water.

Fastenings

Check that all unit and wall-mount fastenings are sufficiently tight and have not become loose. Re-tighten if necessary.

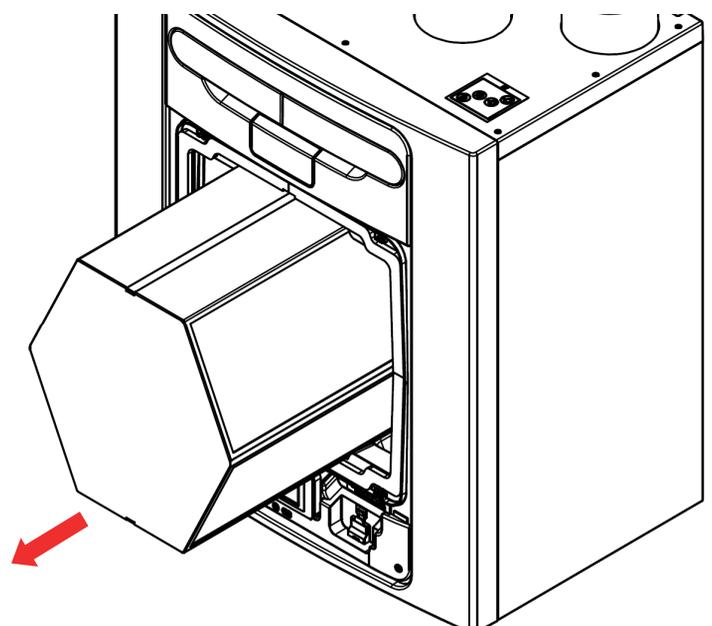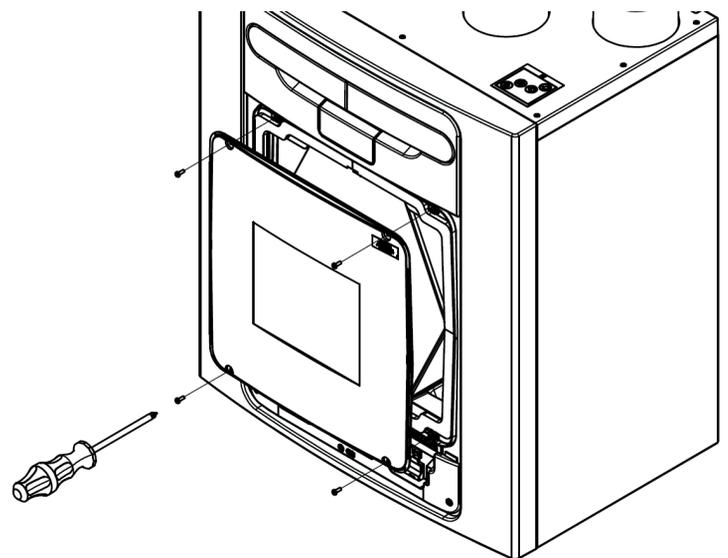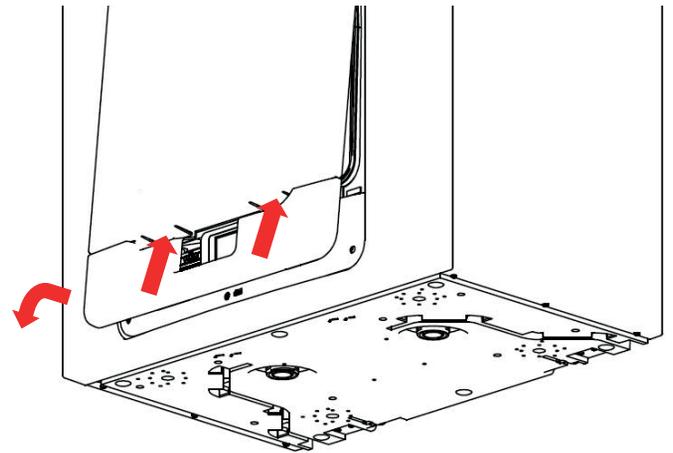

Spare parts

The following spare parts may be ordered from the manufacturer:

Under preparation


Diagnosing a Problem

In the event of a problem, always troubleshoot the unit according to:

- **Fault code** displayed on the Control Unit.
- **Fault LED** if connected.

If no indications are displayed, then troubleshoot problem according to the fault symptom as described in the following tables.

Service/Fault Code Screens alternating
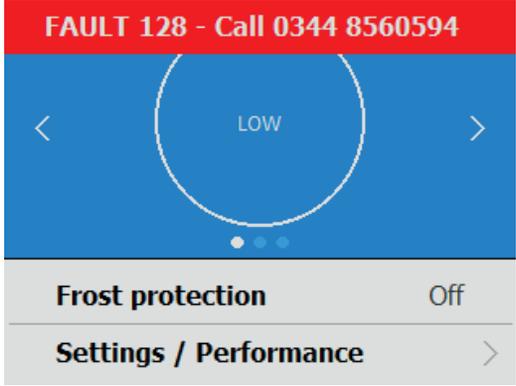
<p>The Fault Code notification is displayed, when a fault has occurred. Take note of the fault code when reporting a fault.</p>	
---	--

For assistance contact the service provider and quote the fault code number and the product serial number which can be found behind the front cover.

Note that the fault code is not displayed until the fault has been present for 3 minutes.

The following fault codes numbers may be displayed.

Code numbers are added together if more than one fault is detected.

For example: Code 03 indicates that both left and right fans are not running.

Code	Problem
01	Left Fan Fault
02	Right fan Fault
04	Left Thermistor Fault
08	Right Thermistor Fault
16	Left Centre Thermistor Fault
32	Right Centre Thermistor Fault
64	Left Centre Temp/Humidity Sensor Fault
128	Right Centre Temp/Humidity Sensor Fault

Table 3: Fault Codes

This page is intentionally blank and can be used for making notes regarding the product fiche.

This page is intentionally blank and can be used for making notes regarding the product fiche.

Product fiche

Name:	Vent-Axia
Model ID (Stock Ref.) :	Kinetic Advance S - 405215 Kinetic Advance SX - 405216
SEC Class	A+
SEC Value („Average“)	-43.85
SEC Value („Warm“)	-18.25
SEC Value („Cold“)	-89.33
Label Required? (Yes/No=Out of scope)	Yes
Declared as: RVU or NRVU/UVU or BVU	RVU/BVU
Speed Drive	Variable Speed
Type HRS (Recuperative, Regenerative, None)	Recuperative
Thermal Eff: [(%), NA(if none)]	93
Max. Flow Rate (m ³ /h)	378
Max. Power Input (W): (@Max.Flow Rate)	190
LWA: Sound Power Level (dB)	50.0
Ref. Flow Rate (m ³ /s)	0.07350
Ref. Pressure Diff. (Pa)	50
SPI [W/(m ³ /h)]	0.25
Control Factor & Control Typology: (CTRL/ Typology)	
Control Factor; CTRL	0.65
Control Typology	Local Demand Control
Declared Max Internal & External Leakage Rates (%)	<5% Internal, <5% External
Mixing Rate of Non-Ducted BVUs not intended to be equipped with one duct connection on either supply or extract air side;	N/A
Position and description of visual filter warning for RVUs intended for use with filters, including text pointing out the importance of regular filter changes for performance and energy efficiency of the unit	Refer to User Instructions
For UVUs (Instructions Install Regulated Supply/Extract Grilles Façade)	N/A
Sensitivity p. Variation@+20/-20 Pa: (for Non-Ducted VUs)	N/A
Air Tightness-ID/OD-(m ³ /h) (for Non-Ducted VUs)	N/A
Annual Electricity Consumption: AEC (kWh/a)	1.75
Annual Heating Saved: AHS (kWh/a)	
AHS: Average	47.56
AHS: Warm	21.50
AHS: Cold	93.09

WARRANTY CERTIFICATE

for central HRV Units in Sentinel Kinetic series

Unit model:

Unit commissioned and adjusted by company (name, address, tel.):

.....
.....
.....

The seller grants 24 month warranty period, starting from the date of commissioning. Within this period and under the conditions listed below, the buyer is entitled to have manufacturing or hidden defects removed for free. Warranty shall be claimed with the seller, preferably with a duly filled-in Warranty Certificate and a proof of purchase.

Warranty Conditions

1. The product was installed and commissioned by qualified staff.
2. When claiming warranty, the customer shall submit the necessary documents (duly filled-in and stamped Warranty Certificate, proof of purchase, or also other documents if needed).
3. Installation and commissioning was performed in compliance with the technical conditions set in the Installation and Commissioning Instructions, on the product itself, and conditions set by generally binding regulations or technical standards.
4. The technical conditions were respected during operation that are set by the Installation and Commissioning Instructions, generally binding regulations or technical standards and shown on the product itself.

The warranty especially does not cover cases when:

- installation product was performed in conflict with the Installation and Commissioning Instructions, generally binding regulations or technical standards
- the defect was caused by improper handling
- the product was used for other purpose than intended
- the defect was caused by tampering with the product or its improper modification
- the defect was caused by improper transport or by another mechanical damage
- the defect was caused by natural disaster or other unpredictable elements (flood, storm, fire)
- warranty certificate or other relevant documents tampering with or forging was revealed

The below signed installer declares that the product described in this Warranty Certificate was properly commissioned following the conditions stated by Regulus, spol. s r.o.

Seller:

Company name:

Commissioned by:

Service staff name:

Rubber stamp, date of purchase: Rubber stamp, commissioning date:

Owner's Declaration:

I confirm by my own signature that I was explained basic functions of the product, the manner of its control, and that I have received the Warranty Certificate together with the Installation and Commissioning Instructions.

Date, signature of the owner of the product

©2023 We reserve the right to errors, changes and improvements without prior notice.

v1.1-10/2023

REGULUS spol. s r.o.

E-mail: sales@regulus.eu

Web: www.regulus.eu

