



www.regulus.eu



PS 200 E and 300 E

Installation and Operation Manual
THERMAL STORES
PS 200 E and PS 300 E

EN

PS 200 E and PS 300 E

CONTENTS

1 Description	2
1.1 Models	2
1.2 Tank Protection	2
1.3 Thermal Insulation	2
1.4 Packaging.....	2
2 General Information	2
3 Dimensions and Other Technical Data	3
4 Operation.....	5
5 Typical Layout Example with Thermal Store	5
6 Installation and Commissioning	6
6.1 Connection to heat sources	6
6.2 El. heating element installation	6
6.3 Commissioning	6
7 Installing Insulation on the Tank	6
8 Maintenance.....	8
9 Disposal	8
10 Warranty	8

1 - Description

PS E Thermal Stores are intended for storing and subsequent distribution of thermal energy from solid-fuel fired boilers, heat pumps, and other heat sources. 230V or 3x230V/400V heating elements can be installed directly into the 6/4" connections. Tanks are fitted with four side connections, one top connection and two connections for sensor sheaths. A 100mm thick insulation for these tanks can be purchased as a separate item.

1.1 - Models

Two models of 180 and 280 capacity.

1.2 - Tank protection

The inner surface has no finish, no anticorrosion protection, the outer surface is lacquered in gray.

1.3 - Thermal Insulation

Thermal insulation is available as a separate item. For easier handling, the insulation shall not be fitted on the tank until it reaches its definite place of installation. The insulation is made of fleece, 100 mm thick, with a hard polystyrene surface. It is closed by a quick lock.

1.4 - Packaging

Thermal stores are delivered standing, each screwed to its separate pallet, packed in bubble wrap.

2 - General Information

This Manual is an integral and important part of the product and must be handed over to the User. Read carefully the instructions in this Manual as they contain important information concerning safety, installation, operation and maintenance. Keep this Manual for later reference. The appliance shall be installed by a qualified person according to valid rules and Manufacturer's Instructions, otherwise the Warranty is null and void.

This appliance is designed to accumulate thermal energy of heating water and distribute it subsequently. It must be connected to a heating system and heat sources.

Using the thermal store for other purposes than above described is forbidden and the manufacturer accepts no responsibility for damage caused by improper or wrong use. The thermal store must not be used as a hot water storage tank!

3 - Dimensions and Other Technical Data

PS 200 E

Thermal store code: 21359

Insulation code: 21427

Technical data	
Total thermal store volume	180 l
Max. working temperature in thermal store	95 °C
Min. working temperature in thermal store	7 °C
Max. working pressure in thermal store	4 bar
Thermal store diameter	450 mm
Thermal store diameter with insulation	650 mm
Thermal store overall height	1351 mm
Tipping height without insulation	1370 mm
Thermal store perimeter insulation thickness	100 mm
Thermal store bottom insulation thickness	50 mm
Thermal store top insulation thickness	100 mm
Empty weight without insulation	35 kg

Materials	
Thermal store material	S235JR
Thermal store perimeter insulation	fleece + PP caps
Thermal store outer surface insulation	hard polystyrene
Top and bottom thermal store insulation	fleece

Insulation thermal conductivity $\lambda \leq 0.037 \text{ W/mK}$, thermal resistance (short/long term) 150/100 °C, fire class E.

Dimensions

The side view of the tank shows a total height of 1351 mm. It features three universal inlet/outlet ports (U1, U2, U3) on the left side and two heating system ports (H1, H2) on the right side. Two temperature sensors (C1, C2) and a safety valve (P) are also indicated. The bottom view shows a circular cross-section with an outer diameter of 650 mm, an inner diameter of 450 mm, and a bottom insulation thickness of 50 mm. A 45-degree angle is indicated for the bottom flange.

The top view shows a circular cross-section with an outer diameter of 650 mm, an inner diameter of 450 mm, and a bottom insulation thickness of 50 mm. A 45-degree angle is indicated for the bottom flange.

CONNECTIONS

pos.	description	connection	height [mm]
Heating system			
H1	Flow to heating system	G 6/4" F	1351
H2	Return from heating system	G 6/4" F	193
Control and safety			
C1	Temperature sensor	G 1/2" F	1093
C2	Temperature sensor	G 1/2" F	843
P	Safety valve	G 1/2" F	413
Universal inlet/outlet			
U1	Universal inlet/outlet	G 6/4" F	1093
U2	Universal inlet/outlet	G 6/4" F	793
U3	Universal inlet/outlet	G 6/4" F	493

PS 300 E

Thermal store code: 21428

Insulation code: 21429

Technical data	
Total thermal store volume	280 l
Max. working temperature in thermal store	95 °C
Min. working temperature in thermal store	7 °C
Max. working pressure in thermal store	4 bar
Thermal store diameter	550 mm
Thermal store diameter with insulation	750 mm
Thermal store overall height	1405 mm
Tipping height without insulation	1430 mm
Thermal store perimeter insulation thickness	100 mm
Thermal store bottom insulation thickness	50 mm
Thermal store top insulation thickness	100 mm
Empty weight without insulation	45 kg

Materials	
Thermal store material	S235JR
Thermal store perimeter insulation	fleece + PP caps
Thermal store outer surface insulation	hard polystyrene
Top and bottom thermal store insulation	fleece

Insulation thermal conductivity $\lambda \leq 0.037$ W/mK, thermal resistance (short/long term) 150/100 °C, fire class E.

Dimensions

The side view of the thermal store is a vertical cylinder with a total height of 1405 mm. It features three universal inlet/outlet ports (U1, U2, U3) on the left side and two temperature sensor ports (C1, C2) on the right side. The top has a flow to heating system port (H1) and a return from heating system port (H2). The bottom has a safety valve port (P). The base diameter is Ø550 mm, and the inner diameter is Ø450 mm.

The top view of the thermal store is a circular cross-section with an outer diameter of Ø550 mm and an inner diameter of Ø450 mm. It shows a 45° angle for the bottom flange and a 100 mm dimension for the flange thickness.

CONNECTIONS

pos.	description	connection	height [mm]
Heating system			
H1	Flow to heating system	G 6/4" F	1405
H2	Return from heating system	G 6/4" F	220
Control and safety			
C1	Temperature sensor	G 1/2" F	1120
C2	Temperature sensor	G 1/2" F	870
P	Safety valve	G 1/2" F	440
Universal inlet/outlet			
U1	Universal inlet/outlet	G 6/4" F	1120
U2	Universal inlet/outlet	G 6/4" F	795
U3	Universal inlet/outlet	G 6/4" F	520

4 - Operation


In a thermal store, heating water is stored, heated by various types of heat sources (boilers, a heat pump etc.) or if needed, it is heated by electric heating elements.

The thermal store is connected using a G 6/4" connection fitting. The individual tank outlets are fitted according to the circuits to be connected.

5 - Typical Layout Example with Thermal Store

Example

Biomass boiler (fireplace insert/stove)

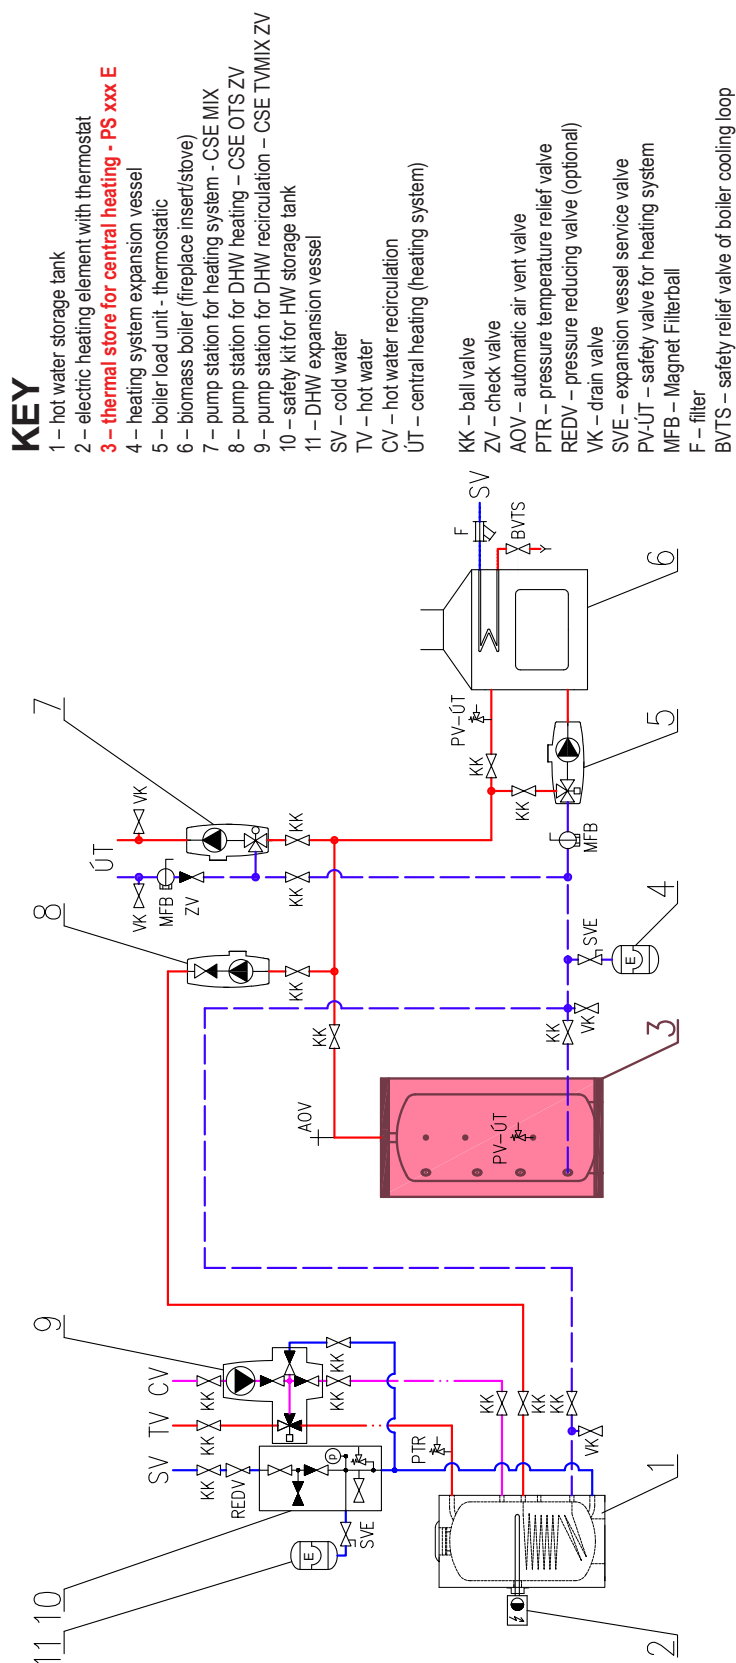

6 - Installation and Commissioning

Installation shall meet valid rules and may be done by qualified staff only.

Defects caused by improper installation, use or handling are not covered by warranty.

After the tank is installed and connected to an existing heating system, it is recommended to clean the entire heating system using a suitable cleaning agent, e.g. BP 400.

Anti-corrosion protective liquid should be also used, e.g. BP 100 Plus.

6.1 - Connection to heat sources

Place the tank on the floor, as close to your heat source as possible. Fit the insulation, cf. Installing Insulation on the Tank. Connect the heating system according to the recommended connection layout - see Chap. 5. Install a safety valve in the „P“ connection (see Chap. 3). There must not be any shut-off valve between the tank and the safety valve. Install a drain valve at the lowest point of the system. Install an air vent valve at the highest point of the system. Insulate all the connecting piping.

6.2 - El. heating element installation

These thermal stores can be equipped with electric heating elements of output up to 12 kW depending on the volume of the thermal store - see the table of max. output of heating elements in hot water tanks and thermal stores. They can be connected either directly (elements with integrated thermostat) or via the controller of the entire heating system.

All electric heating elements shall be protected by a safety thermostat.

The electric heating element shall be wired by a professionally qualified person only.

6.3 - Commissioning

Ground the tank before commissioning.

This tank is not designed for DHW heating.

The tank shall be filled up together with the heating system, respecting valid standards and rules. In order to minimize corrosion, special additives for heating systems should be used. The quality of heating water depends on the quality of filling water at commissioning, on the top-up water quality and on the frequency of topping up. This has a strong influence on the lifetime of heating systems. Poor quality of heating water may cause problems like corrosion or incrustation, esp. on heat transfer surfaces.

Fill the heating circuits with the appropriate fluids and air-bleed the entire system. Check all connections for leaks and verify the system pressure. Set the heating controller in compliance with the documentation and manufacturer's recommendations. Check regularly proper function of all control and adjustment elements.

7 - Installing Insulation on the Tank

Product description

Fleece insulation with a hard polystyrene surface, closed by a quick locks.

Warning

Insulation installation shall be done in two or three persons, depending on its size. The PU leather surface coated fleece insulation **must not be installed at temperatures below 20 °C**. If this cannot be avoided, the insulation shall be pre-warmed in another room to at least 20 °C. It is impossible to install insulation of lower temperature, there is a risk of damage.

Do not use any tools for installation.

Keep away from open fire.


Installing insulation

1. Put the bottom insulation under the tank and place the tank following installation instructions.
2. Wrap the insulation around the tank carefully. Check that the insulation adheres to its body perfectly. This can be reached by rubbing and patting the insulation by hand from its centre evenly in both directions until the insulation adheres to the tank's surface completely and no bubbles are left.
3. Use the holes for connections as a rest during the insulation installation.
4. At least one person presses the insulation to the tank, pulling both ends together. The other person closes the quick lock from the side.
5. Put on the upper insulation and cover.
6. Push on the covering plastic rosettes depending on the size of connections, or put on the flange plug(s) with insulation.
7. Finish the tank installation in compliance with the respective instructions and valid standards and rules.

Warranty on insulation

The insulation is covered by a 24-month warranty. This period starts the next day after the insulation is sold.

- Warranty shall become null and void if:
 - the procedure described in the Installation Manual was not respected,
 - the product was used for other purposes than intended.
- Warranty does not cover:
 - usual wear and tear,
 - damage caused by fire, water, electricity or another natural disaster,
 - defects caused by failure to use the product in compliance with its intended purpose, by improper use and insufficient maintenance,
 - defects caused by mechanical damage to the product,
 - defects caused by tampering or incompetent repair.

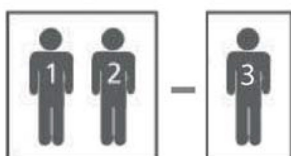

8 - Maintenance

If the tank is fitted with a heating element, disconnect it from the mains first. Clean the exterior of the tank with a soft cloth and a mild detergent. Never use abrasive cleaners or solvents.
Check all tank connections for leaks.

9 - Disposal

Packaging shall be disposed of in compliance with the valid rules. When the product reaches the end of its life, it shall not be disposed of as household waste. It shall be dropped off at a Local Waste Recycling Centre. Insulation shall be recycled as plastic and the steel vessel as scrap iron.

10 - Warranty

This product is covered by warranty according to the conditions described in this Manual and according to the Warranty Certificate. A Warranty Certificate is an integral part of the supply.