



www.regulus.eu



PS E

Installation and Operation Manual
THERMAL STORE
PS 600 E, PS 800 E and PS 1000 E

EN

PS E

CONTENTS

1 Description	2
1.1 Models	2
1.2 Tank Protection	2
1.3 Thermal Insulation	2
1.4 Packaging.....	2
2 General Information	2
3 Dimensions and Other Technical Data	3
4 Operation.....	6
5 Typical Layout Example with Thermal Store	6
6 Installation and Commissioning	7
6.1 Connection to heat sources	7
6.2 El. heating element installation	7
6.3 Commissioning	7
7 Installing Insulation on the Tank	7
8 Maintenance.....	9
9 Disposal	9
10 Warranty	9

1 - Description

PS E Thermal Stores are intended for storing and subsequent distribution of thermal energy from solid-fuel fired boilers, heat pumps, and other heat sources. 230V or 3x230V/400V heating elements can be installed directly into the 6/4" connections. Tanks are fitted with four side connections, one top connection and two connections for sensor sheaths. A 100mm thick insulation for these tanks can be purchased as a separate item.

1.1 - Models

Three Models of 560, 780 and 960 l capacity.

1.2 - Tank protection

The inner surface has no finish, no anticorrosion protection, the outer surface is lacquered in gray.

1.3 - Thermal Insulation

Thermal insulation is available as a separate item. For easier handling, the insulation shall not be fitted on the tank until it reaches its definite place of installation. The insulation is made of fleece, 100 mm thick, with a hard polystyrene surface. It is closed by a quick lock.

1.4 - Packaging

Thermal stores are delivered standing, each screwed to its separate pallet, packed in bubble wrap.

2 - General Information

This Manual is an integral and important part of the product and must be handed over to the User. Read carefully the instructions in this Manual as they contain important information concerning safety, installation, operation and maintenance. Keep this Manual for later reference. The appliance shall be installed by a qualified person according to valid rules and Manufacturer's Instructions, otherwise the Warranty is null and void.

This appliance is designed to accumulate thermal energy of heating water and distribute it subsequently. It must be connected to a heating system and heat sources.

Using the thermal store for other purposes than above described is forbidden and the manufacturer accepts no responsibility for damage caused by improper or wrong use. The thermal store must not be used as a hot water storage tank!

3 - Dimensions and Other Technical Data

PS 600 E

Thermal store code: 19488

Insulation code: 19495

Energy Efficiency Data (as per EC Regulation No. 812/2013)	
	valid for a thermal store with insulation
Energy efficiency class	N/A
Static loss	98 W
Storage volume	560 l

Technical data	
Total thermal store volume	560 l
Max. working temperature in thermal store	95 °C
Min. working temperature in thermal store	7 °C
Max. working pressure in thermal store	4 bar
Thermal store diameter	650 mm
Thermal store diameter with insulation	850 mm
Thermal store overall height	1935 mm
Tipping height without insulation	1960 mm
Thermal store perimeter insulation thickness	100 mm
Thermal store bottom insulation thickness	50 mm
Thermal store top insulation thickness	100 mm
Empty weight without insulation	69 kg

Materials	
Thermal store material	S235JR
Thermal store perimeter insulation	fleece
Thermal store outer surface insulation	hard polystyrene
Top and bottom thermal store insulation	fleece

Insulation thermal conductivity $\lambda \leq 0.037$ W/mK, thermal resistance (short/long term) 150/100 °C, fire class E.

Accessories	
Electric heating element	ETT-A, C, D2, M, R, U, F2, P, S
Heating element max. length	700 mm

Dimensions	
	CONNECTIONS
	pos. description connection height [mm]
	Heating system
	H1 Flow to heating system G 6/4" F 1935
	H2 Return from heating system G 6/4" F 235
	Control and safety
	C1 Temperature sensor G 1/2" F 1510
	P Safety valve G 1/2" F 515
	Universal inlet/outlet
	U1 Universal inlet/outlet G 6/4" F 1635
	U2 Universal inlet/outlet G 6/4" F 935
	U3 Universal inlet/outlet G 6/4" F 385

PS 800 E

Thermal store code: 21400

Insulation code: 21451

Energy Efficiency Data (as per EC Regulation No. 812/2013)	
	valid for a thermal store with insulation
Energy efficiency class	N/A
Static loss	113 W
Storage volume	780 l
Technical data	
Total thermal store volume	780 l
Max. working temperature in thermal store	95 °C
Min. working temperature in thermal store	7 °C
Max. working pressure in thermal store	4 bar
Thermal store diameter	790 mm
Thermal store diameter with insulation	990 mm
Thermal store overall height	1774 mm
Tipping height without insulation	1730 mm
Thermal store perimeter insulation thickness	100 mm
Thermal store bottom insulation thickness	50 mm
Thermal store top insulation thickness	100 mm
Empty weight without insulation	101 kg
Materials	
Thermal store material	S235JR
Thermal store perimeter insulation	fleece
Thermal store outer surface insulation	hard polystyrene
Top and bottom thermal store insulation	fleece

Insulation thermal conductivity $\lambda \leq 0.037$ W/mK, thermal resistance (short/long term) 150/100 °C, fire class E.

Accessories	
Electric heating element	ETT-A, C, D2, M, R, U, F2, P, S
Heating element max. length	815 mm

Dimensions

Technical drawing of a thermal store. The front view shows a vertical cylindrical tank with a total height of 1774 mm and a tipping height of 1694 mm. The base has three diameters: Ø 600 mm (inner), Ø 790 mm (middle), and Ø 990 mm (outer). The top view shows a circular cross-section with a central hole and a diameter of Ø 990 mm. Connection points are labeled: H1 (top), U1, C1, U2, P, U3, and H2 (bottom).


CONNECTIONS

pos.	description	connection	height [mm]
Heating system			
H1	Flow to heating system	G 6/4" F	1694
H2	Return from heating system	G 6/4" F	255
Control and safety			
C1	Temperature sensor	G 1/2" F	1340
P	Safety valve	G 1/2" F	520
Universal inlet/outlet			
U1	Universal inlet/outlet	G 6/4" F	1455
U2	Universal inlet/outlet	G 6/4" F	875
U3	Universal inlet/outlet	G 6/4" F	390

PS 1000 E

Thermal store code: 19493

Insulation code: 19500

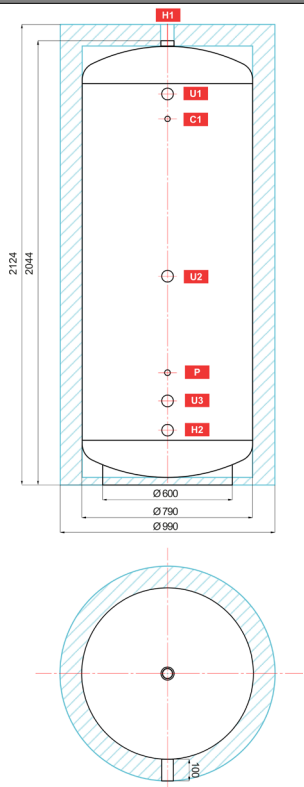Energy Efficiency Data (as per EC Regulation No. 812/2013)			
	valid for a thermal store with insulation		
Energy efficiency class	N/A		
Static loss	130 W		
Storage volume	960 l		
Technical data			
Total thermal store volume	960 l		
Max. working temperature in thermal store	95 °C		
Min. working temperature in thermal store	7 °C		
Max. working pressure in thermal store	4 bar		
Thermal store diameter	790 mm		
Thermal store diameter with insulation	990 mm		
Thermal store overall height	2124 mm		
Tipping height without insulation	2075 mm		
Thermal store perimeter insulation thickness	100 mm		
Thermal store bottom insulation thickness	50 mm		
Thermal store top insulation thickness	100 mm		
Empty weight without insulation	112 kg		
Materials			
Thermal store material	S235JR		
Thermal store perimeter insulation	fleece		
Thermal store outer surface insulation	hard polystyrene		
Top and bottom thermal store insulation	fleece		
Insulation thermal conductivity $\lambda \leq 0.037$ W/mK, thermal resistance (short/long term) 150/100 °C, fire class E.			
Accessories			
Electric heating element	ETT-A, C, D2, M, R, U, F2, P, S		
Heating element max. length	815 mm		
Dimensions			
			
CONNECTIONS			
pos.	description	connection	height [mm]
Heating system			
H1	Flow to heating system	G 6/4" F	2044
H2	Return from heating system	G 6/4" F	255
Control and safety			
C1	Temperature sensor	G 1/2" F	1690
P	Safety valve	G 1/2" F	520
Universal inlet/outlet			
U1	Universal inlet/outlet	G 6/4" F	1805
U2	Universal inlet/outlet	G 6/4" F	965
U3	Universal inlet/outlet	G 6/4" F	390

4 - Operation


In a thermal store, heating water is stored, heated by various types of heat sources (boilers, a heat pump etc.) or if needed, it is heated by electric heating elements.

The thermal store is connected using a G 6/4" connection fitting. The individual tank outlets are fitted according to the circuits to be connected.

5 - Typical Layout Example with Thermal Store

Example

Biomass boiler (fireplace insert/stove)

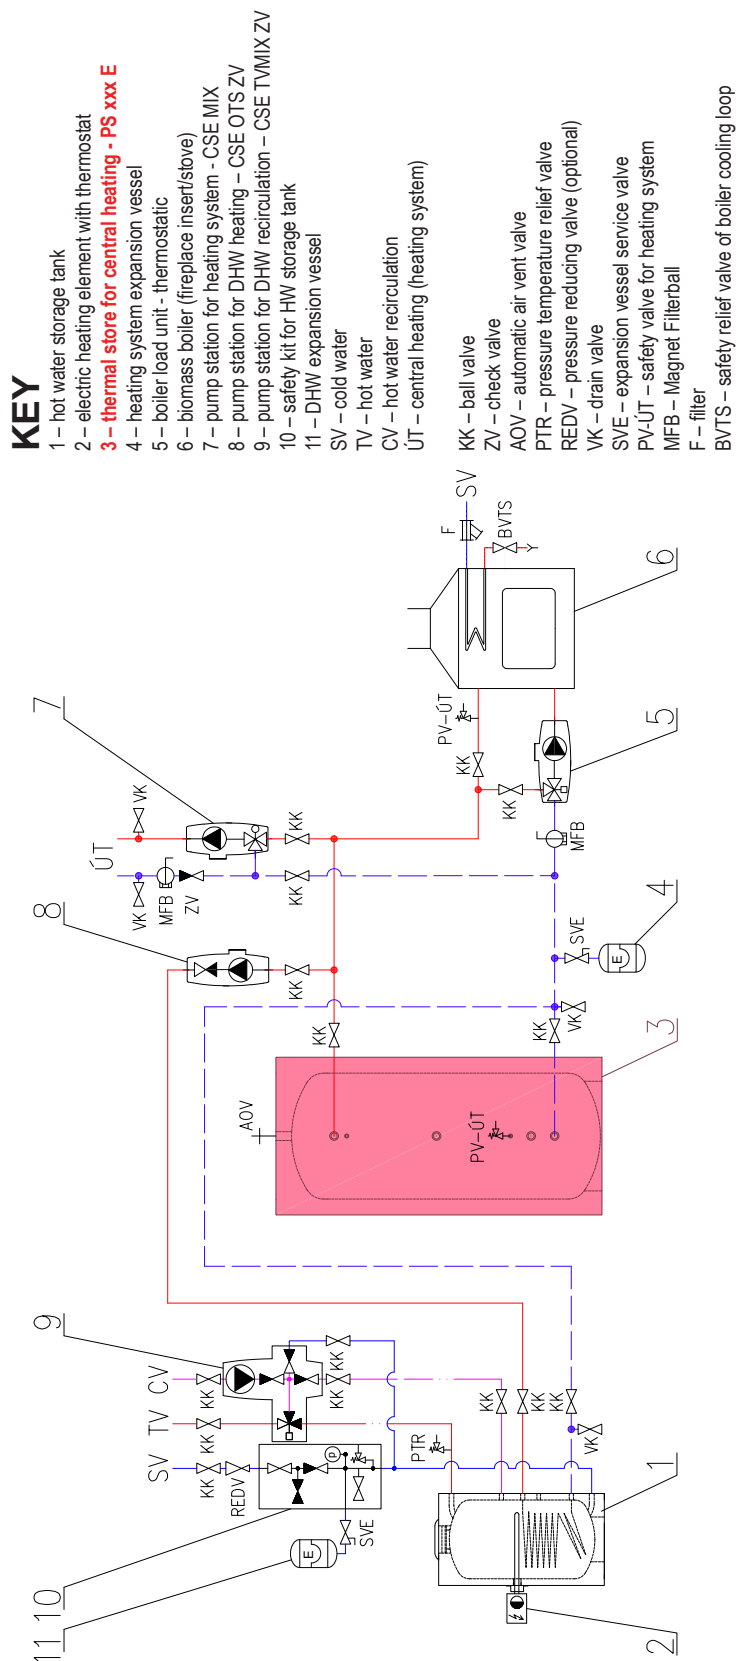

6 - Installation and Commissioning

Installation shall meet valid rules and may be done by qualified staff only.

Defects caused by improper installation, use or handling are not covered by warranty.

After the tank is installed and connected to an existing heating system, it is recommended to clean the entire heating system using a suitable cleaning agent, e.g. BP 400 PLUS.

Anti-corrosion protective liquid should be also used, e.g. BP 100 PLUS.

6.1 - Connection to heat sources

Place the tank on the floor, as close to your heat source as possible. Fit the insulation, cf. Installing Insulation on the Tank. Connect the heating system according to the recommended connection layout - see Chap. 5. Install a safety valve in the „P“ connection (see Chap. 3). There must not be any shut-off valve between the tank and the safety valve. Install a drain valve at the lowest point of the system. Install an air vent valve at the highest point of the system. Insulate all the connecting piping.

6.2 - El. heating element installation

These thermal stores can be equipped with electric heating elements of output up to 12 kW depending on the volume of the thermal store - see the table of max. output of heating elements in hot water tanks and thermal stores. They can be connected either directly (elements with integrated thermostat) or via the controller of the entire heating system.

All electric heating elements shall be protected by a safety thermostat.

The electric heating element shall be wired by a professionally qualified person only.

6.3 - Commissioning

Ground the tank before commissioning.

This tank is not designed for DHW heating.

The tank shall be filled up together with the heating system, respecting valid standards and rules. In order to minimize corrosion, special additives for heating systems should be used. The quality of heating water depends on the quality of filling water at commissioning, on the top-up water quality and on the frequency of topping up. This has a strong influence on the lifetime of heating systems. Poor quality of heating water may cause problems like corrosion or incrustation, esp. on heat transfer surfaces.

Fill the heating circuits with the appropriate fluids and air-bleed the entire system. Check all connections for leaks and verify the system pressure. Set the heating controller in compliance with the documentation and manufacturer's recommendations. Check regularly proper function of all control and adjustment elements.

7 - Installing Insulation on the Tank

Product description

Fleece insulation with a hard polystyrene surface, closed by a quick locks.

Warning

Insulation installation shall be done in two or three persons, depending on its size. The PU leather surface coated fleece insulation **must not be installed at temperatures below 20 °C**. If this cannot be avoided, the insulation shall be pre-warmed in another room to at least 20 °C. It is impossible to install insulation of lower temperature, there is a risk of damage.

Do not use any tools for installation.

Keep away from open fire.


Installing insulation

1. Put the bottom insulation under the tank and place the tank following installation instructions.
2. Wrap the insulation around the tank carefully. Check that the insulation adheres to its body perfectly. This can be reached by rubbing and patting the insulation by hand from its centre evenly in both directions until the insulation adheres to the tank's surface completely and no bubbles are left.
3. Use the holes for connections as a rest during the insulation installation.
4. At least one person presses the insulation to the tank, pulling both ends together. The other person closes the quick lock from the side.
5. Put on the upper insulation and cover.
6. Push on the covering plastic rosettes depending on the size of connections.
7. Finish the tank installation in compliance with the respective instructions and valid standards and rules.

Warranty on insulation

The insulation is covered by a 24-month warranty. This period starts the next day after the insulation is sold.

- Warranty shall become null and void if:
 - the procedure described in the Installation Manual was not respected,
 - the product was used for other purposes than intended.
- Warranty does not cover:
 - usual wear and tear,
 - damage caused by fire, water, electricity or another natural disaster,
 - defects caused by failure to use the product in compliance with its intended purpose, by improper use and insufficient maintenance,
 - defects caused by mechanical damage to the product,
 - defects caused by tampering or incompetent repair.

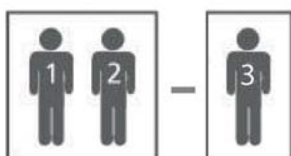

8 - Maintenance

If the tank is fitted with a heating element, disconnect it from the mains first. Clean the exterior of the tank with a soft cloth and a mild detergent. Never use abrasive cleaners or solvents.
Check all tank connections for leaks.

9 - Disposal

Packaging shall be disposed of in compliance with the valid rules. When the product reaches the end of its life, it shall not be disposed of as household waste. It shall be dropped off at a Local Waste Recycling Centre. Insulation shall be recycled as plastic and the steel vessel as scrap iron.

10 - Warranty

This product is covered by warranty according to the conditions described in this Manual and according to the Warranty Certificate. A Warranty Certificate is an integral part of the supply.

REGULUS spol. s r.o.

E-mail: sales@regulus.eu

Web: www.regulus.eu

