

www.regulus.eu



Installation and Operation Manual **Grundfos UPM3 FLEX AS 25-75 130 mm Pump**

EN

UPM3 FLEX AS 25-75 130 mm Pump

Design

Wet-running circulation pump with G 6/4" M connection.

Electrical Data	
Power supply	230 V, 50 Hz
Power consumption (min./max.)	2/60 W
Current (min./max.)	0.04/0.58 A
IP rating	IP44
Max. speed	5991 rpm
Weighted average power	≤ 28 W
Energy Efficiency Index	≤ 0.20 by EN 16 297/3
Motor protection	not needed

	- 0.20 by 2.11 10 20170					
Motor protection	not needed					
Minimum pressure at pump suction port						
NA:	0.5 mH ₂ O at 75 °C					
Minimum pressure at suction port to avoid cavitation	5.0 mH ₂ O at 95 °C					
to avoid cavitation	10.8 mH ₂ O at 110 °C					




Pump control

The circulation pump can be controlled by an external PWM signal (profile for use in heating systems) or without a PWM signal by selecting a pump performance curve.

A maximum curve of a pump working range can be defined:

- with PWM signal the pump speed changes with the signal value up to the maximum of the selected curve
- without PWM signal the pump runs at the max. speed according to the selected curve

Performance Curves

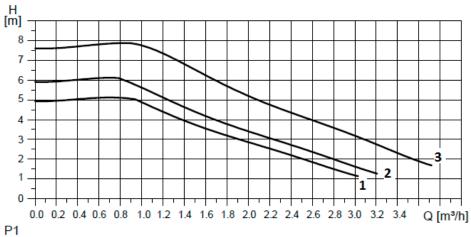

Curve	Max. H	Max. P ₁
	(upper	(lower
	graph)	graph)
1	5 m	33 W
2	6 m	39 W
3	7.5 m	60 W

P1																				
[W] -	Π																			
60 –						_	_										_		_	3
50 -				_																
40 –	-				_				_	_		_	_		_		2			
30 -	/				_					_		_	_			_1				
20 -	\leq																			
10 -																				
-	-																			
0 –	+-	 	 	 	 		 	 	<u> </u>	 	 		-	<u> </u>				-		\neg
0	0.0	.2 0	.4 0.	6 0	.8 1	.0 1	.2 1	.4 1	.6 1.	.8 2	.0 2	.2 2	.4 2	.6 2	.8 3.	0 3	.2 3	.4	Q [m³/h]

Performance Display



The LED marking is further omitted for better clarity.

DISPLAY	PERFORMANCE CURVE	STATUS	Max. H (upper graph)
	1	LOW PERFORMANCE	5 m
	2	MEDIUM PERFORMANCE	6 m
	3	HIGH PERFORMANCE	7.5 m

WARNING: LEDs may be turned by 90° or 180°, depending on the specific pump type.

GREEN LED FLASHING FREQUENCY	PWM SIGNAL RECEPTION
1 flash per second	NO
12 flashes per second	YES

When switched on, the pump runs at factory settings or the last setting. The display shows the current pump performance.


Setting selection for UPM3


To select your desired setting, press the button repeatedly until you find the setting you need, see the pic above. If you pass the desired setting, you have to go one more round until it appears again.

Error display


DISPLAY	CONTROL MODE				
	Seized pump				
	Too low power supply voltage				
	Electric fault				

Prohibited pump positions

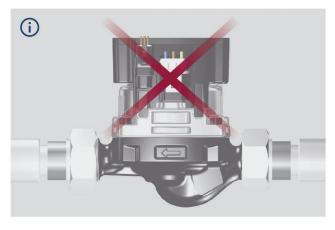

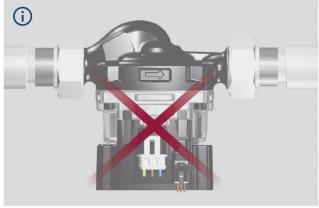

Permissible pump (actuator) positions

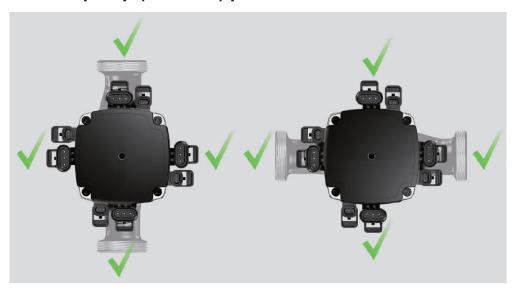

Pump wiring

